

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Maxx Action](#) /
- › [Maxx Action 19-inch 2-N-1 Motorized Dig Rig: Excavator and Dump Truck Toy Instruction Manual](#)

## Maxx Action 320422

# Maxx Action 19-inch 2-N-1 Motorized Dig Rig Instruction Manual

Model: 320422 | Brand: Maxx Action

## INTRODUCTION

Thank you for choosing the Maxx Action 19-inch 2-N-1 Motorized Dig Rig. This interactive toy combines the functions of an excavator and a dump truck, providing an engaging play experience for young construction enthusiasts. Featuring realistic lights, sounds, and easy-to-use controls, this vehicle is designed to inspire imaginative play.



*Image: The Maxx Action 19-inch 2-N-1 Motorized Dig Rig, showcasing its combined excavator and dump truck design in bright yellow.*

## SAFETY INFORMATION

**WARNING: CHOKING HAZARD - Small Parts. Not for children under 3 years.**

- Always supervise children during play.
- Keep small parts away from young children.
- Ensure batteries are installed correctly and securely.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

## PACKAGE CONTENTS

---

- 1 x Maxx Action 19-inch 2-N-1 Motorized Dig Rig
- 3 x AA Batteries (pre-installed or included separately)

## SETUP: BATTERY INSTALLATION

---

1. Locate the battery compartment on the underside of the vehicle.
2. Using a Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 3 AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

## OPERATING INSTRUCTIONS

---

The Maxx Action Dig Rig features intuitive controls for a realistic construction experience.

### 1. Driving Controls

- **Forward (F) Button:** Press the 'F' button to make the vehicle move forward.
- **Reverse (R) Button:** Press the 'R' button to make the vehicle move backward.

**PUSH THE BUTTONS TO GO  
FORWARDS AND BACKWARDS!**

**MOTORIZED  
DRIVE!**



*Image: A child's hand pressing the forward button on the side of the Dig Rig, demonstrating its motorized drive capability.*

## 2. Excavator Arm Operation

- Use the red joystick levers on the side of the vehicle to control the excavator arm.
- Move the levers to raise, lower, and scoop with the front-end loader.
- The excavator arm is designed for realistic digging and lifting action, capable of picking up various small toys or materials.



*Image: A close-up view of the red joystick levers on the side of the Dig Rig, which control the movement of the excavator arm and the dump bed.*

### 3. Dump Bed Operation

- Utilize the red joystick levers to raise and lower the dump truck bed.
- The large dump truck trough can hold over 8 pounds of materials, allowing for substantial hauling and dumping.



*Image: A child's hand manipulating the levers to tilt the dump bed, releasing small rocks, demonstrating the dumping power.*

### 4. Lights and Sounds

- The vehicle features electronic sounds and LED lights that activate during operation.
- Experience 5 different realistic construction sounds, including engine rumbling and cool reverse sounds.
- 6 bright LED lights enhance the play experience, simulating a real construction site.



Image: A close-up of the Dig Rig's cab, highlighting the flashing red LED lights that accompany the vehicle's sounds.

## MAINTENANCE

- **Cleaning:** Wipe the toy with a damp cloth to remove dirt and dust. Do not immerse in water.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.

## TROUBLESHOOTING

Problem	Solution
Toy does not move or make sounds.	<ul style="list-style-type: none"><li>◦ Check if the power switch is in the 'ON' position.</li><li>◦ Ensure batteries are installed correctly with proper polarity.</li><li>◦ Replace with fresh AA batteries.</li></ul>
Excavator arm or dump bed not operating.	<ul style="list-style-type: none"><li>◦ Verify that the toy is powered on.</li><li>◦ Ensure the joystick levers are fully engaged.</li><li>◦ Check for any obstructions in the moving parts.</li></ul>

## SPECIFICATIONS

- **Product Dimensions:** 7 x 18 x 9 inches
- **Item Weight:** 2 pounds
- **Model Number:** 320422
- **Manufacturer Recommended Age:** 36 months - 12 years
- **Batteries:** 3 AA batteries required (included)

**OVER 18 INCHES LONG!**



*Image: The Maxx Action Dig Rig with visual indicators of its approximate dimensions, showing it is over 18 inches long.*

## **WARRANTY AND SUPPORT**

For warranty information or customer support, please refer to the product packaging or contact the manufacturer directly. Keep your purchase receipt for proof of purchase.