

[Manuals.plus](#) /

› [UPBRIGHT](#) /

› UpBright 19V AC/DC Adapter User Manual

## UPBRIGHT Bomaker Odine III Soundbar Power

# User Manual

UpBright 19V AC/DC Adapter

## 1. INTRODUCTION

This user manual provides essential information for the safe and effective use of your UpBright 19V AC/DC Adapter. Please read this manual thoroughly before using the product and retain it for future reference.

## 2. PRODUCT OVERVIEW

The UpBright 19V AC/DC Adapter is a global power supply designed to provide stable and reliable power to compatible devices, such as the Bomaker Odine III 37-Inch 2.0 Channel Wired & Wireless Bluetooth 5.0 3D Soundbar. It features robust protection mechanisms to ensure the safety of your devices.



Figure 2.1: UpBright 19V AC/DC Adapter. This image shows the main power adapter unit with its attached DC output cable ending in a barrel connector, and a separate AC input power cord.

## UpBright AC Adapter Power Supply Compatible with:



Figure 2.2: Compatibility illustration. This image displays the UpBright AC adapter alongside a Bomaker Odine III soundbar, indicating the adapter's intended use with this specific soundbar model. Note: Soundbar is not included with the adapter.

### 3. KEY FEATURES

---

- **Global Compatibility:** Supports World Wide Input Voltage 100-240VAC, 50/60Hz.
- **Output Specifications:** Provides 19V DC, 2.5A (2500mA) power.
- **Safety Protections:**
  - **OVP** (Over Voltage Output Protection)
  - **OCP** (Over Current Output Protection)
  - **SCP** (Short Circuit Output Protection)
- **Durable Design:** Constructed for reliable and long-term performance.
- **Barrel Connector:** Standard barrel type connector for wide compatibility.


### 4. SETUP INSTRUCTIONS

---

1. **Unpack the Adapter:** Carefully remove the AC/DC adapter and its power cord from the packaging.
2. **Select Correct Power Cord:** Identify the appropriate AC power cord for your region (US, EU, UK, AU, etc.).

# Come With A Suitable AC Power Cord (Only One)

## to Fit Your Country/Area

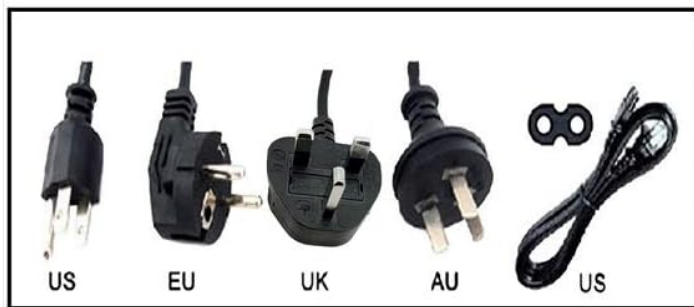

THIS PRODUCT COMES WITH A UPBRIGHT®

LIMITED WARRANTY CERTIFICATE  
+ UPBRIGHT® LIMITED WARRANTY



Figure 4.1: Example of different AC power cord types. The product comes with one suitable AC power cord for your country or area.

3. **Connect AC Power Cord:** Insert the AC power cord firmly into the input port of the UpBright AC/DC adapter.
4. **Connect to Device:** Plug the barrel connector of the adapter's DC output cable into the power input port of your compatible device (e.g., Bomaker Odine III Soundbar). Ensure a secure connection.
5. **Connect to Wall Outlet:** Plug the AC power cord into a standard wall electrical outlet.

**Important:** Always ensure the adapter's voltage and current specifications match your device's requirements to prevent damage. This adapter is specifically designed for devices requiring 19V DC and up to 2.5A.

## 5. OPERATION

Once properly connected, the UpBright AC/DC adapter will supply power to your device. There are no user-adjustable settings on the adapter itself. Its operation is automatic upon connection to a power source and a compatible device.

- Ensure all connections are firm before powering on your device.
- The adapter is designed for continuous operation within its specified limits.

## 6. MAINTENANCE AND CARE

- **Cleaning:** Disconnect the adapter from both the wall outlet and your device before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use, store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling the cables to prevent damage.
- **Handling:** Do not drop, disassemble, or attempt to repair the adapter. Refer to qualified service personnel for any repairs.
- **Ventilation:** Ensure the adapter has adequate ventilation during operation. Do not cover it or place it in an enclosed space that could restrict airflow.

## 7. TROUBLESHOOTING

| Problem                 | Possible Cause                  | Solution                                                                                   |
|-------------------------|---------------------------------|--------------------------------------------------------------------------------------------|
| Device not powering on. | Adapter not properly connected. | Ensure all cables are securely plugged in.                                                 |
|                         | Wall outlet not active.         | Test the wall outlet with another device.                                                  |
|                         | Device issue, not adapter.      | Verify your device is functioning correctly with its original power supply (if available). |
|                         | Incorrect adapter for device.   | Confirm the adapter's specifications (19V, 2.5A) match your device's requirements.         |
| Adapter feels warm.     | Normal operation.               | A slight warmth is normal.                                                                 |
|                         | Insufficient ventilation.       | Ensure the adapter is in a well-ventilated area.                                           |
|                         | Overload or short circuit.      | Disconnect immediately if excessively hot or emitting smoke/smell. Contact support.        |

## 8. PRODUCT SPECIFICATIONS

| Attribute          | Specification                                 |
|--------------------|-----------------------------------------------|
| Model Number       | Bomaker Odine III Soundbar Power (Compatible) |
| Input Voltage      | 100-240VAC, 50/60Hz                           |
| Output Voltage     | 19V DC                                        |
| Output Current     | 2.5A (2500mA)                                 |
| Connector Type     | Barrel Connector                              |
| Product Dimensions | 5 x 3 x 1 inches                              |
| Item Weight        | 10 ounces                                     |
| Safety Features    | OVP, OCP, SCP Protection                      |

## 9. WARRANTY AND SUPPORT

UpBright products are designed for reliability and performance. This adapter comes with:

- **30 Days Refund Policy**
- **24 Months Exchange Warranty**

For technical support, warranty claims, or any inquiries, please contact UpBright customer service through the retailer where the product was purchased or visit the official UpBright store page on Amazon: [UPBRIGHT Store](#).



