



[Manuals.plus](#) /

› [TELEFUNKEN](#) /

› TELEFUNKEN Smart TV 32-inch HD Ready User Manual

TELEFUNKEN TE32553B45V2DZ

TELEFUNKEN Smart TV 32" HD Ready User Manual

Model: TE32553B45V2DZ

[Introduction](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

1. INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your TELEFUNKEN 32-inch HD Ready Smart TV, model TE32553B45V2DZ. This television combines a compact design with advanced features, including Smart TV capabilities, voice control integration with Alexa and Google Assistant, and immersive Dolby Audio technology.

Please read this manual thoroughly before using your TV to ensure proper and safe operation.



Figure 1: Front view of the TELEFUNKEN 32-inch Smart TV.

2. SETUP

2.1. Unboxing and Package Contents

Carefully remove all components from the packaging. Ensure the following items are present:

- TELEFUNKEN 32-inch Smart TV
- Remote Control
- Instruction Manual (this document)
- TV Stands (2 pieces) and Screws
- Power Cable

2.2. Physical Installation

You can install your TV using the included stands or a compatible VESA wall mount (not included).

Stand Installation:

1. Place the TV screen-down on a soft, flat surface to prevent scratches.
2. Align each stand with the corresponding slots on the bottom of the TV.
3. Secure each stand with the provided screws.
4. Carefully lift the TV and place it on a stable, level surface.

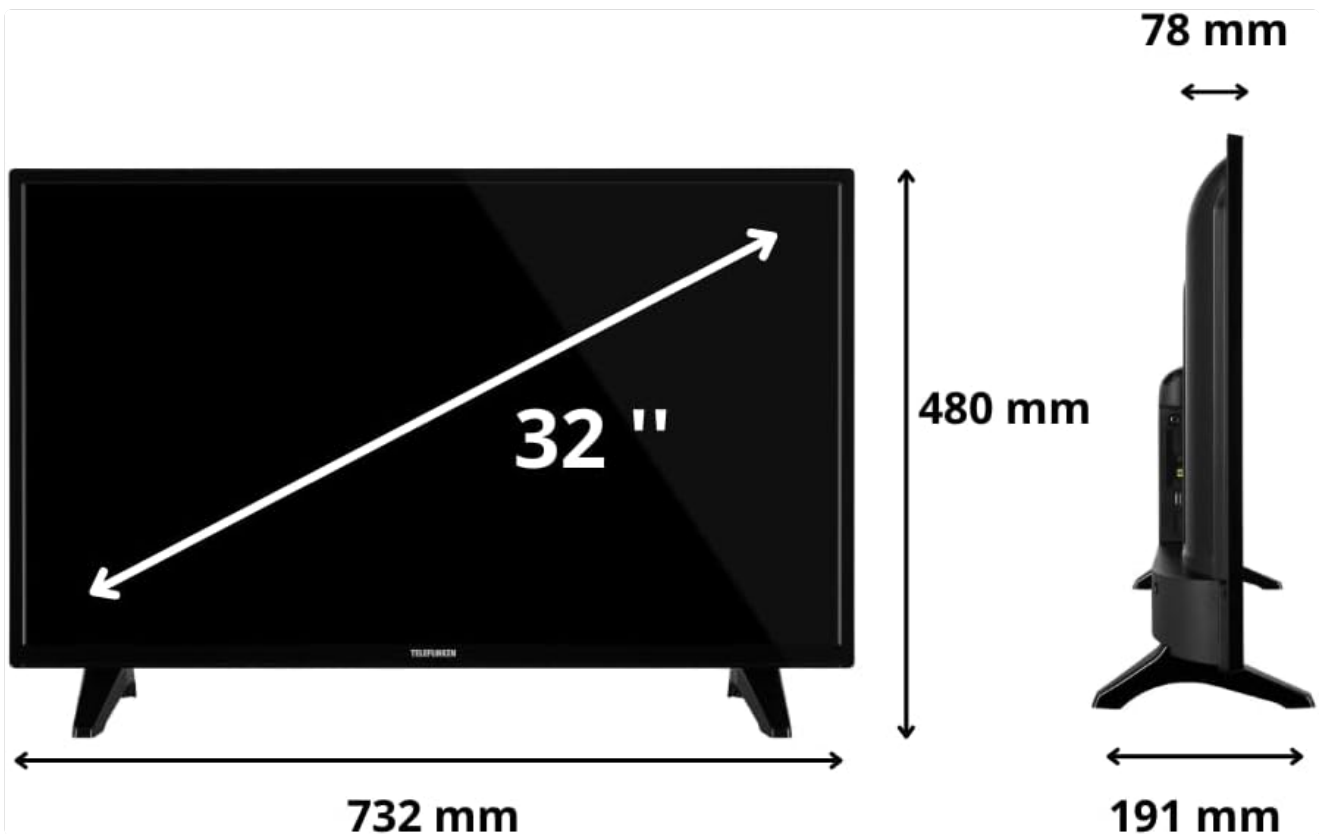


Figure 2: TV dimensions (approx. 732mm width, 480mm height, 191mm depth with stand).

2.3. Connecting External Devices

Your TV offers various connection ports for external devices. Refer to the back panel diagram for port locations.

- **HDMI Ports (x2):** Connect Blu-ray players, game consoles, or set-top boxes.
- **USB Port (x1):** Connect USB drives for media playback.
- **Antenna/Cable Input:** Connect your antenna or cable TV signal.
- **Ethernet Port:** For wired internet connection.
- **CI+ Slot:** For Conditional Access Modules (CAM) to decrypt pay-TV channels.
- **Coaxial Audio Output:** For digital audio connection to an external sound system.
- **Headphone Output:** For connecting headphones.



Figure 3: Rear view of the TV with connection ports.

After connecting all desired devices, plug the power cable into the TV and then into a wall outlet.

2.4. Initial Setup and First Power On

Upon first power-on, the TV will guide you through an initial setup wizard. This typically includes:

- Language selection.
- Country/Region selection.
- Network setup (Wi-Fi or Ethernet).
- Channel scanning (DVB-T2).
- Accepting terms and conditions for Smart TV features.

3. OPERATING YOUR TV

3.1. Remote Control Overview

The included remote control allows you to navigate all TV functions. Familiarize yourself with the button layout.



Figure 4: Remote control for the Smart TV, highlighting dedicated app buttons.

- **Power Button:** Turns the TV on/off or to standby.
- **Number Buttons:** Direct channel selection.
- **Volume Up/Down:** Adjusts audio volume.
- **Channel Up/Down:** Changes TV channels.
- **Navigation Buttons (Up/Down/Left/Right/OK):** Navigate menus and select options.
- **Back/Exit:** Returns to the previous screen or exits a menu.
- **Dedicated App Buttons:** Quick access to popular streaming services like Netflix, YouTube, Amazon Prime Video, Rakuten TV, and Twitch.

3.2. Smart TV Features

Your TELEFUNKEN Smart TV provides access to a wide range of online content and applications.

- **Streaming Apps:** Use the dedicated buttons or navigate to the Smart TV home screen to access pre-installed apps such as Netflix, Amazon Prime Video, and YouTube.
- **Screen Mirroring:** Share content from your compatible smartphone or tablet directly to the TV screen. Consult your device's manual for screen mirroring instructions.
- **Internet Browser:** Browse the web directly on your TV.

3.3. Voice Control (Alexa & Google Assistant)

This TV is compatible with Alexa and Google Assistant, allowing for convenient voice control of various functions.

- **Setup:** Ensure your TV is connected to the internet. Follow the on-screen prompts or refer to the TV's internal help guide to link your Alexa or Google Assistant account.
- **Commands:** Once set up, you can use voice commands to change channels, adjust volume, open applications, and control other compatible smart home devices.
- *Example Commands:* "Alexa, turn on the TV", "Hey Google, open Netflix", "Alexa, change channel to 5".

3.4. Picture and Sound Settings

Customize your viewing and listening experience through the TV's settings menu.

- **Picture Modes:** Select from various preset picture modes (e.g., Standard, Dynamic, Movie, Game) or customize settings like brightness, contrast, color, and sharpness.
- **Dolby Vision HDR10:** Experience enhanced contrast and color with compatible HDR content.
- **Sound Modes:** Choose from sound presets (e.g., Standard, Music, Movie, Speech) or adjust equalizer settings.
- **Dolby Audio:** Enjoy rich, clear, and powerful sound for an immersive audio experience.

3.5. Network Connection

To access Smart TV features, connect your TV to the internet.

- **Wi-Fi:** Navigate to the Network settings, select your Wi-Fi network, and enter the password.
- **Ethernet:** Connect an Ethernet cable from your router to the TV's Ethernet port. The TV will automatically detect the wired connection.

4. MAINTENANCE

4.1. Cleaning Your TV

- Always unplug the TV before cleaning.
- Use a soft, dry, lint-free cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner (do not spray directly onto the screen).
- Avoid using abrasive cleaners, waxes, or solvents.

4.2. Software Updates

Regular software updates can improve performance, add new features, and fix bugs. It is recommended to keep your TV's software up to date.

- **Automatic Updates:** Enable automatic updates in the TV's settings menu.
- **Manual Check:** Periodically check for new updates manually through the TV's system settings.
- *Note:* Some users have reported improvements in audio quality and channel scanning after firmware updates.

5. TROUBLESHOOTING

If you encounter issues with your TV, try the following solutions before contacting support.

Problem	Possible Solution
No power / TV does not turn on.	Ensure the power cable is securely plugged into the TV and the wall outlet. Try a different outlet.
No picture / Poor picture quality.	Check all cable connections (HDMI, antenna). Ensure the correct input source is selected. Adjust picture settings. For antenna, try rescanning channels.
No sound / Poor sound quality.	Check volume level and mute status. Ensure external audio systems are properly connected and selected. Adjust sound settings (Dolby Audio).
Smart TV apps not working / Network connection issues.	Check Wi-Fi or Ethernet connection. Restart your router. Re-enter Wi-Fi password. Perform a network test in TV settings. Update TV firmware.
Cannot find channels after rescanning.	Some users have reported that a full "First Installation" (factory reset and re-setup) might be required to re-acquire channels if a simple rescan fails.
Voice control (Alexa/Google Assistant) not responding.	Ensure TV is connected to the internet. Verify that your Alexa/Google Assistant account is correctly linked in the TV settings. Check microphone on remote (if applicable) or external voice assistant device.
Remote control not working.	Replace batteries. Ensure no obstructions between remote and TV.

If the problem persists after trying these solutions, please refer to the Warranty & Support section for further assistance.

6. SPECIFICATIONS

Feature	Detail
Brand	TELEFUNKEN
Model Number	TE32553B45V2DZ
Manufacturer	Vestel

Feature	Detail
Display Type	LED
Screen Size	32 inches (80 cm diagonal)
Resolution	HD Ready (1366 x 768 pixels)
Aspect Ratio	16:9
Refresh Rate	60 Hz
Audio Technology	Dolby Audio
Video Technology	Dolby Vision HDR10
Connectivity	Wi-Fi, Ethernet, 2x HDMI, 1x USB, 1x CI+, Coaxial Audio Out, Headphone Out
Dimensions (with stand)	73.2 cm (W) x 48 cm (H) x 19.1 cm (D)
Weight	5.66 kg
Power Consumption (SDR)	32.0 W
Power Consumption (HDR)	45.0 W
Standby Power Consumption	0.5 W
Networked Standby Power Consumption	2.0 W
Energy Efficiency Class (SDR)	F
Energy Efficiency Class (HDR)	G

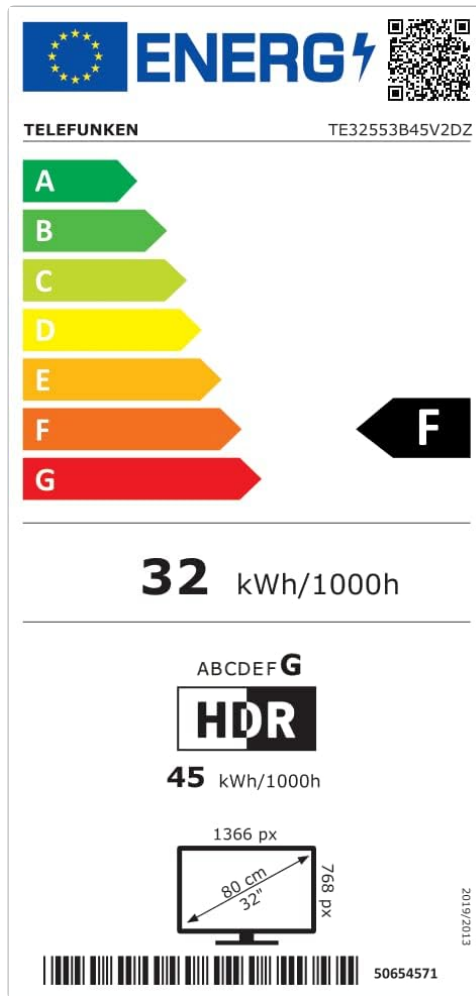


Figure 5: Energy Efficiency Label for Model TE32553B45V2DZ. For more details, scan the QR code or visit eprel.ec.europa.eu/qr/1322941.

7. WARRANTY AND SUPPORT

7.1. Warranty Information

Your TELEFUNKEN TV is covered by a manufacturer's warranty. For specific details regarding the warranty period and terms, please refer to the documentation provided with your purchase or contact your retailer.

As per general consumer rights, if you wish to return a product within 30 days of receipt because you have changed your mind, consult the retailer's help page on returns. If you have received a defective or damaged product, consult the retailer's help page on defective/damaged items. For specific information on purchases made via marketplaces, consult the marketplace's help page.

The manufacturer guarantees minimum software/firmware updates for 8 years and spare parts availability for 7 years from the date of market placement.

7.2. Technical Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact TELEFUNKEN customer support or your authorized dealer. Have your TV model number (TE32553B45V2DZ) and serial number ready when contacting support.

