

Teka MLH-845-SS

Teka MLH 845 SS Microwave Hood Combination Oven User Manual

Model: MLH-845-SS | Brand: Teka

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the safe and efficient operation of your Teka MLH 845 SS Microwave Hood Combination Oven. This appliance integrates microwave, convection oven, and extractor hood functionalities, offering versatile cooking and ventilation solutions for your kitchen. Please read these instructions thoroughly before use and retain them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic precautions, including:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open or if the door is damaged.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Regularly clean grease filters and ensure proper ventilation to prevent fire hazards.
- Do not use corrosive chemicals or vapors in this appliance.
- Always use oven mitts when handling hot dishes or components.

3. INSTALLATION AND SETUP

The Teka MLH 845 SS is designed for over-the-range or built-in installation. Due to the complexity and electrical requirements, professional installation is highly recommended. Ensure the installation area provides adequate clearance and electrical supply as per local codes.

This unit offers both recirculating and extracting hood functions. For recirculating mode, ensure the active carbon filter is correctly installed. For extracting mode, proper ducting to the outside is required.

Product Dimensions



Image Description: A front-side view of the Teka MLH 845 SS Microwave Hood Combination Oven, showcasing its stainless steel finish and control panel. The image includes labels indicating the product's dimensions: 75.9 cm (width), 41.7 cm (height), and 38.5 cm (depth).

4. FEATURES

Your Teka MLH 845 SS oven is equipped with advanced features for convenient and efficient cooking:

- **Exterior Finish:** Stainless steel with a Reflex door finish for a modern aesthetic.
- **Microwave Power Levels:** 10 adjustable power levels for precise heating.
- **Convection Power Levels:** 10 adjustable power levels for baking and roasting.
- **Child Safety Lock:** Prevents unintended operation, ensuring safety in homes with children.
- **Pre-programmed Menus:** 4 convenient menus for common items: Popcorn, Potatoes, Beverages, and Reheat.
- **Hood Function:** Can operate as a recirculating or extracting hood.
- **Extraction Speeds:** Three fan speeds for effective smoke and odor removal.
- **Active Carbon Filter:** Included for air recirculation, ensuring clean air without external venting.
- **Maximum Nominal Power:** 1500 W.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and functions before operating the oven.

Basic Microwave Operation:

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door securely.
3. Select desired power level (if not using full power).
4. Enter cooking time using the numeric keypad.
5. Press 'Start' to begin cooking.

Convection Cooking:

For convection cooking, use oven-safe bakeware. The oven will preheat to the selected temperature before cooking begins. Refer to the specific convection cooking section in your full manual for detailed temperature and time guidelines.

Hood Operation:

Press the fan speed button to cycle through the three extraction speeds. The active carbon filter should be replaced periodically for optimal performance in recirculating mode.

Child Safety Lock:

To activate or deactivate the child safety lock, refer to the specific instructions in your full manual, typically involving a long press of a designated button.

Product Demonstration Video

Your browser does not support the video tag.

Video Description: This video demonstrates the basic operation of a microwave oven, including placing a cup inside, closing the door, and setting a cooking time using the control panel. It also shows the installation of the glass turntable and a metal rack, highlighting the interior features.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

- **Interior:** Clean the oven cavity regularly with a mild detergent and a soft cloth. Do not use abrasive cleaners or scouring pads.
- **Exterior:** Wipe the stainless steel and glass surfaces with a soft, damp cloth. For stubborn stains, use a stainless steel cleaner.
- **Grease Filters:** Remove and clean the grease filters monthly, or more frequently depending on usage. They can typically be washed by hand or in a dishwasher.
- **Active Carbon Filter:** If using the recirculating hood function, replace the active carbon filter every 3-6 months, or as indicated by the appliance.
- **Turtable:** The glass turntable can be removed for cleaning and is dishwasher safe.

7. TROUBLESHOOTING

If you encounter issues with your oven, consult the following common troubleshooting tips before contacting service.

- **Oven not starting:** Ensure the door is fully closed and latched. Check if the appliance is properly plugged into a working power outlet.
- **No heat/uneven heating:** Verify that the correct power level and cooking time are set. Ensure no metal objects are inside the microwave during microwave operation.
- **Turtable not rotating:** Check if the turntable is correctly placed on its support and if there is any obstruction.
- **Display not working:** Check the power supply. If the issue persists, a power reset (unplugging for a few minutes) may resolve it.
- **Excessive noise from hood:** Check if the grease filters are clean and properly installed. Ensure no foreign objects are obstructing the fan.

For persistent problems or issues not listed here, please contact Teka customer support.

8. SPECIFICATIONS

Brand	Teka
Model Number	MLH-845-SS
Capacity	1.6 Cubic Feet
Microwave Power	1450 Watts
Maximum Nominal Power	1500 Watts
Voltage	127 Volts
Material	Stainless Steel, Glass
Color	Gray
Product Weight	30 Kilograms
Dimensions (W x H x D)	75.9 cm x 41.7 cm x 38.5 cm (approximate, based on image)
Special Features	Recirculation, Convection, Pre-programmed Menus, Child Lock
Components Included	1 Microwave Oven, 1 User Manual

9. WARRANTY AND SUPPORT

Your Teka MLH 845 SS Microwave Hood Combination Oven is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, service requests, or to order replacement parts, please contact Teka customer service through their official website or the contact information provided in your purchase documentation.