

[Manuals.plus](#) /

› [BELLA](#) /

› BELLA Digital 6-Liter Air Fryer User Manual

BELLA 829486177224

BELLA Digital 6-Liter Air Fryer User Manual

Model: 829486177224

1. INTRODUCTION

Welcome to the world of stress-free cooking with your new BELLA Digital 6-Liter Air Fryer. This appliance is designed to transform family dinners into effortless feasts, offering a healthier way to enjoy your favorite fried foods with little to no oil.

Featuring an intuitive touch screen and 6 preset functions, this modern air fryer simplifies meal preparation, making cooking a breeze. Its innovative heat circulation technology and 1500-watt system ensure rapid preheating and consistent temperatures for perfectly crispy and evenly cooked results every time.



Image: Front view of the BELLA Digital 6-Liter Air Fryer, showcasing its sleek black design and digital control panel.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT COMPONENTS

Your BELLA Digital Air Fryer consists of the following main components:

- **Main Unit:** Houses the heating element, fan, and control panel.
- **Digital Touch Screen:** For setting time, temperature, and selecting preset functions.
- **Air Fryer Basket:** The primary cooking container.
- **Cooking Rack/Crisper Tray:** Sits inside the basket to allow air circulation around food.
- **Handle:** For safely pulling out the air fryer basket.



Image: The BELLA Air Fryer positioned on a kitchen counter, surrounded by fresh ingredients, highlighting its compact and elegant design.

4. SETUP AND FIRST USE

Before First Use:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Clean the air fryer basket and cooking rack thoroughly with hot water, dish soap, and a non-abrasive sponge.
3. Wipe the inside and outside of the appliance with a damp cloth.
4. Do not fill the air fryer basket with oil or any other liquid.

Placement:

- Place the appliance on a stable, horizontal, and heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of free space on the back and sides of the appliance, and 10 cm (4 inches) of free space above it.

5. OPERATING INSTRUCTIONS

General Operation:

1. Plug the power cord into a wall outlet. The digital display will illuminate.
2. Carefully pull the air fryer basket out of the appliance.
3. Place the cooking rack inside the basket. Place your ingredients on the cooking rack. Do not exceed the MAX fill line.
4. Slide the air fryer basket back into the appliance.
5. Press the Power button to turn on the air fryer.

Using the Digital Touch Screen:



Seguridad Incorporada

Disfruta de una cocina sin preocupaciones con una función de apagado automático de 60 minutos y una alerta audible, y ajusta fácilmente la temperatura de fritura con la pantalla táctil digital.

Muestra tu Singularidad

Con un diseño elegante, pulcro y moderno, la friteuse à air digital de 6 litros agregará un toque de personalidad y estilo a tu encimera y se mezclará sin esfuerzo con cualquier decoración de cocina.



Image: A hand demonstrating interaction with the BELLA Air Fryer's digital touch screen, showing the clear display and control buttons.

- **Power Button:** Turns the unit on/off.
- **Temperature/Time Control:** Use the '+' and '-' buttons to adjust temperature (up to 200°C) and time (up to 60 minutes). Press the 'TEMP/TIME' button to switch between adjusting temperature and time.
- **Preset Functions:** The air fryer features 6 preset cooking modes: Fries, Dessert, Chicken, Shrimp, Steak, and Fish. Press the 'MENU' button to cycle through these options. Each preset has a default time and temperature, which can be adjusted manually.
- **Preheat Function:** Press the 'PREHEAT' button to quickly preheat the air fryer before adding food.

Cooking Process:

1. Select your desired preset or manually set the temperature and time.
2. Press the Start/Pause button to begin cooking.
3. During cooking, you may pull out the basket to shake or flip ingredients for even cooking. The air fryer will pause automatically and resume when the basket is reinserted.
4. Once the timer reaches zero, the air fryer will beep, indicating cooking is complete.
5. Carefully pull out the basket and transfer the cooked food to a serving dish.

¡Atención a todos los entusiastas de la cocina y cocineros aficionados! ¿Listos para agregar un toque de magia de la marca Bella a sus aventuras culinarias? ¡Acompáñenos en nuestro emocionante viaje por el mundo de las ollas y electrodomésticos que harán bailar de alegría a sus papilas gustativas! Desde deliciosos aperitivos fritos crujientes hasta exquisitas cocciones al horno y todo lo que hay en medio, ¡con nosotros descubrirás la receta para la felicidad en la cocina!



Image: Cooked food, such as crispy fries, being carefully removed from the air fryer basket with tongs, ready for serving.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and optimal performance of your air fryer. All Bella air fryers are equipped with a PFOA-free, dishwasher-safe, and completely non-stick basket and cooking rack for easy and stress-free food removal and cleaning.



Limpieza sin Complicaciones

Esta hermosa freidora de aire cuenta con un cesto y bandeja de cocción desmontables, antiadherentes y aptos para lavavajillas para asegurar una liberación fácil de los alimentos y una limpieza sencilla.

Comidas Saludables en Tan Solo unos Minutos

Gracias a un potente sistema de calefacción y modos de cocción preestablecidos, la friteuse à air ofrece alimentos deliciosos y perfectamente crujientes de manera rápida y sin necesidad de precalentamiento.



Image: The air fryer basket and crisper tray are shown detached from the main unit, illustrating their removable design for easy cleaning.

Cleaning Steps:

1. Always unplug the appliance and allow it to cool down completely before cleaning.
2. Clean the air fryer basket and cooking rack after every use. They are dishwasher safe, or you can wash them with hot water, dish soap, and a non-abrasive sponge.
3. For stubborn food residue, soak the basket and rack in hot water with dish soap for about 10 minutes.
4. Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. Clean the inside of the appliance with a hot water and non-abrasive sponge.
6. Ensure all parts are thoroughly dry before storing or using again.

7. TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded wall outlet.
Food is not cooked evenly.	Basket is overloaded; Food not shaken/flipped.	Cook in smaller batches; Shake or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; Fatty ingredients.	Clean the basket and cooking rack thoroughly; For fatty foods, drain excess oil during cooking.

Problem	Possible Cause	Solution
Air fryer basket does not slide in properly.	Basket is not positioned correctly.	Ensure the basket is fully aligned with the main unit's grooves.

8. SPECIFICATIONS

La Experiencia Definitiva de Freír con Aire

¡Cocinar para tus grandes reuniones familiares nunca ha sido tan placentero! Te presentamos la innovadora y vibrante freidora de aire con pantalla táctil, el compañero de cocina perfecto para aquellos que buscan una experiencia culinaria divertida, saludable y deliciosa. Diseñado pensando en tus necesidades, en Bella hemos creado un electrodoméstico versátil que añade un toque de color y emoción a tus aventuras culinarias, al tiempo que ofrece comidas de calidad superior y más saludables.



1500 watt



Sin PFOA



Capacidad de
2.2 kg



Hasta 200°C

Image: An infographic visually representing key specifications: 1500 watts of power, PFOA-free components, 2.2 kg capacity, and a maximum temperature of 200°C.

Feature	Detail
Brand	BELLA
Model Number	829486177224 (Manufacturer Model: 17722)
Color	Black
Product Dimensions (L x W x H)	27.99 x 38.81 x 32.58 cm (11.02 x 15.28 x 12.83 inches)
Capacity	6 Quarts (approx. 5.7 Liters / 2.2 kg food capacity)
Power	1500 Watts
Voltage	230 Volts (AC)

Feature	Detail
Material	Plastic, Aluminum
Special Feature	Temperature Control
Item Weight	4.25 Kilograms (9.36 Pounds)
Manufacturer	Made by Gather
Country of Origin	China
Recommended Uses	Cooking

9. WARRANTY AND SUPPORT

Specific warranty details and customer support contact information are typically provided with your product packaging or on the manufacturer's official website. Please refer to these resources for comprehensive warranty coverage and assistance.

For any questions or concerns not addressed in this manual, please contact BELLA customer service through their official channels.

© 2024 BELLA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question