

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [SKMEI](#) /
- › [SKMEI 1412 Digital Sports Watch User Manual](#)

SKMEI 1412

SKMEI 1412 Digital Sports Watch User Manual

Model: 1412 | Brand: SKMEI

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your SKMEI 1412 Digital Sports Watch. Please read this manual carefully to ensure proper use and to maximize the lifespan of your watch. This watch features a digital display, chronograph, alarm, and backlight functions, designed for active lifestyles.

2. PRODUCT OVERVIEW

The SKMEI 1412 is a versatile digital sports watch built for durability and functionality. It features a clear digital display and a comfortable silicone strap.



Figure 2.1: Front view of the SKMEI 1412 Digital Sports Watch, displaying time, date, and day of the week.

Key Features:

- **Digital Display:** Shows time, date, seconds, and weekday for easy readability.
- **Chronograph (Stopwatch):** For tracking elapsed time during activities.
- **Alarm Function:** Provides a daily reminder.
- **EL LED Backlight:** Ensures visibility in low-light conditions.
- **Water Resistance:** Rated for 50 meters, suitable for daily wear, splashes, and brief immersion.
- **Durable Construction:** Features a scratch-resistant Resin mirror and ABS casing.
- **Adjustable Silicone Strap:** Provides a comfortable and secure fit, adjustable up to 225mm.



Figure 2.2: Rear view of the watch, indicating model number 1412 and 5ATM water resistance.

3. BUTTON FUNCTIONS

The SKMEI 1412 watch has four buttons located on its sides. Refer to Figure 3.1 for button identification.



Figure 3.1: Side view illustrating the four control buttons of the watch.

- **LIGHT (Top Left):** Activates the EL LED backlight.
- **MODE (Bottom Left):** Cycles through different modes (Time, Alarm, Chronograph).
- **START/STOP (Top Right):** Used to start/stop the chronograph or adjust settings.
- **RESET (Bottom Right):** Used to reset the chronograph or confirm settings.

4. SETUP AND OPERATION

4.1. Time and Date Setting

1. From the Timekeeping Mode, press the **MODE** button three times until the seconds begin to flash. This indicates you are in setting mode.
2. Press the **RESET** button to cycle through the setting items: seconds → hour → minute → month → date → day of the week.
3. While an item is flashing, use the **START/STOP** button to increase the value. Hold **START/STOP** to rapidly advance the value.
4. Once all settings are adjusted, press the **MODE** button to exit the setting mode and return to Timekeeping Mode.

4.2. Alarm Setting

1. From the Timekeeping Mode, press the **MODE** button once to enter the Alarm Mode.
2. Press the **RESET** button to select the hour or minute setting. The selected value will flash.
3. Use the **START/STOP** button to adjust the flashing hour or minute.
4. Press the **MODE** button to exit the Alarm Setting Mode.
5. To turn the alarm ON/OFF, press the **START/STOP** button while in Alarm Mode. An alarm icon will appear/disappear on the display.

4.3. Chronograph (Stopwatch) Operation

1. From the Timekeeping Mode, press the **MODE** button twice to enter the Chronograph Mode.
2. Press the **START/STOP** button to start the stopwatch.
3. Press the **START/STOP** button again to stop the stopwatch.
4. To reset the stopwatch to zero, press the **RESET** button while the stopwatch is stopped.
5. Press the **MODE** button to return to Timekeeping Mode.

4.4. Backlight Function

Press the **LIGHT** button (top left) to illuminate the display. The backlight will remain active for a few seconds, providing visibility in dark environments.

5. MAINTENANCE

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and mild soap, then dry thoroughly.
- **Water Resistance:** The watch is water-resistant up to 50 meters (5 ATM). This means it is suitable for showering, swimming in shallow water, and general daily use. Do not press buttons underwater. Avoid exposure to hot water or steam, as this can compromise the water seals.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) for extended periods.
- **Chemicals:** Keep the watch away from solvents, detergents, perfumes, and other chemicals that may damage the casing or strap.
- **Battery Replacement:** When the display becomes dim or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure water resistance is maintained. The battery type is CR2016.

6. TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though this model typically does not have one). If issues persist, a battery replacement might be needed, or contact support.
- **Time is incorrect:** Re-adjust the time and date settings as described in Section 4.1.
- **Water inside the watch:** Immediately stop using the watch and seek professional repair. Water damage is typically not covered under warranty.

7. SPECIFICATIONS



Figure 7.1: Dimensional diagram of the SKMEI 1412 watch, showing case height, strap/lug width, case width, and case thickness.

SKMEI 1412 Digital Sports Watch Specifications

Feature	Detail
Model Number	1412
Overall Dimensions (L x W x H)	23.5 x 2.5 x 0.9 cm
Item Weight	20 g
Case Width	35 mm
Case Height	38 mm
Case Thickness	9 mm
Strap/Lug Width	16 mm
Band Material Type	Polyurethane (Silicone)
Band Colour	Black

Feature	Detail
Watch Movement Type	Quartz
Water Resistance	50 Meters (5 ATM)
Display Type	Digital
Features	Chronograph, Alarm, Backlight, Date, Day of Week

8. WARRANTY AND SUPPORT

The SKMEI 1412 Digital Sports Watch comes with a **Limited Warranty**. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your purchase or contact SKMEI customer support directly.

For further assistance, technical support, or inquiries, please visit the official SKMEI website or contact their authorized service centers. Contact information can typically be found on the product packaging or the brand's official online presence.