

[Manuals.plus](#) /

› [UPBRIGHT](#) /

› UpBright 15V AC/DC Adapter Instruction Manual for KaraoKing G100 Karaoke Machine

UPBRIGHT KaraoKing G100 15V Power Supply

UpBright 15V AC/DC Adapter Instruction Manual

For KaraoKing G100 Karaoke Machine

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your UpBright 15V AC/DC Adapter. This power supply is specifically designed to be compatible with the KaraoKing G100 Karaoke Machine, ensuring proper power delivery for its operation and battery charging.



Image 1.1: The UpBright AC/DC Adapter shown with a compatible KaraoKing G100 Karaoke Machine. Note that the karaoke machine is not included with the adapter.

2. PRODUCT OVERVIEW

2.1 What's in the Box

- 1 x UpBright 15V AC/DC Adapter

2.2 Key Features

- **Global Input Voltage:** Supports 100-240VAC, 50/60Hz for worldwide compatibility.
- **Safety Protections:** Equipped with Over Voltage Protection (OVP), Over Current Protection (OCP), and Short Circuit Protection (SCP) to safeguard your device.
- **Compatibility:** Designed for KaraoKing Model G100 (G 100) Karaoke Machines requiring 15VDC 2A (30W) input.

UpBright AC Adapter Power Supply Compatible with:

(Machine not Included)



Image 2.1: The UpBright 15V AC/DC Adapter, showing its compact design and integrated power cord.

3. SETUP INSTRUCTIONS

Follow these steps to properly connect your UpBright AC/DC Adapter to your KaraoKing G100 Karaoke Machine:

1. **Identify the DC Input Port:** Locate the 'DC IN 15V/2A' port on your KaraoKing G100 Karaoke Machine.
2. **Connect the Adapter:** Insert the barrel connector of the UpBright AC/DC Adapter firmly into the DC input port of the karaoke machine. Ensure a snug fit.
3. **Plug into Power Outlet:** Insert the AC plug of the adapter into a standard electrical wall outlet (100-240VAC).
4. **Verify Power:** Once connected, the karaoke machine should receive power, indicated by its power indicator light or immediate functionality.



Image 3.1: A detailed view of the barrel connector, which plugs into the device's DC input port.

4. OPERATING INSTRUCTIONS

Once the UpBright AC/DC Adapter is correctly connected to your KaraoKing G100 Karaoke Machine and a power outlet, the adapter will continuously supply power to the device. If the karaoke machine has an internal rechargeable battery, the adapter will also charge the battery while providing power for operation.

- To power on or off the karaoke machine, use the power button on the karaoke machine itself. The adapter provides constant power when plugged in.
- Ensure the adapter is always plugged into a functional wall outlet.

5. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety guidelines:

- **Indoor Use Only:** This adapter is designed for indoor use. Do not expose it to rain, moisture, or extreme temperatures.
- **Proper Ventilation:** Ensure the adapter has adequate ventilation. Do not cover it or place it in an enclosed

space during operation.

- **Avoid Overloading:** Do not connect the adapter to devices that exceed its specified output voltage and current ratings.
- **Cable Care:** Do not bend, twist, or pull the power cord excessively. Keep it away from heat sources and sharp edges.
- **Disconnect When Not in Use:** Unplug the adapter from the wall outlet when not in use for extended periods or during electrical storms.
- **Protection Features:** The adapter includes OVP (Over Voltage Protection), OCP (Over Current Protection), and SCP (Short Circuit Protection) to prevent damage to both the adapter and the connected device. However, these are protective measures and not substitutes for careful handling.
- **No User Serviceable Parts:** Do not attempt to open or repair the adapter. Refer all servicing to qualified personnel.

6. SPECIFICATIONS

The following table details the technical specifications of the UpBright 15V AC/DC Adapter:

Feature	Specification
Input Voltage	100-240VAC, 50/60Hz
Output Voltage	15VDC
Output Current	2A (2000mA)
Wattage	30W
Connector Type	Barrel Connector
Product Dimensions	5 x 2 x 3 inches (approximate)
Item Weight	5 ounces (approximate)
Model Number	KaraoKing G100 15V Power Supply



Image 6.1: The adapter's label, displaying input/output specifications and safety certifications.

7. TROUBLESHOOTING

If you encounter issues with your UpBright AC/DC Adapter, consider the following:

- **No Power to Device:**
 - Ensure the adapter is securely plugged into both the wall outlet and the KaraoKing G100.
 - Test the wall outlet with another device to confirm it is functional.
 - Check the power button on the KaraoKing G100.
- **Intermittent Power:**

- Verify all connections are firm and not loose.
- Inspect the adapter cable for any visible damage or kinks.

- **Adapter is Hot:**

- It is normal for power adapters to become warm during operation. However, if it feels excessively hot, unplug it immediately.
- Ensure adequate ventilation around the adapter.

If problems persist after performing these checks, discontinue use and contact customer support.

8. MAINTENANCE

Proper care will extend the life of your UpBright AC/DC Adapter:

- **Cleaning:** Disconnect the adapter from the power source and the device before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place when not in use. Avoid wrapping the cable too tightly around the adapter.
- **Environmental Conditions:** Keep the adapter away from dust, dirt, and moisture.


9. WARRANTY AND SUPPORT

Your UpBright AC/DC Adapter comes with a warranty to ensure your satisfaction:

- **Refund Period:** 30 Days Refund.
- **Exchange Period:** 24 Months Exchange.

For warranty claims or technical support, please refer to the contact information provided with your purchase or visit the official UpBright website.

Come With A Suitable Outlet Adapter (Only One) to Fit
Your Country/Area For International Order

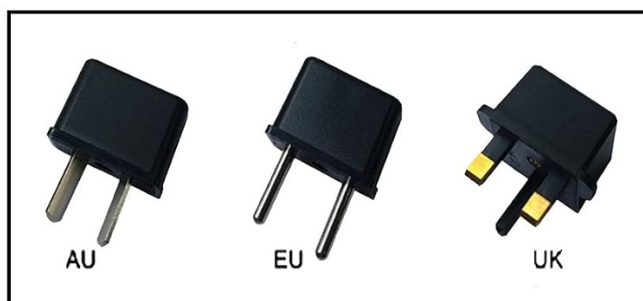

THIS PRODUCT COMES WITH A UPBRIGHT®

LIMITED WARRANTY CERTIFICATE
+ UPBRIGHT® LIMITED WARRANTY



Image 9.1: Example of international outlet adapters (not included with this specific product unless specified) and a representation of the UpBright Limited Warranty Certificate.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BD4RNMP1>

More documents and user manuals: <https://manuals.plus/>