

[Manuals.plus](#) /

› [PERFASCIN](#) /

› PERFASCIN ERF-32909HS Remote Control Instruction Manual for HISENSE TV Models HL65XT780PZLN3D and HL65XT780

PERFASCIN ERF-32909HS

PERFASCIN ERF-32909HS Remote Control Instruction Manual

For HISENSE TV Models HL65XT780PZLN3D and HL65XT780

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your PERFASCIN ERF-32909HS remote control. This remote is specifically designed for use with HISENSE TV models HL65XT780PZLN3D and HL65XT780. It functions as a direct replacement and requires no programming or pairing.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.





Figure 1: Battery compartment on the back of the remote control, illustrating the correct orientation for AAA battery insertion.

Once batteries are correctly installed, the remote control is ready for immediate use with compatible HISENSE TV models. No additional programming or pairing is required.

The PERFASCIN ERF-32909HS remote control operates using infrared (IR) technology. Ensure a clear line of sight between the remote control and the TV's IR receiver for optimal performance.





Figure 2: Front view of the remote control with all buttons clearly visible.

Key Functions

- **Power Button (Red, Top Left):** Turns the TV on or off.
- **Source Button (Top Right):** Selects input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Directly enter channel numbers.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes TV channels.
- **Mute:** Silences the TV audio.
- **Menu:** Accesses the TV's main menu.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **Return/Exit:** Returns to the previous screen or exits a menu.
- **Info:** Displays information about the current program or input.
- **Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback on compatible devices or TV functions.
- **HiSmart/HiMedia:** Accesses specific smart TV or media functions (if supported by your TV model).
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV menu or application.

MAINTENANCE

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote control's responsiveness decreases or it stops functioning. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent potential leakage and damage.

TROUBLESHOOTING

• **Remote Control Not Responding:**

- Ensure the batteries are inserted correctly with the proper polarity.
- Replace the batteries with fresh 1.5V AAA alkaline batteries.
- Check for any obstructions between the remote control and the TV's IR receiver.
- Ensure you are within the effective range of the TV's IR receiver.

• **Specific Buttons Not Working:**

- This remote is designed for specific HISENSE TV models. Verify your TV model is HL65XT780PZLN3D or HL65XT780.
- Some advanced functions (e.g., HiSmart/HiMedia) may require specific TV firmware or settings.

SPECIFICATIONS

Model Number	ERF-32909HS
Brand	PERFASCIN
Compatible TV Models	HISENSE HL65XT780PZLN3D, HL65XT780
Power Supply	2 x 1.5V AAA Alkaline Batteries (Not Included)
Connectivity Technology	Infrared (IR)
Product Dimensions	7 x 2 x 0.65 inches (approximately)
Item Weight	2.3 ounces (approximately, without batteries)
Special Feature	Ergonomic design
Max Number of Supported Devices	1 (Television)

SUPPORT

For any questions or further assistance regarding your PERFASCIN ERF-32909HS remote control, please contact customer service. They can provide professional suggestions and support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BD54Z2SM>

More documents and user manuals: <https://manuals.plus/>