

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

### idance GROOVE114MK3

## iDANCE GROOVE 114 MK3 Bluetooth Speaker User Manual

Your comprehensive guide to setting up, operating, and maintaining your iDANCE GROOVE 114 MK3 speaker.

### PRODUCT OVERVIEW

---

The iDANCE GROOVE 114 MK3 is a portable and wireless Bluetooth speaker designed for parties and events, featuring powerful audio output, LED disco lighting, and karaoke capabilities. It offers versatile connectivity options and unique sound effects for an enhanced user experience.



Front view of the iDANCE GROOVE 114 MK3 Bluetooth Speaker, showcasing its integrated LED disco lighting around the woofer and the control panel at the top.

## Key Features:

- **Portable and Wireless Design:** Easily transportable for use anywhere.

- **100 Watt BASS REFLEX + LED Disco Lighting:** Powerful sound with dynamic visual effects.
- **Voice Changer:** Four distinct voice effects (baby, robot, man, woman).
- **Sound Effects:** Eight pre-set sound effects (crowd, DJ, applause, etc.).
- **Magic Remote Control:** Activates sound effects, voice changer, and LED lighting.
- **Wireless BT Audio with Sharing Mode:** Connects wirelessly and can share audio with another GROOVE114mk3.
- **MP3 Playback:** Supports audio playback via USB and TF card.
- **Long Playtime:** 4-8 hours of playback on a single charge.
- **Karaoke Ready:** Includes a microphone input and a wired microphone.
- **XXL Handle:** For easy transportation.

## SETUP GUIDE

---

### 1. Initial Charging

Before first use, fully charge your iDANCE GROOVE 114 MK3 speaker. Connect the included USB charging cable to the speaker's USB charging port and to a compatible USB power adapter (not included). The charging indicator will show the charging status. A full charge typically provides 4-8 hours of playback time.

### 2. Powering On/Off

Locate the Power button on the control panel. Press and hold the Power button for a few seconds to turn the speaker ON or OFF. A sound prompt will indicate the power status.

### 3. Connecting the Microphone

For karaoke or vocal use, insert the plug of the included wired microphone into the MIC INPUT jack on the speaker's control panel. Ensure the connection is secure.



The included wired microphone and the magic remote control, essential accessories for the speaker's karaoke and effect functions.

## OPERATING INSTRUCTIONS

---

### 1. Bluetooth Pairing

1. Turn on the iDANCE GROOVE 114 MK3 speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon or voice prompt.
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings and search for available

devices.

3. Select "GROOVE 114 MK3" from the list. Once connected, a confirmation sound will play, and the Bluetooth indicator will become solid.
4. You can now play audio wirelessly from your device through the speaker.

## 2. MP3 Playback (USB/TF Card)

Insert a USB flash drive or TF (microSD) card containing MP3 audio files into the respective port on the speaker's control panel. The speaker will automatically detect the media and begin playback. Use the control panel buttons (Play/Pause, Previous/Next) or the remote control to manage playback.

## 3. Karaoke Function and Microphone Use

With the microphone connected, you can sing along to your music. The speaker features a dedicated microphone input. Adjust the microphone volume if available on the control panel or remote. Note that some models may have a fixed microphone volume or echo effect that cannot be fully adjusted or removed.

## 4. Voice Changer and Sound Effects

Use the included magic remote control to activate the voice changer and sound effects. The remote has dedicated buttons for 4 voice changer effects (Baby, Robot, Man, Woman) and 8 sound effects (Crowd, DJ, Applause, etc.). Press the corresponding button on the remote to apply the desired effect.

## 5. LED Disco Lighting

The speaker features integrated LED disco lighting around the woofer. This lighting automatically activates when the speaker is on. Use the magic remote control to adjust or cycle through the lighting modes, if available.

## 6. Sharing Mode (for multiple GROOVE114mk3 speakers)

If you have two iDANCE GROOVE 114 MK3 speakers, you can use the sharing mode to play the same audio source simultaneously on both. Refer to the specific instructions in your product's quick start guide for detailed steps on activating sharing mode, as this may vary slightly.

## MAINTENANCE

---

### Cleaning

Wipe the speaker's exterior with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. Avoid getting moisture into any openings.

### Battery Care

To prolong the life of the built-in lithium-ion battery, avoid fully discharging it frequently. Recharge the speaker regularly, even if not in use, especially if storing it for extended periods. Store in a cool, dry place.

### Storage

When not in use, store the speaker in a cool, dry environment, away from direct sunlight and extreme temperatures. Protect it from dust and moisture.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No power / Speaker does not turn on.	Battery is depleted.	Connect the speaker to a power source using the USB charging cable and allow it to charge for several hours.
No sound from speaker.	Volume is too low; Device not paired; Incorrect input mode.	Increase the volume on both the speaker and the connected device. Ensure Bluetooth is paired correctly or USB/TF card is inserted properly. Press the Mode button to select the correct input.
Microphone audio has excessive echo or is too loud.	Fixed microphone settings; No independent microphone volume control.	The iDANCE GROOVE 114 MK3 may have a pre-set echo effect and a fixed microphone volume that cannot be adjusted independently. This is a design characteristic of the product. For optimal use, consider the environment (e.g., open spaces) where this characteristic might be less noticeable.
Bluetooth connection unstable or drops.	Device too far; Interference; Low battery.	Ensure the connected device is within the Bluetooth range (typically 10 meters). Move away from other wireless devices. Recharge the speaker.
Remote control not working.	Battery depleted; Obstruction.	Replace the remote control battery. Ensure there is no obstruction between the remote and the speaker's IR receiver.

If you encounter issues not listed here, or if the suggested solutions do not resolve the problem, please refer to the manufacturer's support resources or contact customer service.

## SPECIFICATIONS

---

**Model Number:** GROOVE114MK3

**Power Output:** 100 Watts

**Connectivity:** Bluetooth, USB, TF Card

**Audio Input:** Microphone

**Battery:** Rechargeable Lithium-ion

**Playtime:** 4-8 hours (approx.)

**Dimensions (LxWxH):** 26 x 58 x 25 cm (10.2 x 22.8 x 9.8 inches)

**Weight:** 1.84 kg (4.06 lbs)

**Included Accessories:** 1 x Wired Microphone, 1 x Remote Control, 1 x USB Charging Cable

**Mounting Type:** Floor standing (speaker stand ready)

**UPC:** 886898021682

## WARRANTY AND SUPPORT

---

For detailed warranty information, please refer to the warranty card included with your product or visit the official iDance website. Warranty terms and conditions may vary by region and retailer.

If you require technical support or have questions regarding your iDANCE GROOVE 114 MK3 speaker, please contact the retailer where you purchased the product or refer to the support section on the official iDance website. Please have

your model number (GROOVE114MK3) and proof of purchase ready when seeking support.

© 2025 iDance. All rights reserved.