

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [iDance](#) /

› [iDANCE iROCKER S100E Electronic Drum Set User Manual](#)

## iDance S100E

# iDANCE iROCKER S100E Electronic Drum Set User Manual

Model: S100E

## 1. INTRODUCTION

Thank you for choosing the iDANCE iROCKER S100E Electronic Drum Set. This manual provides essential information for setting up, operating, and maintaining your new electronic drum kit. Designed for aspiring drummers, the S100E offers a compact and engaging platform to develop rhythmic skills with its real drum heads, versatile sound options, and portable design.

## 2. WHAT'S INCLUDED

Please ensure all the following components are present in your package:

- iDANCE iROCKER S100E Electronic Drum Set (main unit with 3-piece kit and central control panel)
- Wired Headphones
- Silent Drumsticks
- Drum Chair/Stool



Image 2.1: Complete iDANCE iROCKER S100E Electronic Drum Set package contents, including the main drum unit, headphones, silent drumsticks, and a drum stool.

### 3. SETUP GUIDE

Follow these steps to set up your iROCKER S100E Electronic Drum Set:

- 1. Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
- 2. Assemble the Drum Unit:** The main drum unit is largely pre-assembled. Ensure the three drum pads (two smaller, one larger bass drum) are securely attached to the central frame. The central control panel should be positioned at the top.
- 3. Position the Drum Stool:** Assemble the drum stool if necessary and place it comfortably in front of the bass drum.
- 4. Charging the Battery:** The S100E features rechargeable Lithium-ion batteries. Before first use, connect the power adapter (not included in product data, but implied) to the charging port on the control panel and to a power outlet. Allow the unit to fully charge (typically 4-8 hours of play time per charge).

5. **Connect Headphones (Optional):** For silent practice, plug the wired headphones into the designated headphone jack on the control panel.
6. **Power On:** Locate the power button on the control panel and press it to turn on the unit.



Image 3.1: The iDANCE iROCKER S100E Electronic Drum Set fully assembled, showing the drum pads, central control unit, and foot pedal.

## 4. OPERATING INSTRUCTIONS

The iROCKER S100E offers a variety of features accessible via its central control panel:

### 4.1 Control Panel Overview



Image 4.1: Detailed view of the iROCKER S100E central control panel, showing the speaker, volume controls, and mode selection buttons. The control panel features a built-in 20-watt speaker, volume controls, and buttons for selecting drum sets, sound effects, and backing tracks.

#### 4.2 Basic Playback

- **Playing Drums:** Use the silent drumsticks to strike the drum pads. Each pad corresponds to a different drum sound within the selected drum set.
- **Volume Control:** Adjust the master volume using the dedicated volume controls on the central panel.
- **Headphone Use:** When headphones are plugged in, the internal speaker will mute, allowing for private practice.

#### 4.3 Selecting Drum Sets and Sounds

The S100E comes with **12 preset drum sets** and **48 sound effects**. Use the buttons on the control panel (labeled A, B, C, D, and potentially others for navigation) to cycle through the available options. Refer to the on-screen display or indicator lights for your current selection.

#### 4.4 Metronome and Backing Tracks

- **Metronome:** The unit includes **4 metronome tracks** to help with timing and rhythm practice. Select the desired metronome track from the control panel.
- **Backing Tracks:** Play along with a host of built-in backing tracks, including genres like Rock, Electro, House, Percussion, FK, and DJ. Use the "PLAY" and "VARIATION" buttons to select and start tracks.

### 5. MAINTENANCE AND CARE

Proper care will extend the life of your iROCKER S100E:

- **Cleaning:** Use a soft, dry cloth to wipe down the drum pads and control panel. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the drum set in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To maintain battery health, avoid completely draining the battery frequently. Recharge the unit regularly, even if not in constant use. If storing for an extended period, charge the battery to about 50% before storage.
- **Handling:** Handle the drum set with care. Avoid dropping or subjecting it to strong impacts.

## 6. TROUBLESHOOTING

---

If you encounter issues with your iROCKER S100E, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound from speaker/headphones.	Unit not powered on; Volume too low; Headphones not fully plugged in; Battery drained.	Ensure unit is powered on; Increase volume; Re-insert headphones firmly; Charge the battery.
Drum pads not responding.	Unit not powered on; Connection issue; Software glitch.	Ensure unit is powered on; Check all connections; Try turning the unit off and on again.
Short battery life.	Battery not fully charged; Old battery.	Ensure battery is fully charged before use; If battery life significantly degrades, contact support.

## 7. SPECIFICATIONS

---

Feature	Detail
Model Name	S100E
Brand	iDance
Drum Kit Type	Electronic Drum Set (3-piece)
Speaker Output	20W Built-in Speaker
Drum Sets	12 Preset Drum Sets
Sound Effects	48 Sound Effects
Metronome Tracks	4 Metronome Tracks
Backing Tracks	Rock, Electro, House, Percussion, FK, DJ
Battery Type	Rechargeable Lithium-ion
Battery Life	4-8 hours (from one single charge)
Included Accessories	Wired Headphones, Silent Drumsticks, Drum Chair

Feature	Detail
Material	Silicone, Plastic, Acrylonitrile Butadiene Styrene, Goatskin
Item Weight	3.88 kg
Package Dimensions	51 x 41 x 29.9 cm
UPC	886898022139

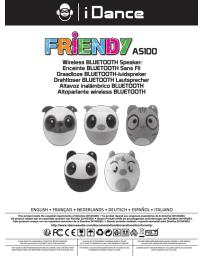
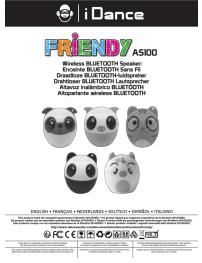
## 8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or visit the official iDance website. Keep your proof of purchase for warranty claims.

© 2024 iDance. All rights reserved.

### Related Documents - S100E

	<p><a href="#">Aitkens Hospitality Spring 2025 Catalog: Barware, Kitchen Equipment, and Glassware</a></p> <p>Explore the latest hospitality supplies from Aitkens Hospitality for Spring 2025. Featuring barware, kitchen appliances, glassware, ovens, refrigeration, and more from top brands like Vitamix, Sanelli, Blue Seal, SilverChef, Meiko, Atosa, and Moretti Forni.</p>
	<p><a href="#">iDance BC100 Bluetooth Karaoke System Instruction Manual</a></p> <p>Comprehensive instruction manual for the iDance BC100 Bluetooth Karaoke System with Built-in Light Show, covering setup, operation, features, and troubleshooting.</p>
	<p><a href="#">iDance Blaster 200 (208) Portable Bluetooth Speaker User Manual</a></p> <p>User manual for the iDance Blaster 200 (208) portable Bluetooth speaker with disco lighting. Includes features, control panel, remote control, specifications, and safety instructions.</p>

	<p><a href="#">iDance FRIENDY AS100 Wireless Bluetooth Speaker: User Manual and Specifications</a></p> <p>Comprehensive user manual and technical specifications for the iDance FRIENDY AS100 Wireless Bluetooth Speaker, detailing charging, Bluetooth pairing, functions, and product features.</p>
	<p><a href="#">iDance FRIENDY AS100 Wireless Bluetooth Speaker User Guide</a></p> <p>Discover the iDance FRIENDY AS100, a fun and portable wireless Bluetooth speaker. This guide provides instructions on charging, Bluetooth pairing, usage, and technical specifications for the iDance FRIENDY AS100 speaker.</p>
	<p><a href="#">iDance XD3 ENERGY Bluetooth Party Speaker Instruction Manual</a></p> <p>Comprehensive instruction manual for the iDance XD3 ENERGY Bluetooth Home Party Speaker with integrated mixer, disco lights, FM radio, and USB MP3 player. Learn about setup, features, controls, operations, troubleshooting, and specifications.</p>