

[Manuals.plus](#) /

› [Fockety](#) /

› Fockety Portable Phone for Children - Model BTERdh4czi8nmt6296-13 User Manual

Fockety BTERdh4czi8nmt6296-13

Fockety Portable Phone for Children - Model BTERdh4czi8nmt6296-13 User Manual

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Fockety Portable Phone for Children, Model BTERdh4czi8nmt6296-13. Designed for simplicity and ease of use, this device is ideal for basic communication needs. Please read this manual thoroughly before operating the phone.





Figure 1: Front view of the Fockety Portable Phone for Children. The screen shows the current time and a prompt to insert a SIM card.

2. SPECIFICATIONS

- **Model:** BTERdh4czi8nmt6296-13
- **Brand:** Fockety
- **Memory:** 32MB RAM + 32MB ROM
- **Battery:** 2600 mAh Li-ion (included)
- **Card Slot:** Supports Dual SIM (Medium card + Small card)
- **Languages:** English (default), Arabic, Thai, Vietnamese, Portuguese, Russian, Indonesian, Turkish, French, Spanish, Persian, German, Italian, Hebrew, Malay
- **Material:** Plastic
- **Weight:** Approximately 121 grams (4.3 ounces)
- **Operating System:** Simple operating system
- **Screen Size:** 3 inches
- **Connectivity:** Bluetooth
- **Input Method:** Buttons
- **Features:** Dual SIM Dual Standby, Music Player, Video Player, Camera, Alarm Clock, Class Mode, Vibration,





Figure 2: Rear view of the phone, highlighting the camera module and the device's overall design.

3. SETUP

3.1 Package Contents

Before starting, ensure all items are present in the package:

- 1 x Fockety Portable Phone
- 1 x Data Cable (for charging)
- 1 x Phone Case
- 1 x English User Manual



Figure 3: The phone displayed with its included accessories, a protective case and a charging cable.

3.2 Inserting SIM Cards

1. Locate the SIM card slot(s) on the device. Refer to the diagram in the manual if available.
2. Carefully insert your Medium and/or Small SIM cards into the designated slots. Ensure they are correctly oriented.
3. Close the SIM card tray or cover securely.

3.3 Charging the Device

1. Connect the provided data cable to the phone's charging port.

2. Connect the other end of the cable to a compatible USB power adapter (not included) or a computer's USB port.
3. The battery indicator on the screen will show charging status. Charge the phone fully before first use.

3.4 Powering On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select 'Power Off' from the options on the screen.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

The phone features a simple button interface for navigation. Use the directional keys and the central selection button to move through menus and confirm selections. The 'Menu' and 'Contacts' options are typically accessible directly from the home screen.



Figure 4: The phone in use, showing the home screen with navigation options.

4.2 Making and Receiving Calls

- **To Make a Call:** Enter the phone number using the keypad and press the Call button (usually green).
- **To Receive a Call:** When the phone rings, press the Call button to answer.

4.3 Speed Dial and Family Numbers

The phone supports up to nine groups of family numbers for quick dialing. This feature allows users to dial pre-set emergency or important contacts with a single key press without navigating through the contact list.

1. Access the Speed Dial settings through the phone's menu.
2. Assign desired phone numbers to the available speed dial slots (e.g., keys 2-9).
3. To use, press and hold the assigned number key on the keypad.

4.4 Multimedia Functions

The device includes basic multimedia capabilities:

- **Music Player:** Play audio files stored on the phone or an inserted memory card (if supported).
- **Video Player:** View video files.
- **Camera:** Capture photos. Access the camera application from the main menu.

4.5 Alarm Clock

Set alarms for reminders or wake-up calls. Navigate to the 'Alarm' option in the menu to configure alarm times and settings.

4.6 Class Mode (No Call in Class)

This feature allows users to prevent incoming calls or notifications during specific periods, such as school hours. Consult the phone's settings menu for 'Class Mode' or 'Do Not Disturb' options to configure activation times.

4.7 Bluetooth Dialing

The phone supports Bluetooth connectivity, enabling it to connect with compatible devices for functions like hands-free calling or data transfer. Refer to the Bluetooth settings in the menu to pair with other devices.

5. MAINTENANCE

5.1 Cleaning the Device

To clean your phone, use a soft, dry, lint-free cloth. Avoid using harsh chemicals, cleaning solvents, or abrasive materials, as these can damage the phone's surface or internal components.

5.2 Battery Care

- Avoid exposing the phone to extreme temperatures (hot or cold), as this can affect battery life and performance.
- Do not puncture, disassemble, or modify the battery.
- If the phone will not be used for an extended period, charge it to about 50% before storing.

5.3 Storage

Store the phone in a cool, dry place away from direct sunlight and moisture when not in use.

6. TROUBLESHOOTING

If you encounter issues with your Fockety Portable Phone, refer to the following common solutions:

Problem	Possible Solution
Phone does not power on	Ensure the battery is charged. Connect the phone to a charger and try again.
"Please insert SIM card" message	Check if the SIM card(s) are correctly inserted. Power off the phone, reinsert the SIM, and power on again.
Cannot make or receive calls	Verify SIM card insertion and network signal strength. Ensure your account is active with your service provider.
Battery not charging	Check the charging cable and adapter for damage. Try a different USB port or power source.
Screen is unresponsive or frozen	Perform a soft reset by pressing and holding the Power button until the phone restarts.

7. WARRANTY AND SUPPORT

Fockety offers a 24-month warranty or refund for this product. If you have any questions or require assistance regarding your purchase, please contact customer support. We aim to resolve any issues within 24 hours.

For further support, please refer to the contact information provided with your purchase documentation or visit the official Fockety website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BD5W42XR>

More documents and user manuals: <https://manuals.plus/>