

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY NE900UD Replacement Remote Control User Manual for Emerson, Funai, and Sylvania TVs

ECONTROLLY NE900UD

ECONTROLLY NE900UD Replacement Remote Control User Manual

For Emerson, Funai, and Sylvania Televisions

INTRODUCTION

This manual provides instructions for the setup, operation, and basic maintenance of your ECONTROLLY NE900UD replacement remote control. This remote is designed to be compatible with various Emerson, Funai, and Sylvania television models, offering a straightforward solution for controlling your TV.

SETUP: BATTERY INSTALLATION

The NE900UD remote control requires two (2) AAA alkaline batteries for operation. No programming is required after battery installation.

1. **Locate the Battery Compartment:** Turn the remote control over. The battery compartment cover is located on the back.
2. **Open the Cover:** Gently slide the battery compartment cover downwards or press the latch and lift to open it.
3. **Insert Batteries:** Insert two new 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect insertion can prevent the remote from functioning.
4. **Close the Cover:** Slide the battery compartment cover back into place until it clicks securely.

Your remote control is now ready for use with your compatible television.



Image: Side view of the NE900UD remote control, illustrating the general shape and the location of the battery compartment on the underside.

OPERATING INSTRUCTIONS

This section outlines the primary functions of the buttons on your NE900UD remote control.





Image: Front view of the NE900UD remote control, showing the layout of all control buttons.

- **POWER:** Turns the television on or off.
- **MENU:** Accesses the TV's main menu for settings and options.
- **DISPLY (Display):** Shows current channel information or other on-screen display details.

- **GAME:** Switches the TV to game mode or a specific game input.
- **VOL (+/-):** Adjusts the volume level up or down.
- **CH (Channel +/-):** Changes the television channel up or down.
- **MUTE:** Silences or restores the television's audio.
- **CH RET (Channel Return):** Switches back to the previously viewed channel.
- **INPUT SELECT:** Cycles through available input sources (e.g., HDMI 1, AV, Component).
- **SLEEP:** Sets a timer for the TV to automatically turn off.
- **Number Pad (0-9, +100):** Directly enters channel numbers. The "+100" button may be used for channels 100 and above or for quick access to higher channels.
- **Navigation Arrows (Up, Down, Left, Right) and OK/Enter:** Used to navigate menus and confirm selections.

Compatible TV Models:

This remote control is compatible with a range of Emerson, Funai, and Sylvania TV models, including but not limited to:

- **Emerson TV Models:** EWL20S5, EWL2005, EWL20S5A, EWL20S5C, EWL20S5B
- **Funai Symphonic TV Models:** CSTL1506, CSTL2006, CSL1505
- **Sylvania TV Models:** 6615LCT, 6620LCT, SSL2006, 6615LF, 6615LG, 6615LF4, 6620LF, 6620LF4, 6615LFP, 6620LG, 6620LFP, 6620LGA

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new 1.5V AAA alkaline batteries. Do not mix old and new batteries or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the device. Store the remote in a cool, dry place.
- **Avoid Damage:** Do not drop the remote control, expose it to extreme temperatures, or immerse it in water.

TROUBLESHOOTING

Problem	Solution
Remote control is not working.	• Ensure batteries are inserted correctly with the correct polarity (+/-). • Replace old batteries with new 1.5V AAA alkaline batteries. • Check for any obstructions between the remote and the TV's infrared sensor. • Ensure you are within the effective range and pointing the remote directly at the TV.
Some buttons are unresponsive.	• Clean the remote control, especially around the unresponsive buttons, to remove dirt or debris. • Replace batteries, as low power can sometimes cause intermittent button functionality.
Remote works intermittently.	• Replace batteries. • Ensure there are no strong light sources (like direct sunlight or fluorescent lights) interfering with the IR signal.

SPECIFICATIONS

- **Model:** NE900UD
- **Brand:** ECONTROLLY
- **Power Supply:** 2 x 1.5V AAA Alkaline Batteries (not included)
- **Compatible Devices:** Television
- **Product Dimensions:** Approximately 5 x 1.5 x 0.5 inches (12.7 x 3.8 x 1.3 cm)
- **Item Weight:** Approximately 1.13 ounces (32 grams)
- **Color:** Black
- **Special Feature:** Ergonomic design

SUPPORT AND CONTACT

If you encounter any issues not covered in this manual or require further assistance, please do not hesitate to contact our customer support. We are here to help with any queries you may have regarding your ECONTROLLY NE900UD remote control. *Contact information is typically provided by your retailer or on the product packaging.*

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0BD6QKKGC>

More documents and user manuals: <https://manuals.plus/>