

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› User Manual for ECONTROLLY RC-681M Replacement Remote Control

ECONTROLLY RC-681M

User Manual

ECONTROLLY RC-681M Replacement Remote Control

1. PRODUCT OVERVIEW

The ECONTROLLY RC-681M is a replacement remote control designed for various Onkyo AV Receiver models. This remote provides full functionality without the need for complex programming, offering a straightforward solution for controlling your audio-visual system.

Compatible Onkyo AV Receiver Models:

- HT-R550, HT-R508, HT-SR800, HT-R557, HT-SR750
- TX-SR575, TX-SR8550, TX-SR505, TX-SR505E, TX-SR505B, TX-SR575B
- HT-SP904, HT-SP904B
- SKB-550, SKC-550C, SKF-550F, SKM-550S, SKW-550

2. SETUP AND BATTERY INSTALLATION

The RC-681M remote control requires two (2) 1.5V AA alkaline batteries for operation. No programming or pairing is necessary; simply install the batteries, and the remote will be ready for immediate use with compatible Onkyo AV Receivers.

Battery Installation Steps:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) 1.5V AA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.







Image: Front view of the ECONTROLLY RC-681M remote control, showing all buttons and layout. This image helps users identify the remote and its various functions.

3. OPERATING INSTRUCTIONS

The RC-681M remote control is designed to replicate the functions of your original Onkyo AV Receiver remote. Familiarize yourself with the button layout to effectively control your device.

Key Functions:

- **STANDBY/ON:** Powers the AV Receiver on or off.
- **INPUT SELECTOR (VCR/DVR, CBL/SAT, AUX, MULTI CH, DVD, CD, MD/CDR, DOCK, TV, VCR, CABLE, SAT):** Selects the desired input source for your receiver.
- **VOLUME (+/-):** Adjusts the master volume level.
- **Muting:** Mutes or unmutes the audio output.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Used for menu navigation and selection.
- **SETUP:** Accesses the receiver's setup menu.
- **RETURN:** Goes back to the previous menu or screen.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip):** Controls media playback for connected devices.
- **LISTENING MODE (STEREO, SURROUND):** Switches between different audio listening modes.
- **DISPLAY:** Toggles on-screen display information.





Image: An angled view of the ECONTROLLY RC-681M remote control, highlighting its ergonomic design and button placement for easy access.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your remote control.

Cleaning:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Ensure no liquid enters the remote.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads.

Battery Care:

- Replace batteries when the remote's response becomes sluggish or stops working.
- Remove batteries if the remote will not be used for an extended period to prevent leakage and damage.
- Dispose of used batteries responsibly according to local regulations.

5. TROUBLESHOOTING

If you encounter issues with your RC-681M remote control, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly inserted batteries.	Replace batteries with new 1.5V AA alkaline batteries, ensuring correct polarity (+/-).
Remote works intermittently	Low battery power; obstruction between remote and receiver.	Replace batteries. Ensure a clear line of sight to the AV Receiver's infrared sensor.
Specific buttons not working	Dirt or debris under the button; remote damage.	Clean the remote surface. If the issue persists, the remote may be damaged and require replacement.

6. SPECIFICATIONS

- **Model:** RC-681M
- **Brand:** ECONTROLLY
- **Power Supply:** 2 x 1.5V AA Alkaline Batteries (not included)
- **Dimensions:** Approximately 5 x 1.5 x 0.5 inches (12.7 x 3.8 x 1.3 cm)
- **Item Weight:** Approximately 2 ounces (56.7 grams)
- **Compatibility:** Designed for specific Onkyo AV Receiver models (refer to Product Overview section for list).

7. SUPPORT

For any queries or further assistance regarding your ECONTROLLY RC-681M remote control, please feel free to contact our customer support. While no specific warranty information is provided, we are committed to ensuring your satisfaction with our products.

Please note: Batteries and a detailed manual are not included in the product package. This document serves as a comprehensive guide for setup and operation.

