

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY Voice Replacement Remote Control for Onn Android TV 4K UHD Stick TV Box Models 100024646 and 100026240 User Manual

ECONTROLLY 100024646 100026240

ECONTROLLY Voice Replacement Remote Control User Manual

For Onn Android TV 4K UHD Stick TV Box Models 100024646 & 100026240

INTRODUCTION

This manual provides instructions for the ECONTROLLY Voice Replacement Remote Control, designed for use with Onn Android TV 4K UHD Stick TV Box models 100024646 and 100026240. Please read this manual thoroughly before using the remote control to ensure proper operation and to maximize your user experience.

PRODUCT OVERVIEW

The ECONTROLLY Voice Replacement Remote Control offers a full range of functions for your Onn Android TV device, including voice control capabilities. Familiarize yourself with the remote's layout and buttons.





Image 1: Front view of the ECONTROLLY Voice Replacement Remote Control. It features a white body with various control buttons, including a circular navigation pad, volume controls, and dedicated app buttons for YouTube, Netflix, Disney+, and HBO Max.

Button Functions:

- **Power Button:** Turns the Onn Android TV device on or off.
- **Voice Assistant Button:** Activates the voice control feature for commands and searches.
- **Navigation Pad (Circular):** Used to navigate menus and select items.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Returns to the main home screen.
- **Volume Up/Down:** Adjusts the audio volume.

- **Mute Button:** Mutes or unmutes the audio.
- **Dedicated App Buttons:** Quick access to YouTube, Netflix, Disney+, and HBO Max.
- **Settings Button:** Accesses device settings.
- **Input/Source Button:** Changes the input source.

SETUP

1. Battery Installation

The remote control requires two (2) 1.5V AAA alkaline batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

Note: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

2. Pairing Instructions

Pairing is required for the remote control to function with your Onn Android TV 4K UHD Stick TV Box. Follow these steps to pair the remote:

1. Ensure your Onn Android TV device is powered on and connected to your TV.
2. Navigate to the **Settings** menu on your Onn Android TV device. You may need to use your original remote or a connected keyboard/mouse for initial navigation if the new remote is not yet paired.
3. Within **Settings**, look for options such as "**Remotes & Accessories**" or "**Bluetooth Devices**".
4. Select "**Add Accessory**" or "**Pair New Device**".
5. On the ECONTROLLY remote control, press and hold the **Home button** and the **Back button** simultaneously for approximately 5-10 seconds. The LED indicator on the remote (if present) may flash to indicate pairing mode.
6. Your Onn Android TV device should detect the "ECONTROLLY Remote" or a similar device name. Select it from the list to complete the pairing process.
7. Once paired, a confirmation message should appear on your TV screen. Test the remote's functions to ensure successful pairing.

Important: If pairing fails, ensure the remote is close to the TV box and repeat the steps. If issues persist, try replacing the batteries.

OPERATING INSTRUCTIONS

Basic Navigation

- Use the **Navigation Pad** (up, down, left, right) to move through menus and content.
- Press the **Center Button** of the Navigation Pad to select an item.
- Press the **Back Button** to return to the previous screen or menu.
- Press the **Home Button** to go directly to the main home screen of your Onn Android TV.

Voice Control

The remote features a voice control function for hands-free operation and quick searches.





Image 2: The ECONTROLLY remote control shown alongside a microphone icon, indicating its voice control capability. The voice assistant button is located near the top of the remote.

1. Press and hold the **Voice Assistant Button** (often depicted as a microphone icon or Google Assistant logo).
2. Speak clearly into the remote's microphone.
3. Release the button when you have finished speaking.

Examples of Voice Commands: "Open Netflix," "Search for action movies," "Play music by [artist]," "What's the weather?"

Dedicated App Buttons

Press the dedicated buttons for YouTube, Netflix, Disney+, or HBO Max to launch these applications directly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is unresponsive.	Low or dead batteries. Remote is not paired. Obstruction between remote and device.	Replace batteries. Re-pair the remote control (refer to "Pairing Instructions"). Ensure a clear line of sight.
Voice control not working.	Remote not paired correctly. Microphone blocked. Internet connection issue.	Ensure remote is paired. Check for obstructions over the microphone. Verify internet connectivity of your Onn Android TV device.
Buttons are not working correctly.	Remote not paired. Software glitch on TV box.	Re-pair the remote. Restart your Onn Android TV device by unplugging it from power for 30 seconds and plugging it back in.
Remote frequently disconnects.	Interference. Low batteries.	Ensure no other Bluetooth devices are causing interference. Replace batteries. Try re-pairing.

SPECIFICATIONS

- **Brand:** ECONTROLLY
- **Model Numbers:** 100024646, 100026240
- **Compatible Devices:** Onn Android TV 4K UHD Stick TV Box
- **Power Supply:** 2 x 1.5V AAA Alkaline Batteries (not included)
- **Special Feature:** Voice Search
- **Product Dimensions:** 5 x 1.5 x 0.5 inches (approximately)
- **Item Weight:** 1.41 ounces (approximately)

SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact ECONTROLLY customer support. Refer to your product packaging or purchase documentation for specific contact information.

Note: Batteries and a physical manual are not included with the product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question