

## iDOO ID-EM002-N1

# iDOO Cordless Electric Mop Instruction Manual

Model: ID-EM002-N1

Brand: iDOO

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the iDOO Cordless Electric Mop. Keep this manual for future reference.

- Use only clean water or diluted non-foaming cleaning solutions in the water tank. Foaming solutions can clog the nozzle.
- Do not immerse the main unit or battery in water.
- Ensure the battery is fully charged before first use.
- Charge the appliance promptly for better battery life. If not frequently used, charge every two weeks.
- Do not turn on the appliance while charging.
- If the LED head indicators flash and the machine stops, locked-motor protection is triggered. Restart the machine to resolve.
- Keep the appliance out of reach of children.

## 2. PRODUCT OVERVIEW & COMPONENTS

---

The iDOO Cordless Electric Mop is designed for efficient floor cleaning across various surfaces.



Figure 2.1: iDOO Cordless Electric Mop and Included Components

### Included Components:

- 1 x Electric Mop Head
- 1 x Power Handle
- 1 x Extendable Tube
- 1 x 2600 mAh Battery
- 2 x AAA Battery (for handle spray button)
- 4 Pcs Mop Pads (2 cleaning, 2 waxing)
- 1 x Charging Adapter
- 1 x User Manual

## 3. SETUP

---

### 3.1 Assembly

1. Attach the extendable aluminum tube to the main unit by locking the retaining pin.
2. Attach the handle to the extendable aluminum tube.
3. Insert 2 AAA batteries into the handle for the spray button.
4. Attach the battery pack to the main unit.



Figure 3.1: Visual guide for assembling the mop components.

### 3.2 Charging the Battery

Before first use, fully charge the 2600 mAh detachable battery. Connect the charging adapter to the battery pack and plug it into a power outlet. The indicator light will be red while charging and turn green when fully charged.

# Detachable Battery

Quickly cleans up to **2,350** square feet



Fast Charging



Figure 3.2: The detachable battery being charged via the charging adapter.

## 3.3 Filling the Water Tank

Detach the transparent water tank from the main unit. Unscrew the cap and fill with clean water or diluted non-foaming cleaning solution. The tank has a 350ml capacity. Do not add too much cleaner to avoid foaming or clogging. Screw the cap back on and place the tank back into the main unit.



Figure 3.3: The transparent water tank being filled with water.

## 4. OPERATING INSTRUCTIONS

### 4.1 Powering On/Off

Press the power button on the handle to turn the mop on or off. The dual-motors will begin spinning the mop pads at up to 280r/Min.

### 4.2 Spray Function

Press the spray button on the handle to release water or cleaning solution from the nozzle. The LED headlight will illuminate the area in front of the mop, helping to spot dirt easily.

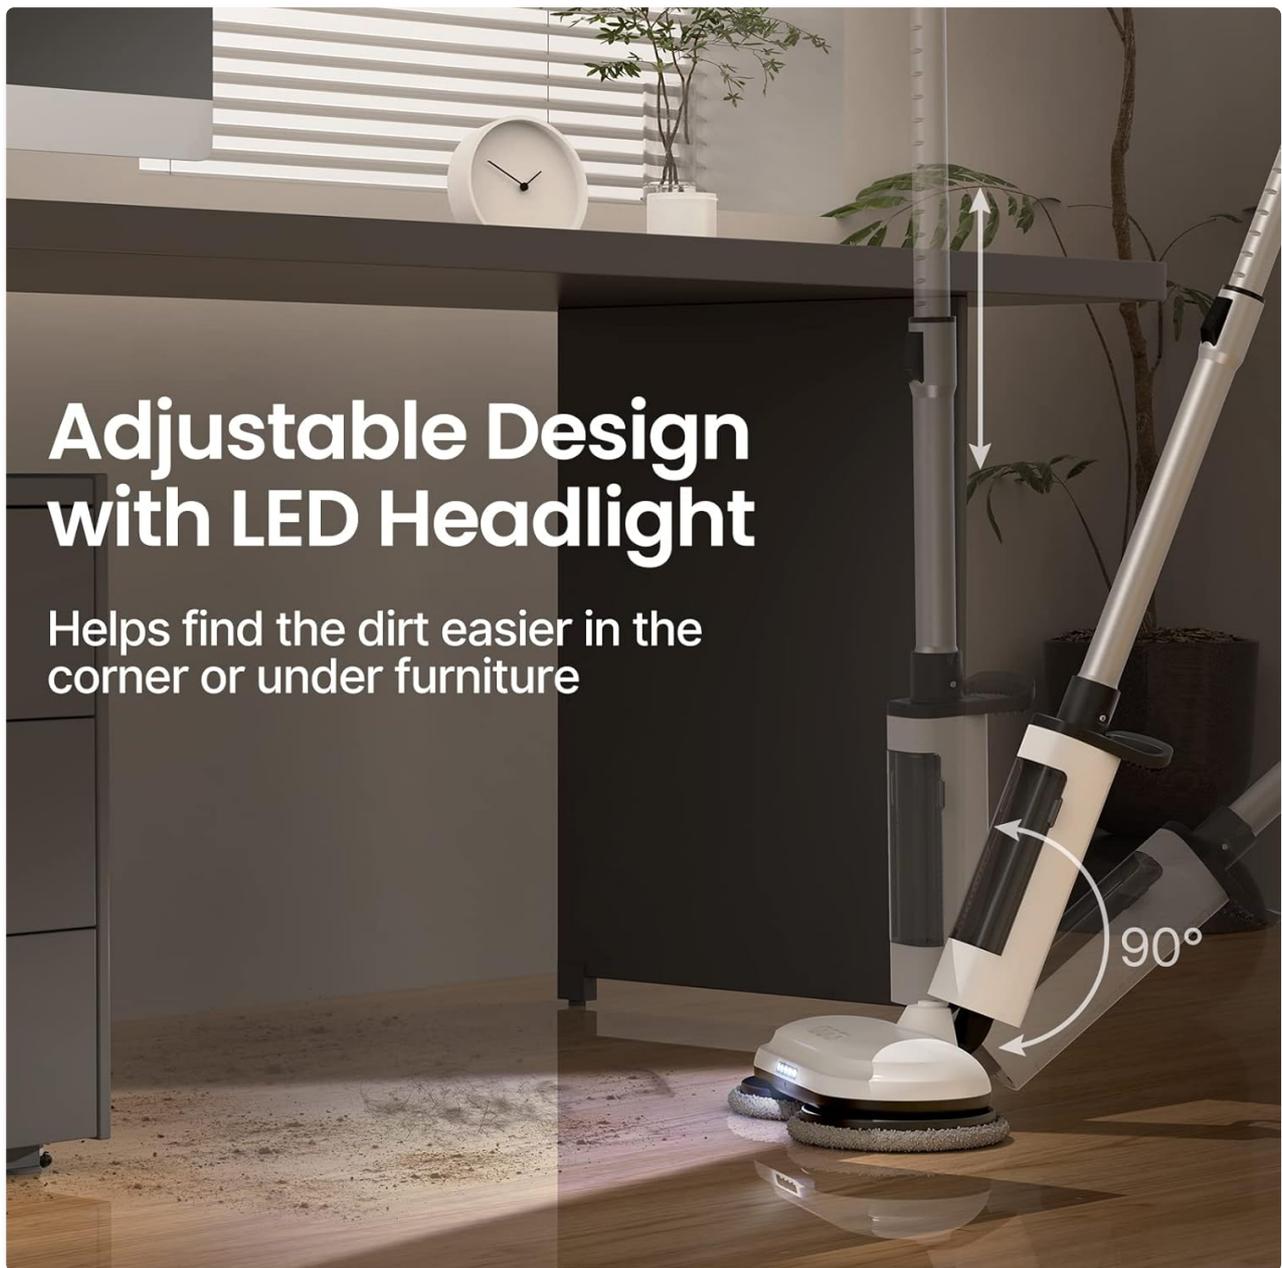


Figure 4.1: The mop's adjustable design and LED headlight in use.

### 4.3 Maneuverability & Self-Propelled Feature

The mop features a flexible design, allowing the tube to swing 180° from left to right and 90° from front to back. The dual-motors provide a self-propelled motion, making mopping effortless. Simply twist the handle slightly to

change direction.



Figure 4.2: The mop's flexible handle allows for easy maneuverability.

#### 4.4 Floor Types

The iDOO Electric Mop is suitable for most hard floor surfaces, including hardwood, tile, laminate, vinyl, and marble floors.

## 4 in 1 Electric Mop

Dry Mop/ Wet Mop/ Polisher/ Scrubber



▲  
Laminate Floor



▲  
Hardwood Floor



▲  
Tile Floor



▲  
Marble Floor

Figure 4.3: The mop is effective on various hard floor types.

## 5. MAINTENANCE

### 5.1 Cleaning Mop Pads

The mop pads are machine washable. After use, detach the pads and wash them according to their care instructions. Ensure they are dry before reattaching.



Figure 5.1: The mop pads are easily detachable and machine washable.

### 5.2 Cleaning Water Tank and Nozzle

Regularly clean the water tank and nozzle to prevent clogging, especially if using cleaning solutions. If the nozzle becomes clogged, gently stroke it with a thin needle to clear it.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Mop not turning on / Battery not working	Battery not charged or faulty.	Ensure battery is fully charged. Contact customer support for battery replacement if within warranty (1 year).
Sprayer not working	Nozzle or pump clogged by foaming solution.	Use only diluted non-foaming cleaning solution. Clean nozzle regularly; gently stroke with a thin needle if clogged.
LED head indicators flashing and machine stops	Locked-motor protection triggered.	Restart the machine.
Streaking on floors	Too much cleaning solution or improper solution used.	Reduce amount of cleaning solution. Ensure solution is non-foaming and diluted as per instructions.

## 7. PRODUCT SPECIFICATIONS

---

- **Model Number:** ID-EM002-N1
- **UPC:** 840191404047
- **Brand:** iDOO
- **Color:** White
- **Product Dimensions:** 13.78 x 6.69 x 53.54 inches
- **Item Weight:** 6.6 pounds
- **Handle Material:** Eco-Friendly ABS, Aluminum
- **Head Material:** Plastic & Metal
- **Battery:** 2600 mAh (rechargeable)
- **Water Tank Volume:** 350 Milliliters
- **Motor Speed:** Up to 280r/Min
- **Noise Level:** As low as 46 dB

## 8. WARRANTY & SUPPORT

---

The iDOO Cordless Electric Mop comes with a 1-year warranty. For any issues or support, please contact iDOO customer service.