

[Manuals.plus](#) /

› [PayLessHere](#) /

› PayLessHere 43-inch Charcoal Outdoor BBQ Grill Instruction Manual

PayLessHere Outdoor BBQ Grill Camping Grill

PayLessHere 43-inch Charcoal Outdoor BBQ Grill Instruction Manual

Model: Outdoor BBQ Grill Camping Grill | Brand: PayLessHere

1. INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your PayLessHere 43-inch Charcoal Outdoor BBQ Grill. Designed for versatility, this grill features a main cooking chamber and an offset smoker box, allowing for various cooking methods including grilling, smoking, and roasting. Its portable design with integrated wheels makes it suitable for patios, backyards, and camping.

2. SAFETY INFORMATION

- **Outdoor Use Only:** Never use this grill indoors or in enclosed areas. Ensure adequate ventilation.
- **Stable Surface:** Always place the grill on a flat, stable, non-combustible surface away from flammable materials, structures, and vegetation.
- **Keep Children and Pets Away:** Maintain a safe distance between the hot grill and children or pets.
- **Use Caution with Charcoal:** Only use charcoal briquettes or lump charcoal. Never use gasoline, kerosene, or alcohol to light charcoal. Use a charcoal chimney starter or approved charcoal lighter fluid.
- **Hot Surfaces:** The grill surfaces become extremely hot during use. Use heat-resistant gloves and appropriate tools.
- **Ash Disposal:** Allow ashes to cool completely before disposing of them. Never dispose of hot ashes in combustible containers.
- **Fire Extinguisher:** Keep a fire extinguisher or a bucket of sand readily available in case of a grease fire.

3. ASSEMBLY INSTRUCTIONS

Assembly of your charcoal grill requires careful attention to detail. Please read and understand all instructions before beginning. While assembly is not overly difficult, it may appear challenging at first glance. It is recommended to have a

second person assist with certain steps.

General Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the included parts list (not provided in this manual, refer to your product packaging).
2. **Assemble the Frame:** Attach the legs and support bars to form the main frame of the grill. Ensure all connections are secure.
3. **Attach Wheels:** Secure the wheels to the designated leg assembly for easy mobility.
4. **Mount Main Grill Body:** Place the main cooking chamber onto the assembled frame and secure it with the provided hardware.
5. **Install Offset Smoker Box:** Attach the offset smoker box to the side of the main cooking chamber.
6. **Attach Handles and Shelves:** Install the lid handles, side shelf, and any other accessory handles.
7. **Insert Grates and Trays:** Place the cooking grates, charcoal grates, and ash trays into their respective positions.
8. **Install Thermometer and Chimney:** Secure the temperature monitor on the main lid and attach the chimney to the smoker box.

Note: If you encounter any difficulties or have questions during assembly, please contact customer support.



Image: The PayLessHere 43-inch Charcoal Outdoor BBQ Grill with both the main cooking chamber and offset smoker box lids open, showing the internal grates and structure.

4. SETUP

Placement:

Position your grill in a safe, open outdoor area. The integrated wheels allow for easy movement across various surfaces such as sandstone, asphalt, grass, or wooden decks.

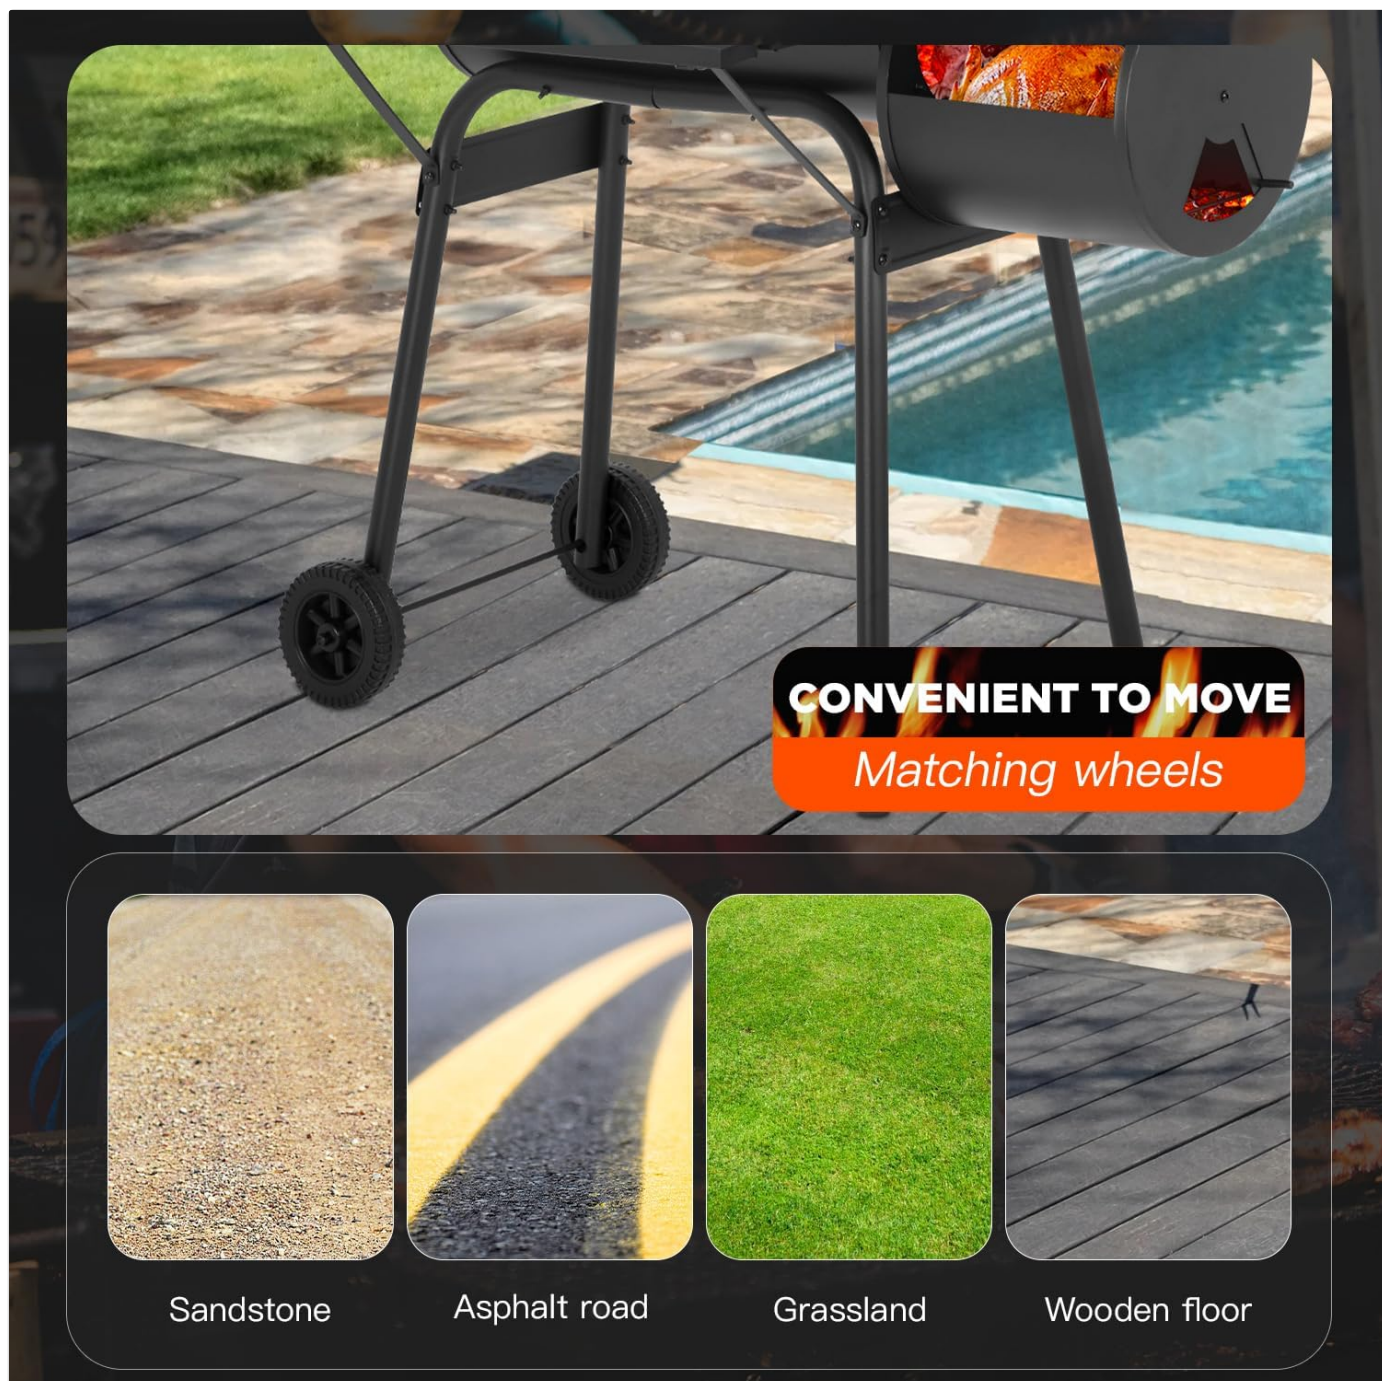


Image: Close-up of the grill's wheels, demonstrating its suitability for movement across different outdoor terrains like sandstone, asphalt, grass, and wooden floors.

Initial Burn-In:

Before cooking food for the first time, perform an initial burn-in to remove any manufacturing residues. Load the charcoal tray with a small amount of charcoal, light it, and allow it to burn for 30-60 minutes with the lids closed. Ensure the grill reaches a high temperature. Let the grill cool completely afterward.

5. OPERATING INSTRUCTIONS

Lighting Charcoal:

1. Open the main grill lid and the offset smoker box lid.
2. Place charcoal on the charcoal grate in the main chamber or the offset smoker box, depending on your cooking method.
3. Use a charcoal chimney starter or a small amount of approved lighter fluid to ignite the charcoal. Allow charcoal to

ash over before spreading.

4. Once the charcoal is ready, spread it evenly or arrange it for indirect cooking.

Temperature Control:

This grill features a built-in thermometer on the main lid and an adjustable fire control vent on the offset smoker box, along with a chimney for smoke and heat release. These components allow for precise temperature management.

- **Thermometer:** Monitor the internal temperature of the main cooking chamber using the integrated thermometer.
- **Fire Adjustment:** Use the adjustable vent on the offset smoker box to control airflow to the charcoal, thereby regulating the heat. Opening the vent increases airflow and temperature; closing it reduces airflow and temperature.
- **Chimney:** The chimney on the offset smoker box allows smoke and excess heat to escape, contributing to overall temperature stability and smoke flavor.



Image: Detailed view highlighting the built-in thermometer on the main lid, the chimney for smoke exhaust, and the adjustable fire control vent on the offset smoker box.

Cooking Modes:

The dual-chamber design offers multiple cooking options:

- **American Braised Roast:** Utilize the offset smoker box for slow cooking and infusing smoky flavors into larger cuts of meat.
- **Chinese Skewer Roast:** The main grilling area is ideal for direct heat cooking of skewers and other items requiring higher temperatures.
- **Fried Roast:** The main chamber can also be used for direct heat cooking, suitable for various fried or seared items.

The grill features double grilling nets, allowing you to add charcoal to the lower grate while cooking on the upper grate, maintaining consistent heat without disturbing your food.



Image: The grill showcasing its main cooking chamber and the smaller side smoker box, illustrating how a chicken can fit in the side space and multiple foods in the main space.

6. MAINTENANCE

Cleaning After Each Use:

- **Grates:** Once the grill has cooled, use a grill brush to remove food residue from the cooking grates.
- **Ash Disposal:** Ensure all ashes are completely cool before removing the ash tray and disposing of them safely.
- **Exterior:** Wipe down the exterior surfaces with a damp cloth. Avoid abrasive cleaners that could damage the finish.

Seasonal Maintenance:

- **Deep Cleaning:** Periodically perform a more thorough cleaning of all internal components.
- **Rust Prevention:** Apply a light coat of cooking oil to the cast iron grates to prevent rust, especially before long-term storage.
- **Storage:** Store the grill in a dry, covered area when not in use, preferably with a grill cover, to protect it from the elements.

7. TROUBLESHOOTING

- **Difficulty Controlling Temperature:** Ensure the fire adjustment vent and chimney damper are properly positioned. Adjust charcoal quantity as needed. Wind conditions can also affect temperature stability.
- **Uneven Cooking:** Distribute charcoal evenly for direct grilling. For indirect cooking, ensure food is positioned away from the direct heat source. Rotate food as necessary.
- **Excessive Smoke:** This is normal for charcoal grilling, especially during initial lighting or when adding wood chips for smoking. Ensure proper ventilation through the chimney.
- **Food Sticking to Grates:** Ensure grates are clean and lightly oiled before placing food. Preheat the grill properly.

8. SPECIFICATIONS



Image: Diagram showing the overall dimensions of the grill: 24 inches deep, 43.3 inches wide, and 44.5 inches high.

Feature	Detail
Brand	PayLessHere
Model Name	Outdoor BBQ Grill Camping Grill
Product Dimensions (D x W x H)	24"D x 43"W x 44"H
Item Weight	35 Pounds
Outer Material	Alloy Steel
Inner Material	Steel
Color	Black
Fuel Type	Charcoal
Power Source	Manual Winding
UPC	195030077594

9. WARRANTY AND SUPPORT

Warranty Information:

This PayLessHere Charcoal Outdoor BBQ Grill comes with a**90-day warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

Customer Support:

If you have any questions regarding assembly, operation, maintenance, or warranty, please do not hesitate to contact PayLessHere customer support. Our team is available to assist you.

For assistance, please refer to the contact information provided with your purchase or visit the official PayLessHere website.

© 2026 PayLessHere. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question