

[Manuals.plus](#) /

> [Jerify](#) /

> [Jerify 9 ft Wide Christmas Inflatable Santa Claus Reindeer on Sleigh Instruction Manual](#)

## Jerify Jerify-Christmas Inflatable-65

# Jerify 9 ft Wide Christmas Inflatable Santa Claus Reindeer on Sleigh Instruction Manual

Model: Jerify-Christmas Inflatable-65

## INTRODUCTION

This manual provides essential instructions for the safe and proper setup, operation, and maintenance of your Jerify 9 ft Wide Christmas Inflatable Santa Claus Reindeer on Sleigh. Please read this manual thoroughly before installation and retain it for future reference.

## PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 1 x 9 ft Inflatable Santa Claus Reindeer Sleigh
- 1 x Fixed Sandbag (pre-installed or separate)
- 2 x Fasten Ropes
- 4 x Ground Stakes
- 1 x Power Plug / UL Power Adapter
- 1 x Built-in Blower
- Built-in LED Lights



Image: Overview of the inflatable and its included accessories, such as ropes, stakes, and power adapter.

## SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, observe the following safety precautions:

- Do not inflate during strong winds or storms.
- Ensure the power cord and adapter are protected from water and moisture.
- Keep away from open flames or heat sources.
- Do not allow children to play with the inflatable or its components unsupervised.
- Always unplug the inflatable when not in use or during maintenance.
- Use only the provided power adapter.

## SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the inflatable and all accessories from the packaging.

2. **Position:** Choose a flat, clear area in your yard for placement. Ensure there are no sharp objects that could puncture the material.
3. **Spread Out:** Lay the inflatable flat on the ground.
4. **Secure Zipper:** Locate the zipper on the inflatable and ensure it is fully closed to prevent air leaks.
5. **Connect Power:** Plug the power adapter into a suitable outdoor-rated electrical outlet. The built-in blower will begin to inflate the decoration.
6. **Inflate:** Allow the inflatable to fully expand. This typically takes a few seconds. If parts get stuck, gently assist them to unfold.
7. **Anchor:** Once fully inflated, use the provided ropes and ground stakes to secure the inflatable. Attach ropes to the designated loops on the inflatable and anchor them firmly into the ground using the stakes. Distribute stakes evenly for maximum stability.



Image: Visual guide demonstrating the steps to inflate and secure the Christmas inflatable, including closing the zipper, plugging in, tying ropes, and inserting ground stakes.

## OPERATING INSTRUCTIONS

The Jerify Christmas Inflatable operates automatically once plugged in. The built-in blower will keep it inflated, and the LED lights will illuminate.

- **Inflation:** The inflatable will inflate within seconds of being plugged into a power source.
- **Lighting:** The integrated LED lights will activate when the unit is powered, providing illumination for nighttime display.
- **Deflation:** To deflate, simply unplug the power adapter. The inflatable will slowly deflate. For storage, ensure it is completely deflated and dry before folding.

## MAINTENANCE AND STORAGE

- **Cleaning:** Clean the inflatable with a damp cloth and mild soap if necessary. Do not use harsh chemicals or abrasive cleaners. Ensure it is completely dry before storage.
- **Storage:** When not in use, deflate the unit completely. Fold it neatly and store it in a cool, dry place, away from direct sunlight and pests.
- **Inspection:** Periodically inspect the inflatable, power cord, and stakes for any signs of damage or wear. Replace damaged components if necessary.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable does not inflate.	Not plugged in. Zipper is open. Power outlet malfunction. Blower obstruction or failure.	Ensure power adapter is securely plugged into a working outlet. Check that the zipper on the inflatable is fully closed. Test the outlet with another device. Inspect the blower for any blockages. If the blower motor has failed, contact customer support.
Inflatable does not stand upright or is unstable.	Insufficient anchoring. Strong winds. Uneven ground.	Ensure all ropes and ground stakes are properly installed and taut. Add additional weights (e.g., sandbags) if needed. Relocate to a more sheltered area or deflate during high winds. Move the inflatable to a flatter surface.
LED lights are not working.	Power issue. Damaged LED.	Verify the unit is powered on. If individual LEDs are out, they may be damaged. Contact customer support for assistance.

## SPECIFICATIONS

Feature	Detail
Brand	Jerify
Model Number	Jerify-Christmas Inflatable-65
Theme	Christmas
Character	Santa Claus, Reindeer
Material	Polyester
Dimensions (Inflated)	Approximately 9 ft (274 cm) Wide x 4.63 ft (141 cm) High x 1.97 ft (60 cm) Deep
Item Weight	5.92 pounds
Lighting	Built-in LED Lights (Bright White)
Power Source	UL Power Adapter (included)

# Product Size



Image: Diagram showing the approximate dimensions of the inflated Santa Claus and Reindeer sleigh decoration.

## WARRANTY AND SUPPORT

For warranty information or technical support, please contact Jerify customer service through the retailer where the product was purchased. Please have your model number (Jerify-Christmas Inflatable-65) and purchase date available. You may also visit the official Jerify store for more information: [Jerify Store on Amazon](#)

