

[Manuals.plus](#) /

› [SZFIXEZ](#) /

› SZFIXEZ Electric Spin Scrubber SXT-160 User Manual

## SZFIXEZ SXT-160

# SZFIXEZ Electric Spin Scrubber

Model: SXT-160

## INTRODUCTION

---

The SZFIXEZ Electric Spin Scrubber SXT-160 is a versatile and powerful cleaning tool designed to simplify household cleaning tasks. Featuring two adjustable speeds and a cordless design, it effectively cleans various surfaces such as tiles, tubs, sinks, walls, and more. This manual provides comprehensive instructions for the safe and efficient use, maintenance, and troubleshooting of your electric spin scrubber.



Image: The SZFIXEZ Electric Spin Scrubber, showcasing its main unit, extension poles, and a variety of interchangeable brush heads for different cleaning needs.

## SAFETY INFORMATION

---

Please read all safety instructions carefully before using the product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the entire main body of the electric spin scrubber in water. The unit is IPX5 waterproof, meaning it is resistant to water jets, but not full submersion.
- Keep the charging port dry before charging.
- Ensure the product is fully charged before first use, as long-term transportation may cause battery discharge.
- Do not use the product if it is damaged or malfunctioning.
- Keep out of reach of children and pets.
- Use only the provided charging cable and compatible power adapter (2A output recommended).
- Avoid applying excessive pressure during operation, as this may reduce efficiency or cause the brush to jump.

# IPX5 WATERPROOF CLEANING BRUSH



Note: Please do not soak the entire body  
in water and keep it dry after use



Image: Illustration of the product's IPX5 waterproof rating, indicating it is splash-resistant but should not be fully submerged.

## PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Electric Spin Scrubber Main Unit
- Extension Rods (2 pieces, one adjustable)
- USB Type-C Charging Cable
- 8 Replaceable Brush Heads:
  - Sponge Brush Head
  - Small Mop Brush Head
  - Fiber Brush Head
  - Large Bristle Brush Head
  - Anti-Wool Plate

- Pointed Brush Head
- Small Hair Brush Head
- Wide Range Brush Head
- Storage Bag
- Wall Mount Hook (for storage)



Image: A visual representation of the eight distinct brush heads provided with the scrubber, each designed for specific cleaning tasks.

## PRODUCT OVERVIEW

The SZFIXEZ Electric Spin Scrubber is designed for ease of use and effective cleaning. Key features include:

- **Ergonomic Grip:** Designed for comfortable handling and reduced slippage.
- **Power Display:** LED indicators show remaining battery life.
- **Two Adjustable Speeds:** 400 r/min (Low) and 450 r/min (High) for varied cleaning needs.

- **Telescopic Adjustment:** Allows for both short-handle (handheld) and long-handle (up to 40 inches) use.
- **Interchangeable Brush Heads:** A variety of brushes for different surfaces and cleaning requirements.
- **USB Type-C Charging:** Convenient and modern charging method.

## SETUP

---

### 1. Charging the Unit

Before first use, fully charge the electric spin scrubber. A full charge takes approximately 3 hours and provides 90-120 minutes of continuous use.

- Connect the USB Type-C charging cable to the charging port on the scrubber.
- Connect the other end of the cable to a USB power adapter (recommended output: 2A).
- The power display lights will indicate charging status. All lights illuminated mean a full charge.
- **Important:** Use a TYPE-C charging head, not a C-C charging head. Charge only when the battery is exhausted to extend product life.



# Charging Tips

Use TYPE-C charging head, not C-C charging head. Charge after the battery is exhausted. The best output power of the charging head is 2A. The correct charging method can extend the service life of the product.



Image: A visual guide providing essential charging tips for optimal battery health and product longevity.

## 2. Assembling the Scrubber

The scrubber can be assembled for short-handle or long-handle use.

- **Attaching Brush Heads:** Align the brush head with the main unit's rotating mechanism and press firmly until it clicks into place. The direction of force should be vertical.
- **For Short-Handle Use:** Simply use the main unit with a brush head attached.
- **For Long-Handle Use:**
  1. Attach one extension rod to the main unit by twisting it securely.
  2. Attach the second extension rod (the adjustable one) to the first rod, twisting to secure.
  3. Attach the handle piece to the end of the second extension rod.
  4. Adjust the length of the adjustable extension rod by twisting and extending/retracting as needed, up to 40

inches total length.

- To disassemble, reverse the steps, twisting to unlock components.

## **TWO-IN-ONE LONG AND SHORT DESIGN**

### Clean from ceiling to floor

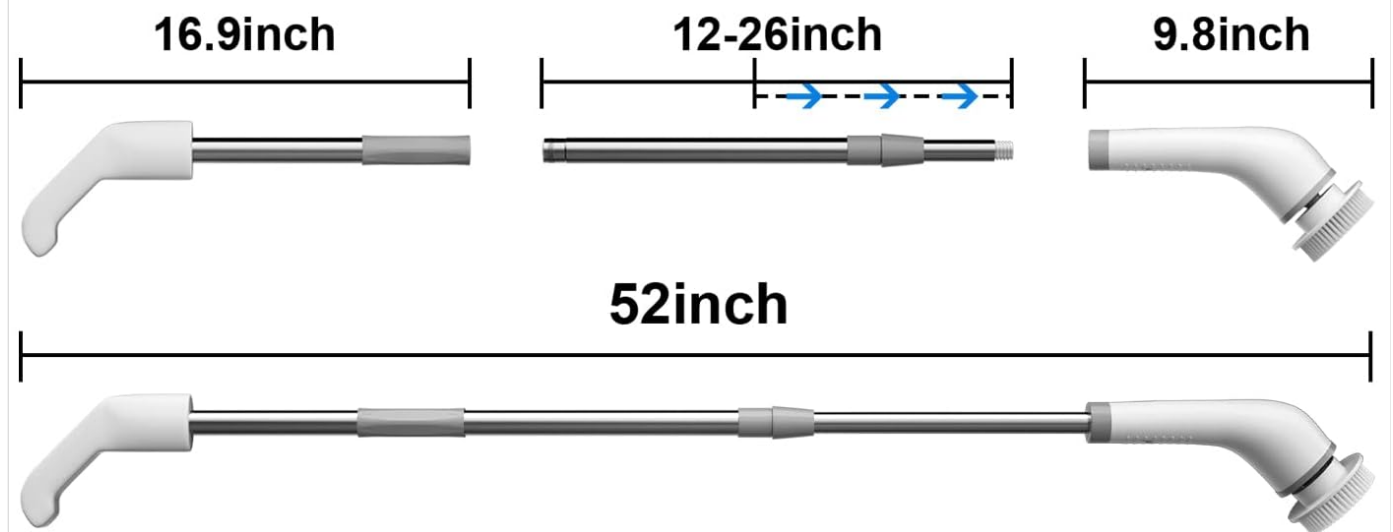


Image: The scrubber's modular design, illustrating how it can be configured for short-handle (handheld) or extended long-handle use, with approximate dimensions.

## **OPERATION**

### **1. Powering On/Off and Speed Adjustment**

- **To Power On:** Press the power button once for Low Speed (400 r/min).
- **To Switch to High Speed:** Press the power button a second time for High Speed (450 r/min).
- **To Power Off:** Press the power button a third time.

# NEWLY UPGRADED 2ND GEAR SPEED

Make cleaning deeper

**LOW  
SPEED MODE**

**400<sub>prm</sub>**

**Press the key  
once**



**HIGH  
SPEED MODE**

**450<sub>prm</sub>**

**Press the key  
twice**

Image: Visual guide demonstrating the two operational speeds of the scrubber and how to toggle between them.

## 2. Using Different Brush Heads

Select the appropriate brush head for the surface you intend to clean:

Brush Head	Recommended Use
Sponge	Efficiently clean siding, glass, and car surfaces.
Small Mop	For scrubbing glass tiles and similar smooth surfaces.
Fiber Brush	Ideal for kitchen cleaning, such as oven stovetops and sinks.
Large Bristle Brush	Suitable for cleaning large flat surface areas like floors.
Anti-Wool Plate	Designed for scrubbing the interior of cars.
Pointed Brush	Perfect for cleaning tile grout, edges, and corners.

Brush Head	Recommended Use
Small Hair Brush	For cleaning small flat surfaces.
Wide Range Brush	General cleaning for bathrooms and other broad surfaces.

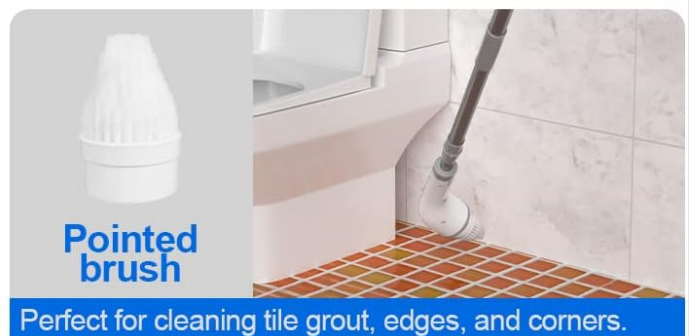
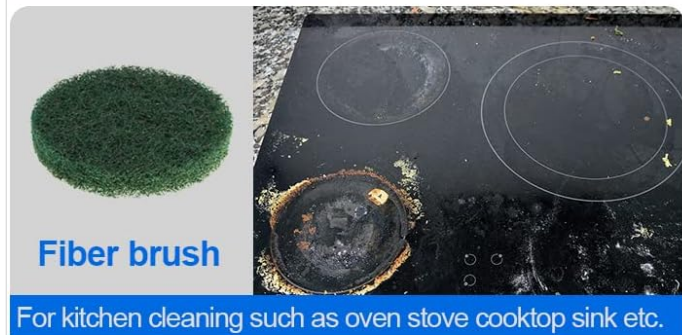


Image: A visual representation of the eight distinct brush heads provided with the scrubber, each designed for specific cleaning tasks.

### 3. General Usage Tips

- Apply appropriate cleaning solution to the surface or brush head before operating.
- Allow the scrubber to do the work; avoid pressing down too hard, as this can slow the motor or cause the brush to skip.
- For optimal results, move the scrubber in a steady, controlled motion.
- The lightweight design (0.8LB main body) reduces fatigue during extended cleaning sessions.

# MAINTENANCE

---

## 1. Cleaning the Unit

- After each use, detach the brush head and rinse it thoroughly under running water.
- Wipe the main unit and extension rods with a damp cloth. Ensure the charging port is dry before storing or recharging.
- Do not use abrasive cleaners or solvents on any part of the scrubber.

## 2. Recovering Deformed Brushes

If a brush head becomes deformed:

- Soak the deformed brush in hot water for 2-3 minutes. The bristles should gradually recover their shape.
- If some deformation persists, you can gently straighten and adjust the bristles manually.

## 3. Storage

- Store the scrubber and its accessories in a clean, dry place.
- Use the provided wall mount hook to hang the assembled long-handle scrubber for convenient storage and to keep your cleaning area tidy.
- The storage bag can be used to keep all brush heads organized.

## EASY TO STORE AND KEEP TIDY



Image: Various storage options for the electric spin scrubber and its accessories, including a wall-mounted holder and organized drawer storage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Scrubber does not turn on.	Battery is low or depleted.	Charge the unit fully (approx. 3 hours). Check power display.
Brush head stops spinning or slows down significantly.	Excessive pressure applied; battery low.	Reduce pressure on the cleaning surface. Recharge the battery.
Brush head is deformed.	Improper storage or prolonged use.	Soak in hot water for 2-3 minutes to restore shape. Manually adjust if needed.

Problem	Possible Cause	Solution
Unit not charging.	Incorrect charging cable/adaptor; faulty cable/port.	Ensure using TYPE-C cable and 2A output adapter. Check cable and port for damage. Contact support if issue persists.

## SPECIFICATIONS

Feature	Detail
Model Number	SXT-160
Brand	SZFIXEZ
Speeds	2 (400 r/min, 450 r/min)
Maximum Power	40W
Battery Type	Lithium Ion (1 included)
Charging Time	Approx. 3 hours
Continuous Use Time	Approx. 90-120 minutes
Charging Port	USB Type-C
Waterproof Rating	IPX5
Main Unit Weight	0.8 LB (approx. 12.8 ounces)
Material	ABS resin, Stainless steel
Product Dimensions	15.94"L x 4.92"W x 3.94"H (main unit)
Max Extended Length	Up to 40 inches

## WARRANTY AND SUPPORT

This product comes with a **one-year quality guarantee** from the date of purchase. If you encounter any quality problems within this period, please contact SZFIXEZ customer support for assistance.

For further inquiries or support, please refer to the contact information provided with your purchase or visit the official SZFIXEZ store on Amazon: [SZFIXEZ Store](#).