



[Manuals.plus](#) /

› [Kumtel](#) /

› KUMTEL HAF-02 Digital XL Air Fryer User Manual

## Kumtel HAF-02

# KUMTEL HAF-02 Digital XL Air Fryer User Manual

Model: HAF-02 | Brand: Kumtel

## 1. INTRODUCTION

---

Thank you for choosing the KUMTEL HAF-02 Digital XL Air Fryer. This appliance is designed to provide a healthier way to cook your favorite meals, using rapid air technology to fry, roast, bake, and grill with significantly less oil. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Figure 1: Front view of the KUMTEL HAF-02 Digital XL Air Fryer with digital display.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.

### **3. PRODUCT COMPONENTS**

---

Familiarize yourself with the parts of your KUMTEL HAF-02 Digital XL Air Fryer.

1. Digital Touchscreen Display
2. Air Inlet
3. Air Outlet Vents
4. Frying Basket Handle
5. Removable Frying Basket
6. Outer Pot
7. Power Cord

# ABNEHMBARER GRIFF UND SPÜLMASCHINENFESTER KORB



Figure 2: Side view illustrating the air fryer's design and components.

## 4. SETUP AND FIRST USE

### 4.1 Unpacking

- Remove all packaging materials, stickers, and labels from the appliance.
- Check that all components are present and undamaged.

### 4.2 Cleaning Before First Use

- Wipe the exterior of the appliance with a damp cloth.
- Clean the frying basket and outer pot with hot water, dish soap, and a non-abrasive sponge. These parts are dishwasher safe.
- Ensure all parts are thoroughly dry before use.

### 4.3 Placement

- Place the air fryer on a stable, horizontal, and heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of free space at the back and sides of the appliance, and above it, to

allow for proper air circulation.

- Do not place the appliance against a wall or other appliances.

## 5. OPERATING INSTRUCTIONS

### 5.1 Powering On and Basic Operation

- Plug the power cord into a grounded wall outlet. The digital display will illuminate.
- Pull out the frying basket by its handle.
- Place ingredients into the frying basket. Do not exceed the MAX fill line.
- Slide the frying basket back into the appliance until it clicks into place.

### 5.2 Using the Digital Touchscreen Display

The KUMTEL HAF-02 features an intuitive digital touchscreen display for easy control.

50 gesunde und leckere Rezepte mit 90 %  
weniger Fett, passend für jede Mahlzeit des Tages

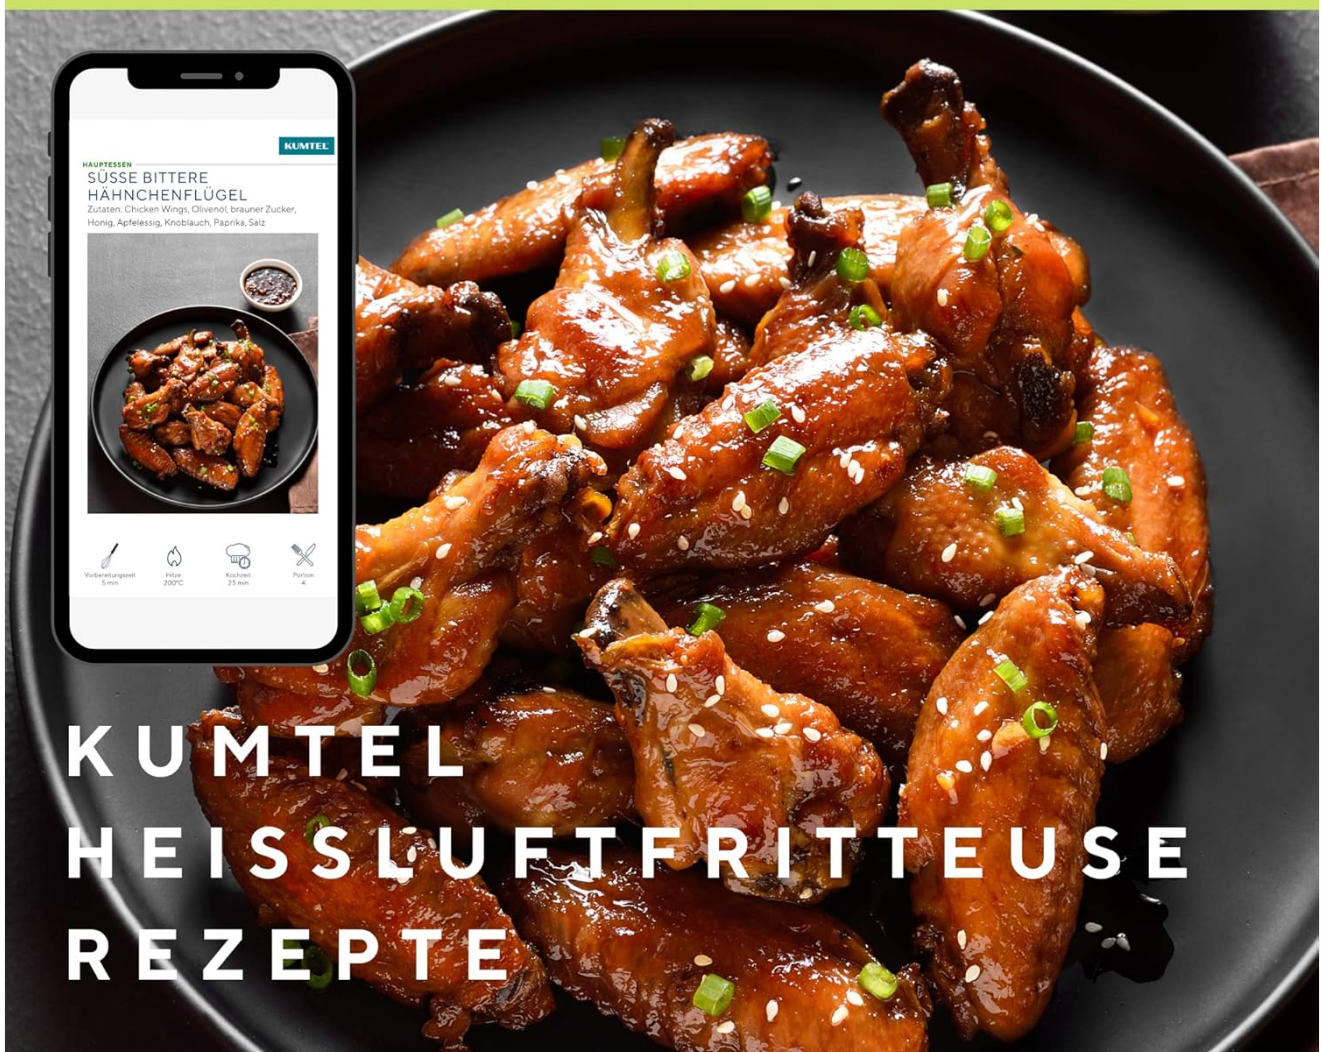


Figure 3: Digital touchscreen display with control buttons and preset icons.

- **Power Button:** Tap to turn the appliance on/off or to start/pause cooking.

- **Temperature Control (+/-):** Adjust temperature between 80°C and 200°C.
- **Time Control (+/-):** Adjust cooking time between 1 and 60 minutes.
- **Preset Functions:** Select from 8 intelligent preset programs for common dishes.

### 5.3 Preset Programs

The air fryer includes 8 preset programs for convenient cooking. Simply select the desired program, and the appliance will automatically set the optimal temperature and time. You can manually adjust these settings if needed.



Figure 4: Top panel displaying the 8 preset cooking functions with recommended temperatures and times.

Table 1: Preset Cooking Programs

Program	Temperature	Time
Defrost	80°C	6 min
French Fries	180°C	15 min
Chicken Wings	180°C	15 min

Program	Temperature	Time
Meat	200°C	9 min
Shrimp	180°C	10 min
Fish	180°C	13 min
Cake	170°C	9 min
Dehydrate	70°C	4 h

#### 5.4 Shake Reminder

For certain recipes, the air fryer will emit a reminder to shake or flip the food to ensure even cooking and crispiness. Follow the on-screen prompt when it appears.

## 6. MAINTENANCE AND CLEANING

---

Regular cleaning will extend the life of your air fryer and ensure optimal performance.

- Always unplug the appliance and allow it to cool completely before cleaning.
- The removable frying basket and outer pot are non-stick and dishwasher safe. They can also be cleaned with hot water, dish soap, and a non-abrasive sponge.
- Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Never immerse the main unit (containing electrical components) in water or any other liquid.
- Ensure all parts are completely dry before storing or using again.

# TOUCHSCREEN DISPLAY

Das Touchscreen-Display verfügt über 8 praktische Voreinstellungen, sodass Sie mit nur einem Tastendruck mit dem Kochen beginnen können.



Figure 5: Illustration of the removable basket and its easy cleaning process, including being dishwasher safe.

## 7. TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following common problems and solutions.

**Table 2: Troubleshooting Guide**

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; appliance fault.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If problem persists, contact customer support.
Food is not cooked evenly.	Basket overloaded; food not shaken/flipped; incorrect temperature/time.	Do not overload the basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food.	Clean the basket and outer pot thoroughly. For high-fat foods, drain excess oil during cooking.

Problem	Possible Cause	Solution
Food is not crispy.	Too much moisture; not enough oil (for certain foods); basket overloaded.	Pat food dry before air frying. Lightly coat with oil if desired. Do not overcrowd the basket.

## 8. PRODUCT SPECIFICATIONS

---

Detailed technical specifications for the KUMTEL HAF-02 Digital XL Air Fryer.

**Brand:** Kumtel

**Model Number:** HAF-02

**Color:** Black

**Capacity:** 5.5 Liters

**Power:** 1500 Watts

**Voltage:** (Not specified, typical for region)

**Temperature Range:** 80°C - 200°C

**Timer Range:** 1 - 60 minutes

**Material:** Metal

**Dimensions (L x W x H):** 35 x 38 x 36 cm

**Item Weight:** 4.75 Kilograms

**Special Features:** 8-in-1 Presets, Intelligent Temperature Control, Automatic Shut-off

**ASIN:** B0BD8KDM7V



Figure 6: Dimensional diagram of the air fryer, showing length, width, and height.

## 9. WARRANTY AND SUPPORT

KUMTEL products are manufactured with high-quality materials and undergo strict quality control.

### 9.1 Warranty Information

Please refer to the warranty card included with your purchase for specific warranty terms and conditions. Keep your proof of purchase for warranty claims.

### 9.2 Customer Support

For any questions, technical assistance, or if you require service, please contact KUMTEL customer support. Contact details can typically be found on the manufacturer's official website or on the product packaging.

*Note: Information regarding spare parts availability is not provided in the product details.*

