

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Timex](#) /

› [Timex Women's Standard Chronograph 38mm Watch Gold Tone Instruction Manual](#)

Timex TW2V57800JI

Timex Women's Standard Chronograph 38mm Watch Gold Tone - Instruction Manual

Model: TW2V57800JI

INTRODUCTION

This instruction manual provides comprehensive guidance for the Timex Women's Standard Chronograph 38mm Watch Gold Tone, model TW2V57800JI. Please read this manual carefully to understand the features, setup, operation, and maintenance procedures for your watch. Proper use and care will ensure the longevity and optimal performance of your timepiece.

PRODUCT OVERVIEW





Figure 1: Front view of the Timex Women's Standard Chronograph 38mm Watch Gold Tone, showcasing the dial, subdials, and crystal-adorned bezel.

The Timex Women's Standard Chronograph is a sophisticated timepiece featuring a gold-tone finish and a multi-function dial. It includes a chronograph for precise time measurement, a date window, and the signature Indiglo light-up dial for visibility in low light conditions.

Key Features:

- **Chronograph Function:** 30-minute chronograph measures to 1/20th second.
- **Date Display:** Date window located at the 4 o'clock position.
- **Indiglo Night-Light:** Electroluminescent backlight for the entire dial.
- **Water Resistance:** Water resistant to 30 meters (100 feet). Suitable for splashes or brief immersion, but not for swimming or bathing.
- **Durable Construction:** Case with mineral glass crystal.
- **Bracelet:** 18mm bracelet designed to fit up to a 7.5-inch wrist circumference.

SETUP AND INITIAL ADJUSTMENT

Setting the Time:

1. Pull the crown (center stem) out to the furthest position (position 3).
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Push the crown back into its normal operating position (position 1).

Setting the Date:

1. Pull the crown out to the middle position (position 2).
2. Turn the crown clockwise or counter-clockwise until the correct date appears in the date window.
3. Push the crown back into its normal operating position (position 1).
4. *Note: Avoid setting the date between 9:00 PM and 3:00 AM, as this may interfere with the automatic date change mechanism.*



Figure 2: Side view illustrating the crown and chronograph pushers for time and function adjustments.

OPERATING THE CHRONOGRAPH

The chronograph function allows for precise measurement of elapsed time.

1. **Start:** Press the top pusher (A) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the top pusher (A) again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** With the chronograph stopped, press the bottom pusher (B) to reset all chronograph hands to zero.

4. **Split Time (if applicable):** Refer to the full Timex chronograph manual for advanced functions if your model supports split time measurement.

Using Indiglo Night-Light:

To activate the Indiglo night-light, press and hold the crown (center stem) firmly. The entire dial will illuminate for a few seconds, providing visibility in low-light conditions. Release the crown to turn off the light.

MAINTENANCE AND CARE

Cleaning Your Watch:

Regular cleaning helps maintain the appearance of your watch. Use a soft, damp cloth to wipe the case and bracelet. For metal bracelets, a soft brush can be used to remove dirt from crevices. Ensure the crown is pushed in before cleaning to maintain water resistance.

Battery Replacement:

This watch uses 1 Lithium Metal battery (included). When the watch stops running, it indicates the battery needs replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance. Attempting to replace the battery yourself may void the warranty and compromise the watch's water resistance.

Water Resistance Guidelines:

Your watch is water resistant to 30 meters (100 feet). This means it is suitable for splashes, rain, or brief immersion in water. It is **not** suitable for swimming, diving, or bathing. Always ensure the crown is fully pushed in to maintain water resistance. Avoid operating the pushers or crown while the watch is wet or submerged.

TROUBLESHOOTING

- **Watch Not Running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Indiglo Not Working:** Ensure the crown is pressed firmly. If it still does not illuminate, the battery may be low or depleted.
- **Chronograph Hands Not Resetting to Zero:** If the chronograph hands do not return to the 12 o'clock position after reset, consult a qualified watch technician for adjustment.
- **Moisture Under Crystal:** If moisture appears under the crystal, immediately take the watch to a qualified service center. This indicates a breach in water resistance.

SPECIFICATIONS

| | |
|------------------|----------------------|
| Model Number | TW2V57800JI |
| Case Diameter | 38mm |
| Bracelet Width | 18mm |
| Water Resistance | 30 meters (100 feet) |
| Crystal Material | Mineral Glass |






| | |
|-----------------------------|--|
| Battery Type | 1 Lithium Metal (included) |
| Package Dimensions | 4.49 x 3.11 x 2.72 inches; 7.05 ounces |
| Date First Available | September 6, 2022 |
| Manufacturer | Timex |

WARRANTY AND SUPPORT

For warranty information, service, or support, please refer to the official Timex website or contact Timex customer service directly. Keep your proof of purchase for warranty claims. Do not attempt to open the watch case, as this may void the warranty and compromise the watch's integrity.

Visit the official Timex store for more information: [Timex Store](#)

Related Documents - TW2V57800JI

| | |
|---|--|
|  | <p>Timex Kids Digital Watch User Guide - Operation and Features</p> <p>Comprehensive user guide for the Timex Kids digital watch (model 791-095007). Covers features, basic operations, setting time and date, chronograph, alarm, timer, INDIGLO night light, water resistance, strap adjustments, battery information, and warranty details.</p> |
|  | <p>Timex T100 User Guide: Operation, Features, and Maintenance</p> <p>Official user guide for the Timex T100 watch, detailing how to set time, date, use the chronograph, timer, alarms, Indiglo night-light, and information on water resistance and warranty.</p> |
|  | <p>Timex Ironman Watch User Manual</p> <p>Comprehensive user manual for the Timex Ironman watch, detailing features, operations, and maintenance. Covers time, chronograph, timer, alarms, occasions, INDIGLO night-light, water resistance, and warranty.</p> |
|  | <p>Timex T200 User Guide: Features, Operation, and Care</p> <p>Comprehensive user manual for the Timex T200 watch, covering basic operation, chronograph, interval timer, alarms, INDIGLO® night-light, water resistance, and warranty information.</p> |
|  | <p>Timex W-2-US Digital Watch User Manual and Operating Instructions</p> <p>Comprehensive user manual for the Timex W-2-US digital watch, covering features, basic operations, chronograph, alarm, timer, Indiglo night-light, water resistance, and warranty information.</p> |



[Timex Watch User Manual: Features, Operation, and Settings](#)

Comprehensive user manual for Timex watches, covering features, basic operation, time/date settings, chronograph, timer, alarms, INDIGLO night-light, water resistance, and battery safety.