

[Manuals.plus](#) /

› [Red by Kiss](#) /

› RED by Kiss Ultra Clean-Cut Cordless Hair Clipper Instruction Manual (Model CC)

Red by Kiss CC

RED by Kiss Ultra Clean-Cut Cordless Hair Clipper Instruction Manual (Model CC)

Model: CC

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your RED by Kiss Ultra Clean-Cut Cordless Hair Clipper, Model CC. Please read this manual thoroughly before initial use and retain it for future reference.

2. SAFETY INFORMATION

Important Safety Instructions:

- Always unplug the clipper before cleaning or replacing parts.
- Keep blades away from children and pets.
- Do not use near water.
- Always supervise children when using this product.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. PACKAGE CONTENTS

Your RED by Kiss Ultra Clean-Cut Cordless Hair Clipper kit includes the following items:

- Rechargeable Cordless Clipper
- 4 Blade Guards (1/8" / 3mm, 1/4" / 6mm, 3/8" / 9mm, 1/2" / 12mm)
- Blade Cover
- Cleaning Brush
- Lubricating Oil

- USB Charging Cable
- Cutting Comb



Image: The RED by Kiss Ultra Clean-Cut Cordless Hair Clipper shown with its complete set of accessories, including the clipper unit, four blade guards, a cutting comb, USB charging cable, cleaning brush, lubricating oil, and blade cover.

4. SETUP

1. **Initial Charge:** Before first use, fully charge the clipper. Connect the USB charging cable to the clipper and a compatible USB power source. The LCD panel will indicate charging status. A full charge provides up to 5 hours of runtime.
2. **Attach Blade Guard:** Select the desired blade guard (3mm, 6mm, 9mm, or 12mm) and securely attach it to the clipper blade. Ensure it clicks into place.
3. **Lubricate Blades:** Apply a few drops of the provided lubricating oil to the blades before each use to ensure smooth operation and prolong blade life.

4PCS OF BLADE GUIDE



EASY ADJUSTABLE
TAPER LEVER

Image: A detailed view of the clipper's blade area, showing an attached blade guard and the adjustable taper lever. The four available blade guard sizes (3mm, 6mm, 9mm, 12mm) are also depicted.

5. OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the power button located on the front of the clipper to turn it on or off. The LCD panel will display the battery level and RPM.

2. **Adjust Taper Lever:** Use the adjustable taper lever on the side of the clipper to fine-tune cutting lengths without changing guards. Move the lever up for a shorter cut and down for a longer cut.
3. **Hair Cutting:** For best results, use the clipper on clean, dry hair. Guide the clipper against the direction of hair growth. Start with a longer guard and gradually switch to shorter guards if desired.
4. **LCD Panel:** The integrated LCD panel provides real-time information on battery percentage and motor speed (RPM), allowing for precise control and monitoring during use.



Image: A close-up view highlighting the clipper's gapless blade, high-quality carbon steel blade, long-lasting lithium-ion battery, 5-hour runtime, and the functional LCD panel displaying battery percentage.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your clipper.

- **Cleaning Blades:** After each use, turn off and unplug the clipper. Use the provided cleaning brush to remove loose hairs from the blades.

- **Oiling Blades:** Apply 1-2 drops of lubricating oil to the blades after cleaning and before storage. Turn the clipper on for a few seconds to distribute the oil evenly.
- **Storage:** Store the clipper in a dry, cool place. Use the blade cover to protect the blades when not in use. The integrated hanger loop allows for convenient storage.

7. TROUBLESHOOTING

If you encounter issues with your clipper, please refer to the following common solutions:

- **Clipper not turning on:** Ensure the clipper is fully charged. Connect it to the USB charging cable and allow it to charge for at least 30 minutes before attempting to power on again.
- **Blades pulling hair:** This often indicates dull blades or insufficient lubrication. Clean and oil the blades. If the issue persists, consider replacing the blade assembly.
- **Reduced cutting performance:** Check for hair buildup between the blades. Clean thoroughly with the brush. Ensure the blades are properly oiled.

For further assistance, please contact customer support.

8. SPECIFICATIONS

Model Number	CC
Brand	Red by Kiss
Power Source	Battery Powered (Cordless)
Battery Type	Lithium-ion
Runtime	Up to 5 hours
Voltage	110V~240V (Worldwide Dual Voltage)
Item Weight	0.58 Kilograms (1.28 Pounds)
Color	Gold
Recommended Uses	Clipping, Grooming, Trimming

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Red by Kiss customer service. Keep your purchase receipt as proof of purchase.

You can visit the official Red by Kiss store for more information:[Red by Kiss Store](#)

10. LEGAL DISCLAIMER

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

Note: This product is a hair clipper and not a dietary supplement. The disclaimer is provided as per original product information.



© 2023 Red by Kiss. All rights reserved.