

Tork 7432000

Tork Xpressnap Fit® Counter Napkin Dispenser User Manual

Model: 7432000

1. INTRODUCTION

The Tork Xpressnap® Fit Counter Napkin Dispenser is designed to enhance efficiency and hygiene in various settings, including small chains and independent restaurants. This compact system offers one-at-a-time napkin dispensing, which helps in reducing consumption and waste, optimizing space, and maintaining high hygiene standards. Its practical refill level indicator ensures continuous napkin availability.

2. KEY FEATURES

- **One-at-a-Time Dispensing:** Reduces napkin waste by more than half compared to traditional tallfold dispensers, ensuring users only touch the napkin they use, which improves hygiene.
- **Compact Design:** Optimizes limited counter space while serving almost twice as many guests between refills.
- **Refill Level Indicator:** A clear indicator signals when the dispenser needs refilling, preventing run-outs during peak times and ensuring 100% napkin availability.
- **Easy to Clean:** Durable exterior designed for simple cleaning and maintenance.
- **AD-a-Glance Customizable Display:** Features a unique window for advertising or displaying messages, offering a free and effective promotional tool.
- **Reduced Waste:** Significantly cuts down on discarded, unused napkins, leading to material cost savings.

Tork Xpressnap Fit® Counter Napkin Dispenser



Image: The Tork Xpressnap Fit Counter Napkin Dispenser highlighting its AD-a-Glance display, easy-to-clean design, compact size, and protected napkin dispensing.

One-at-a-time Dispensing

for only touching the
napkin you use



Fully covered dispenser

and is also easy to clean
and refill with level indicator



Reduces waste

cuts unused napkins
thrown away by more
than 50%

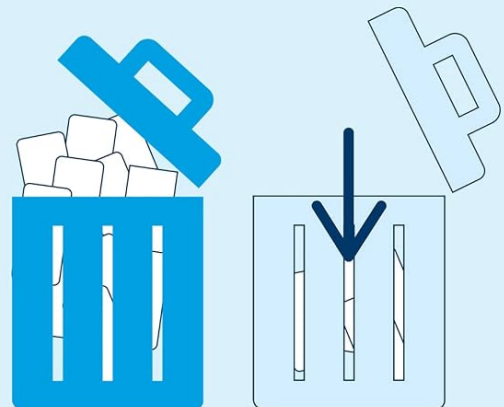


Image: A visual representation of the one-at-a-time dispensing mechanism, the fully covered dispenser, and the significant reduction in napkin waste achieved by the system.

3. SETUP

The Tork Xpressnap Fit Counter Napkin Dispenser is designed for quick and easy setup. The package includes one dispenser unit.

3.1 Unpacking

- Carefully remove the dispenser from its packaging.
- Inspect the dispenser for any signs of damage. If damaged, contact customer support.

3.2 Loading Napkins

- Open the dispenser cover.
- Insert the appropriate Tork N14 refills into the dispenser. Ensure the napkins are properly aligned for smooth dispensing.
- Close the dispenser cover securely.



Image: A front view of the Tork Xpressnap Fit Counter Napkin Dispenser, ready for use on a countertop.

Xpressnap Fit quality refills

Advanced



2-ply

Individually wrapped
Attractive emboss
100% recycled fibers



120 napkins
per sleeve

Universal



1-ply

Individually wrapped
Attractive emboss
100% recycled fibers



240 napkins
per sleeve

Image: An illustration detailing the types of Tork Xpressnap Fit quality refills available, including Advanced 2-ply and Universal 1-ply options, along with their napkin counts per sleeve.

4. OPERATION

The Tork Xpressnap Fit Counter Napkin Dispenser provides hygienic, one-at-a-time dispensing for optimal user experience and reduced waste.

4.1 Dispensing Napkins

- To retrieve a napkin, simply pull the exposed napkin from the dispensing slot.
- The one-at-a-time system ensures that only one napkin is dispensed at a time, minimizing contact and promoting hygiene.

Hygienic one-at-a-time dispensing

Touch only
the napkin
you use



Image: A hand demonstrating the hygienic one-at-a-time dispensing, emphasizing that only the napkin being used is touched.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Tork Xpressnap Fit Counter Napkin Dispenser.

5.1 Cleaning

- Wipe the exterior of the dispenser with a damp cloth and mild detergent as needed.
- Avoid using abrasive cleaners or solvents, as these can damage the dispenser's finish.
- Ensure the dispenser is dry before reloading napkins.

5.2 Refilling

- Monitor the refill level indicator to anticipate when new napkins are needed.
- Follow the napkin loading instructions in Section 3.2 when refilling.

6. TROUBLESHOOTING

If you encounter issues with your Tork Xpressnap Fit Counter Napkin Dispenser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Napkins not dispensing smoothly.	Incorrect napkin type or improper loading.	Ensure you are using Tork N14 refills. Re-open the dispenser and re-align the napkin stack.
Dispenser appears empty but still has napkins.	Napkins may be stuck or not properly positioned.	Gently open the dispenser and adjust the napkin stack. Check the refill indicator for accurate level.
Dispenser cover not closing securely.	Obstruction or misalignment.	Check for any foreign objects or misaligned napkins preventing the cover from closing. Ensure the cover snaps into place.

If the problem persists, please contact Tork customer support.

7. SPECIFICATIONS

Attribute	Detail
Brand	Tork
Model Number	7432000
Product Dimensions	5.6 x 4.8 x 12.8 inches (D x W x H)
Material	Plastic
Color	Black
Napkin System Compatibility	N14 refills

8. WARRANTY INFORMATION

An extended 5-year warranty is available for this product. Registration is required for eligibility. For more details and to register your product, please visit:torkusa.com/warranty

Legal Disclaimer

Dispensers are owned by Essity and leased for the purpose of dispensing Tork® brand refills. Use of any other refills in the dispensers is not allowed.



5 Year
Extended Warranty Available

Registration at
torkusa.com/warranty
is required for eligibility

Image: Information regarding the 5-year extended warranty available for Tork products, with details on required registration.

9. SUPPORT

For further assistance, product inquiries, or technical support, please visit the official Tork website or contact their customer service department.

Official Website: www.torkusa.com

Brand Store: [Tork Amazon Store](#)

