

ARCADE1UP PAC-C-20340

Arcade1Up Pac-Man 5-in-1 Countercade Instruction Manual

Model: PAC-C-20340

INTRODUCTION

The Arcade1Up Pac-Man 5-in-1 Countercade brings classic arcade gaming to your home in a compact form factor. This unit is designed to capture the iconic look and feel of original arcade cabinets, offering authentic gameplay with a vibrant 8-inch screen and full-size arcade controls. It includes five classic BANDAI NAMCO Entertainment Inc. titles, providing an engaging retro gaming experience.



Figure 1: Front view of the Arcade1Up Pac-Man 5-in-1 Countercade, showcasing its classic arcade design and controls.

FEATURES

- **Five Classic Games:** Includes PAC-MAN, PAC-MAN PLUS, GALAGA, DIG DUG, and ROMPERS.
- **Compact Countercade Design:** Space-saving form factor suitable for various home environments.
- **Authentic Arcade Controls:** Full-size joystick and buttons for a genuine arcade experience.
- **Vibrant Display:** Crisp 8-inch screen for clear visuals.
- **No Assembly Required:** Ready to play right out of the box.
- **Adjustable Volume:** Integrated volume controls for personalized audio.
- **Coinless Operation:** Unlimited free play without the need for coins.

ARCADE1UP

5 GAMES INCLUDED



Figure 2: The Countercade screen showing the selection menu for the five included games: PAC-MAN, PAC-MAN PLUS, GALAGA, DIG DUG, and ROMPERS.

SETUP

1. **Unboxing:** Carefully remove the Arcade1Up Pac-Man 5-in-1 Countercade from its packaging.
2. **Placement:** Place the unit on a stable, flat surface, such as a countertop or desk. Ensure adequate ventilation around the unit.
3. **Power Connection:** Connect the provided AC adapter to the power input port on the back of the Countercade. Plug the adapter into a standard AC electrical outlet.
4. **Power On:** Locate the ON/OFF switch on the control panel and slide it to the 'ON' position. The unit will power on and display the game selection menu.

OPERATING INSTRUCTIONS

Game Selection

- Use the joystick to navigate through the game selection menu.
- Press the 'Start Game' button (typically the larger white button on the left) to select a game.

Gameplay

- **Joystick:** Controls character movement (e.g., Pac-Man, Dig Dug character).
- **Action Buttons:** Used for specific game actions (e.g., shooting in Galaga, digging in Dig Dug). Refer to the on-screen instructions or game-specific guides for detailed controls.
- **Volume Control:** Use the 'VOL+' and 'VOL-' buttons on the control panel to adjust the audio level.
- **Game Menu/Reset:** To access the game menu or reset a game, hold down the designated player buttons for approximately 5 seconds. Specific instructions for this are often displayed on the screen during gameplay or in the game selection menu.



Figure 3: Detailed view of the control panel, highlighting the joystick, action buttons, and power/volume controls.

Official Product Video: Pac-Man Game Play

Your browser does not support the video tag.

Video 1: This video demonstrates actual gameplay of Pac-Man on the Arcade1Up Countercade, showing the movement of

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. For stubborn marks, a slightly damp cloth with mild soap can be used, followed by a dry cloth. Avoid abrasive cleaners or solvents.
- **Screen Care:** Use a microfiber cloth specifically designed for electronics to clean the screen. Do not spray cleaning solutions directly onto the screen.
- **Storage:** When not in use for extended periods, store the Countercade in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Liquids:** Keep liquids away from the unit to prevent damage to internal components.

TROUBLESHOOTING

No Power

- Ensure the AC adapter is securely plugged into both the Countercade and a working electrical outlet.
- Check the ON/OFF switch is in the 'ON' position.
- Try a different electrical outlet to rule out a power source issue.

No Sound or Low Sound

- Adjust the volume using the 'VOL+' button on the control panel.
- Ensure the volume is not muted in any game-specific settings (if applicable).

Game Freezes or Malfunctions

- Hold the designated player buttons for 5 seconds to reset the game.
- If the issue persists, power off the unit using the ON/OFF switch, wait a few seconds, and then power it back on.

SPECIFICATIONS

Feature	Detail
Model Number	PAC-C-20340
Dimensions (D x W x H)	9.57" D x 11.93" W x 15.75" H
Weight	12.57 lbs
Screen Size	8 inches
Number of Games	5
Included Games	PAC-MAN, PAC-MAN PLUS, GALAGA, DIG DUG, ROMPERS

Power Source	AC Outlet
Number of Players	1
UPC	195570015469









Figure 4: Visual representation of the Countercade's dimensions, showing its compact size.

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the documentation included with your product or visit the official Arcade1Up website. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: Arcade1Up

Related Documents - PAC-C-20340

	<p>Arcade1Up Legacy Edition Owner's Manual - Safety, Controls, and Troubleshooting</p> <p>Official owner's manual for the Arcade1Up Legacy Edition home arcade machine. Provides essential safety precautions, game control explanations, troubleshooting tips, installation guidelines, and technical specifications.</p>
	<p>Arcade1Up Deluxe Class of 1981 Owner's Manual</p> <p>Owner's manual for the Arcade1Up Deluxe Class of 1981 arcade machine, including safety precautions, installation instructions, specifications, game controls, and troubleshooting.</p>
	<p>Arcade1Up Pac-Man Deluxe Owner's Manual - Safety, Setup, and Troubleshooting</p> <p>This official owner's manual provides essential safety instructions, installation guidance, game control details, and troubleshooting tips for the Arcade1Up Pac-Man Deluxe arcade machine.</p>
	<p>Arcade1Up Partycade Plus Super Pac-Man Owners Manual</p> <p>Owners manual for the Arcade1Up Partycade Plus Super Pac-Man edition, including safety precautions, installation, troubleshooting, game settings, and controls. Model #PAC-D-10182.</p>
	<p>Arcade1Up Class of 81 Owner's Manual - MSP-A-10171</p> <p>Comprehensive owner's manual for the Arcade1Up Class of 81 (MSP-A-10171) featuring safety instructions, troubleshooting, game settings, and control layouts for classic arcade games.</p>
	<p>Arcade1Up Counter-Cade Owners Manual - Safety, Controls, and Troubleshooting</p> <p>Comprehensive owners manual for the Arcade1Up Counter-Cade, detailing safety instructions, installation, game controls for Pac-Man, Space Invaders, Dig Dug, and more, plus troubleshooting tips.</p>