

[Manuals.plus](#) /

> [CHONCHOW](#) /

> CHONCHOW Pink Gaming Keyboard and Mouse Combo (Model 1920) User Manual

CHONCHOW 1920

CHONCHOW Pink Gaming Keyboard and Mouse Combo (Model 1920) User Manual

Comprehensive guide for setup, operation, and maintenance.

INTRODUCTION

This manual provides detailed instructions for the CHONCHOW Pink Gaming Keyboard and Mouse Combo, Model 1920. Please read this guide thoroughly before using your new peripheral set to ensure optimal performance and longevity. This combo is designed for gaming and general computer use across various platforms.

PACKAGE CONTENTS

- 1 x CHONCHOW Pink Gaming Keyboard
- 1 x CHONCHOW Pink Gaming Mouse
- 1 x User Manual (this document)

SPECIFICATIONS

Feature	Detail
Package Dimensions	17.72 x 8.27 x 2.01 inches
Item Weight	1.94 pounds
Connectivity Technology	USB
Special Features	Backlit, Ergonomic
Compatible Devices	Gaming Console, Laptop, PS4, PS5, Personal Computer, Xbox
Color	Pink Keyboard and Mouse

SETUP INSTRUCTIONS

Connecting the Keyboard and Mouse

1. Locate an available USB port on your computer or gaming console (PC, Laptop, PS4, PS5, Xbox).
2. Plug the USB connector of the CHONCHOW Pink Gaming Keyboard into the USB port.
3. Plug the USB connector of the CHONCHOW Pink Gaming Mouse into another available USB port.
4. The devices are plug-and-play and should be automatically recognized by your system. No additional drivers are typically required.

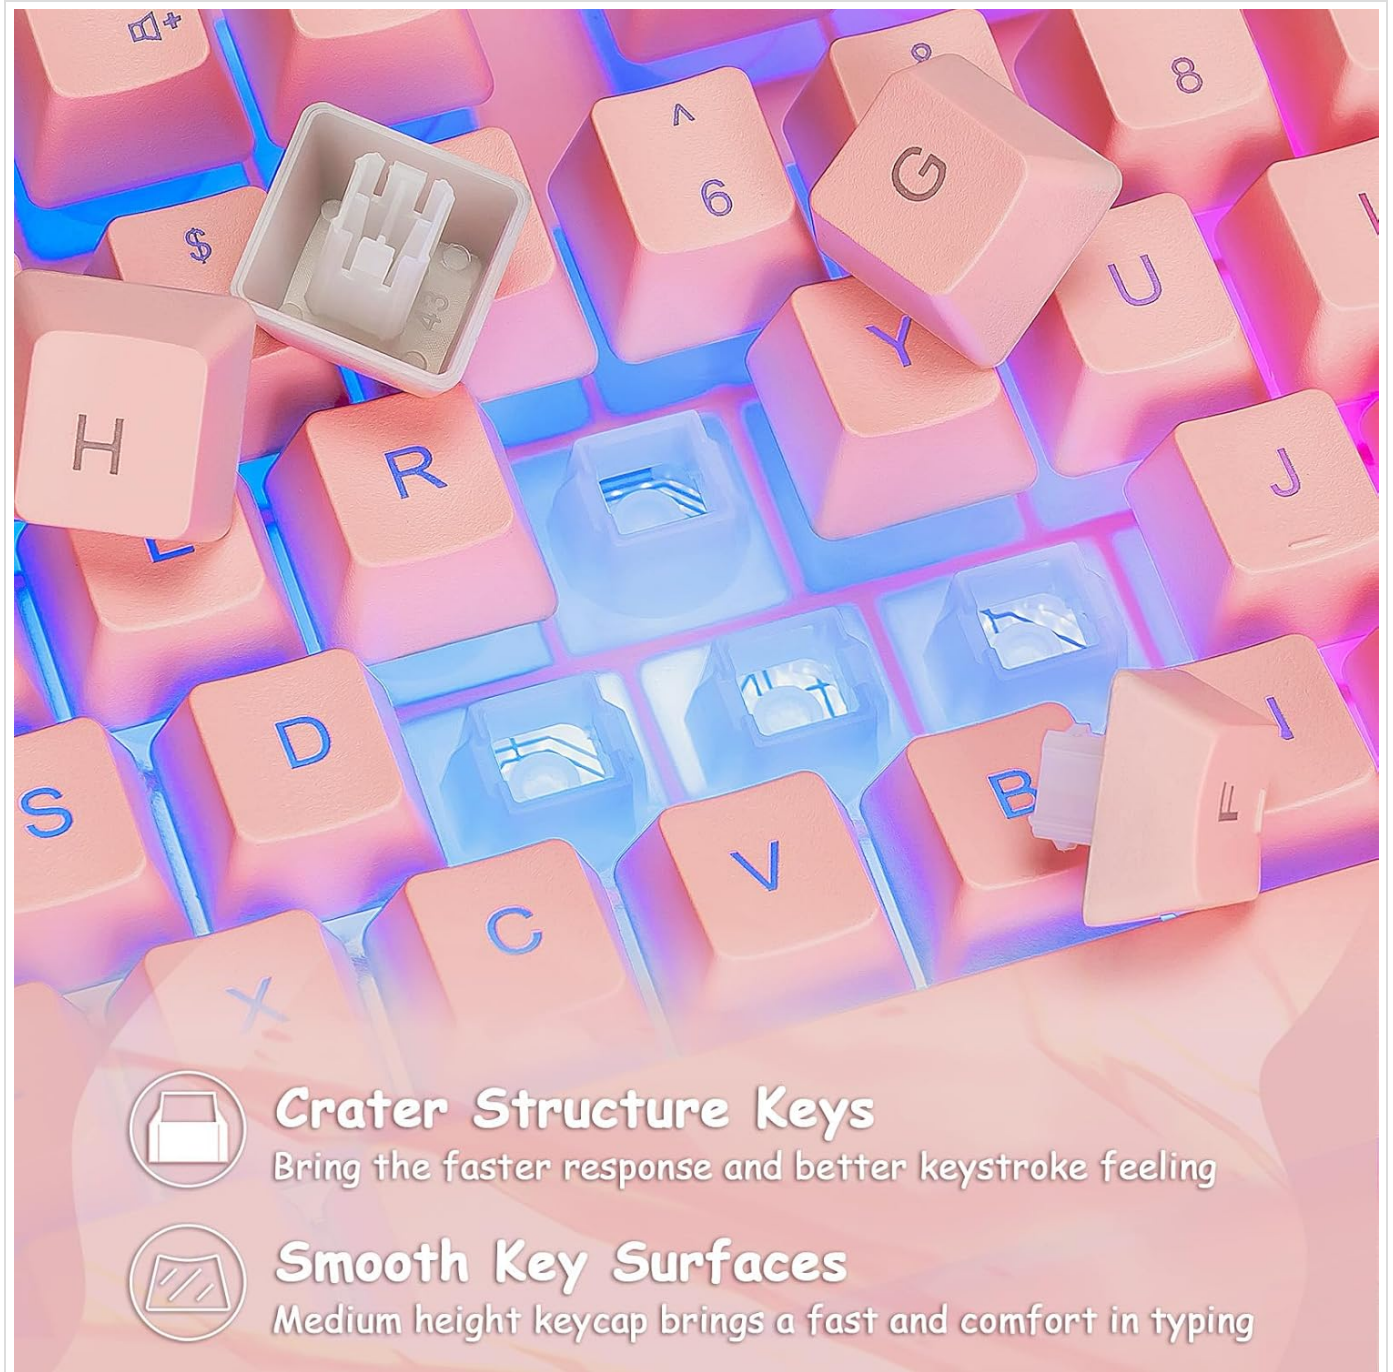


Image: The CHONCHOW Pink Gaming Keyboard and Mouse Combo connected to a computer, demonstrating a typical setup. The keyboard and mouse are both pink with LED lighting.

OPERATING INSTRUCTIONS - KEYBOARD

LED Backlight Control

- **Changing Backlight Modes:** Press the **FN** key + the **Light Bulb** key (usually located near the right Ctrl key) to cycle through 3 dynamic backlight modes. The modes typically include color transitions like Blue→Red→Green, Cyan→Purple→Yellow, and Green→Blue→Red.
- **Breathing Light Mode ON/OFF:** Press **FN** + **Light Bulb** key to toggle the breathing effect on or off.
- **Brightness Adjustment:** Press **FN** + **Page Up (PGUP)** to increase brightness. Press **FN** + **Page Down (PGDN)** to decrease brightness.
- **Light Speed Adjustment:** Press **FN** + **Minus (-)** to decrease light speed. Press **FN** + **Plus (+)** to increase light speed.



Image: The pink gaming keyboard displaying various LED backlight modes. The image highlights the keys used for controlling the lighting effects.

Multimedia Function Keys

The keyboard features 12 multimedia shortcut keys accessible by pressing the **FN** key in combination with the F1-F12 keys:

- **FN + F1:** Media Player

- **FN + F2:** Volume Down
- **FN + F3:** Volume Up
- **FN + F4:** Mute
- **FN + F5:** Stop
- **FN + F6:** Previous Track
- **FN + F7:** Play/Pause
- **FN + F8:** Next Track
- **FN + F9:** Email
- **FN + F10:** Web/Home
- **FN + F11:** Key Lock
- **FN + F12:** Calculator

Multimedia Function



Media Player



Volume -



Volume +



Mute



Stop



Previous Track



Play/Pause



Next Track



Email



Web/Hone



Key Lock



Calculator



Swap "WASD"
and arrow keys



Win Key
Lock



Image: A close-up of the pink gaming keyboard, illustrating the multimedia function keys (F1-F12) and their corresponding actions when pressed with the FN key.

Special Gaming Functions

- **WASD/Arrow Key Switching:** Press **FN + W** to swap the functionality of the WASD keys with the arrow keys. Repeat to revert.
- **Windows Key Lock:** Press **FN + Win** to lock the Windows key, preventing accidental presses during gameplay. Repeat to unlock.
- **Anti-Ghosting:** The keyboard supports 19-key anti-ghosting, ensuring multiple simultaneous key presses are registered accurately.



Image: The pink gaming keyboard with an overlay indicating the 19 anti-ghosting keys, ensuring accurate input during intense gaming sessions.

OPERATING INSTRUCTIONS - MOUSE

DPI Adjustment

The mouse features 4 adjustable DPI settings for precision control:

- Press the **DPI+** button to increase DPI (1200 / 1800 / 2400 / 3600).
- Press the **DPI-** button to decrease DPI.
- The mouse's 7-color breathing LED effect will change to indicate the current DPI setting.



Image: A detailed view of the pink gaming mouse, pointing out the DPI adjustment buttons and the scroll wheel. The image also shows the ergonomic design.

Mouse LED Control

- **Turn ON/OFF LED:** Long press the **DPI** button (located below the scroll wheel) to toggle the mouse's LED lighting on or off.

KEYBOARD AND MOUSE SIZE

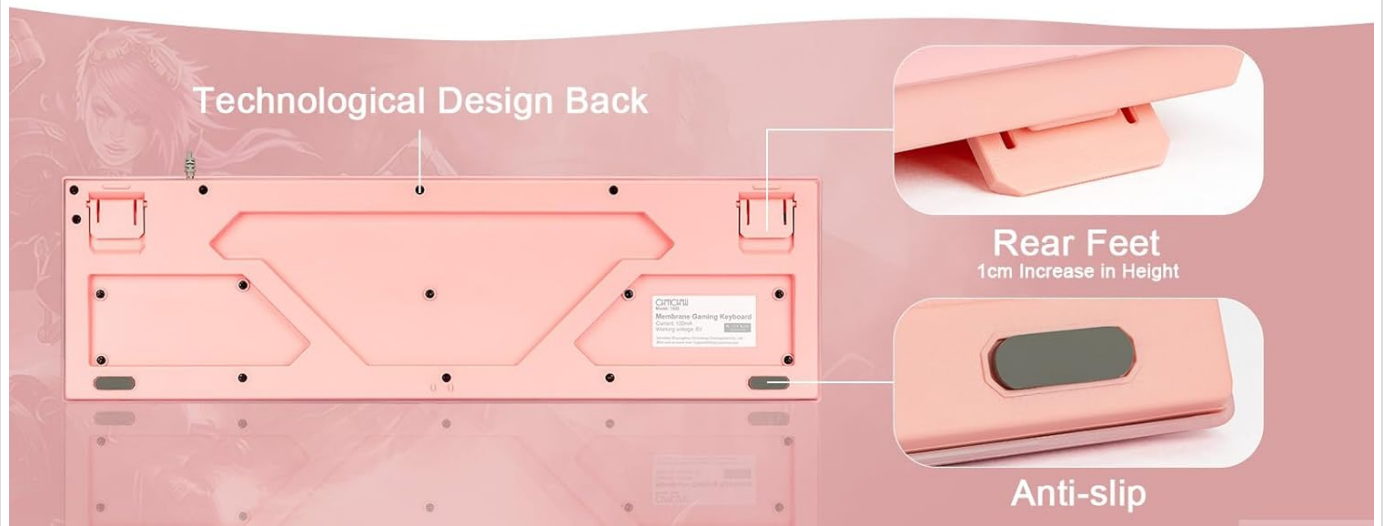


Image: The pink gaming mouse showcasing its 7 RGB light colors, including Red, Green, Blue, Yellow, Cyan, Purple, and White, demonstrating the breathing light effect.

ERGONOMICS AND DESIGN

- **Adjustable Keyboard Feet:** The keyboard features adjustable feet (1cm height adjustment) to customize the typing angle for comfort.
- **Curved Keycaps:** Designed for natural finger positioning and reduced fatigue during extended use.
- **Mouse Grip:** The ergonomic wired mouse includes a rubber grip base for enhanced control and comfort.
- **Crater Structure Keys:** The keyboard utilizes crater structure keys for faster response and improved keystroke feel.



Image: A close-up of the pink keyboard keys, illustrating the crater structure design for improved tactile feedback and response.

MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to wipe down the keyboard and mouse. For stubborn dirt, a slightly damp cloth with mild soap can be used, ensuring no liquid enters the device.
- **Avoid Liquids:** Do not expose the keyboard or mouse to excessive moisture or liquids.
- **Storage:** Store the devices in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Management:** Avoid sharp bends or excessive pulling on the USB cables to prevent damage.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Keyboard/Mouse not responding.	<ul style="list-style-type: none"> ◦ Ensure USB cables are securely plugged into the computer/console. ◦ Try plugging into a different USB port. ◦ Restart your computer/console. ◦ Check if the Num Lock, Caps Lock, or Scroll Lock indicators on the keyboard are lit when pressed.
LED lights are off or not changing.	<ul style="list-style-type: none"> ◦ For keyboard: Press FN + Light Bulb key to cycle modes or turn on/off. Adjust brightness with FN + PGUP/PGDN. ◦ For mouse: Long press the DPI button to toggle lights on/off.
Keys are sticking or not registering.	<ul style="list-style-type: none"> ◦ Clean around the affected keys to remove any debris. ◦ Ensure the keyboard is on a flat, stable surface.
Mouse cursor movement is erratic or unresponsive.	<ul style="list-style-type: none"> ◦ Clean the optical sensor on the bottom of the mouse. ◦ Ensure the mouse is used on a suitable surface (e.g., a mouse pad). ◦ Adjust DPI settings using the DPI buttons.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official CHONCHOW website or contact their customer service directly. Keep your purchase receipt for warranty claims.

Manufacturer: CHONCHOW

Model Number: 1920

Date First Available: September 7, 2022

OFFICIAL PRODUCT VIDEOS



An official product video demonstrating the CHONCHOW Pink Gaming Keyboard and Mouse Combo in use, highlighting its features for both gaming and work environments.



An official product video showcasing the aesthetic appeal and functionality of the CHONCHOW Pink Gaming Keyboard.

