

[Manuals.plus](#) /

› [Luqeeq](#) /

› Luqeeq Digital Wooden Alarm Clock User Manual - Model Luqeeqgwrao5h2y8620

Luqeeq Luqeeqgwrao5h2y8620

Luqeeq Digital Wooden Alarm Clock User Manual

Model: Luqeeqgwrao5h2y8620

1. INTRODUCTION

Thank you for choosing the Luqeeq Digital Wooden Alarm Clock. This device combines functionality with a minimalist design, offering time, date, temperature display, and alarm features. Its LED display and wooden finish make it a suitable addition to various environments such as offices, bedrooms, or bedside tables. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.



Image 1.1: The Luqeeq Digital Wooden Alarm Clock in a home setting.

2. SAFETY INFORMATION

- Do not expose the device to water or high humidity.
- Avoid extreme temperatures and direct sunlight.
- Do not drop or subject the device to strong impacts.
- Keep out of reach of children.
- Use only the provided USB cable for power.
- Dispose of batteries responsibly according to local regulations.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Luqeeq LED Wooden Clock
- 1 x USB Cable
- 1 x User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the buttons and ports on the back of your alarm clock:

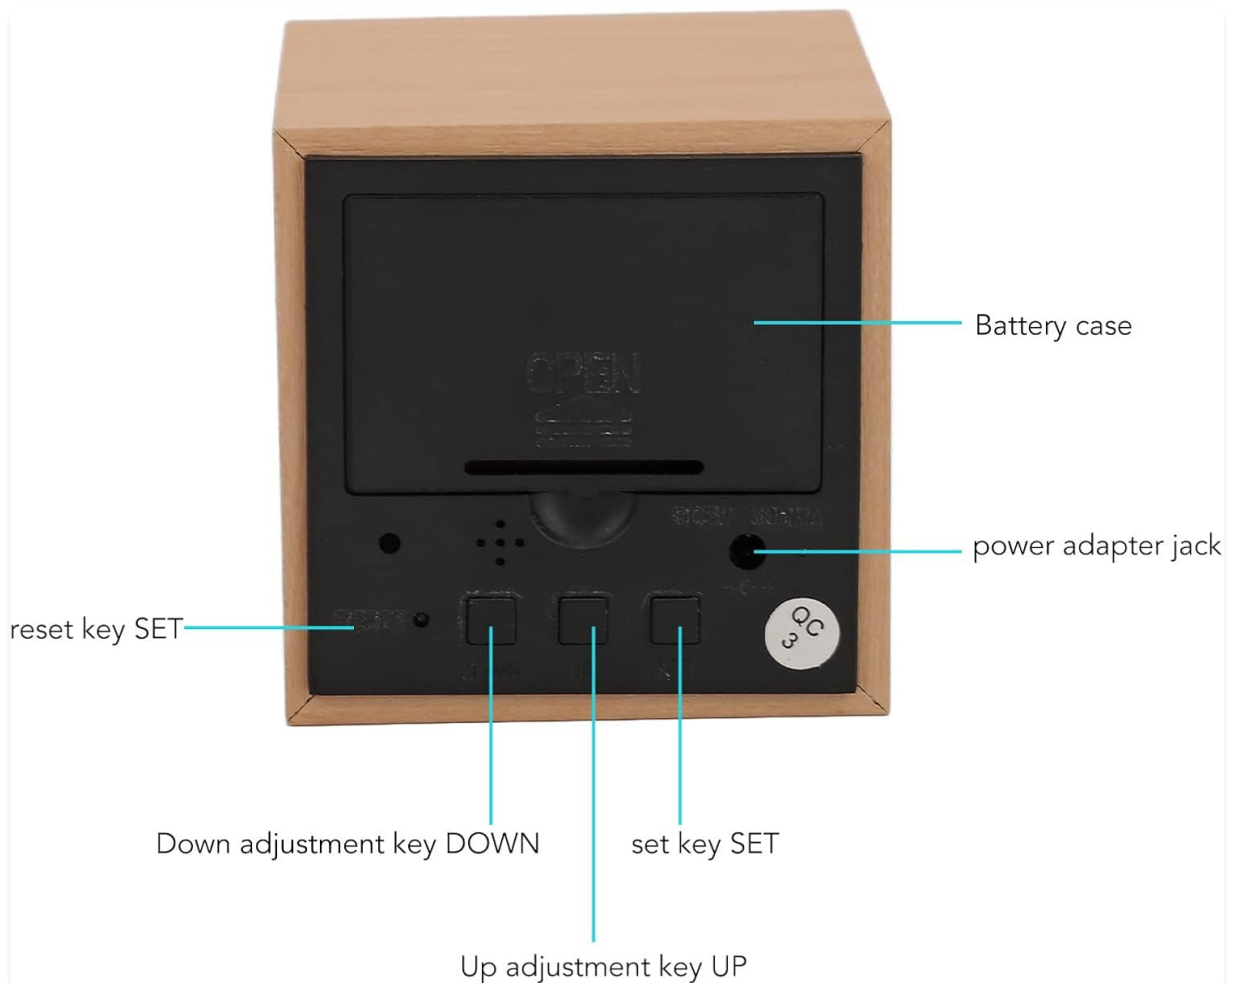


Image 4.1: Rear view of the clock with labeled controls.

- **Battery Case:** Compartment for 3 AAA batteries (not included) for backup power.
- **Power Adapter Jack:** Connect the USB cable for primary power.
- **RESET Key:** Resets the clock to factory settings.
- **DOWN Adjustment Key:** Decreases values during setting.
- **UP Adjustment Key:** Increases values during setting.
- **SET Key:** Enters setting mode and confirms selections.

5. SETUP

5.1 Powering the Device

The clock can be powered via the included USB cable or by batteries for backup. For continuous operation, it is recommended to use the USB power supply.

1. **Primary Power (USB):** Connect the small end of the USB cable to the Power Adapter Jack on the back of the clock. Connect the other end to a USB power adapter (not included) or a powered USB port.
2. **Battery Backup:** Open the Battery Case on the back. Insert 3 AAA batteries (not included) into the compartment, ensuring correct polarity. Additionally, insert 1 CR2032 button cell battery (not included) for memory function, which retains settings during power outages.



Image 5.1: The clock with its USB cable for power connection.

6. OPERATING INSTRUCTIONS

6.1 Basic Display Modes

The clock cycles through displaying time, date, and temperature. You can usually switch between display modes by pressing the UP or DOWN button outside of setting mode.

6.2 Setting Time and Date

1. Press the **SET** button once to enter time setting mode. The hour digits will flash.
2. Use the **UP** and **DOWN** buttons to adjust the hour.
3. Press **SET** again to move to minute setting. Adjust with **UP** and **DOWN**.
4. Continue pressing **SET** to cycle through year, month, and day settings, adjusting each with **UP** and **DOWN**.
5. Press **SET** one last time to exit setting mode.

6.3 Setting Alarm

The clock supports multiple alarms (e.g., AL1, AL2, AL3). The exact number may vary by model.

1. Press the **SET** button repeatedly until 'AL' appears, indicating alarm setting mode.
2. Press **SET** again to select an alarm (e.g., AL1). The hour digits will flash.
3. Use **UP** and **DOWN** to set the desired alarm hour.
4. Press **SET** to move to minute setting. Adjust with **UP** and **DOWN**.
5. Press **SET** to confirm the alarm time. You may then see an option to enable/disable the alarm (ON/OFF). Use **UP/DOWN** to select.
6. Repeat for other alarms if desired. Press **SET** to exit alarm setting mode.

6.4 Brightness Adjustment

The clock features 3 levels of brightness. To adjust, press the **UP** button outside of setting mode. Each press will cycle through the brightness levels.

6.5 Voice Control Power Saving Mode

To conserve power, the display can be set to turn off automatically and activate only when sound is detected (e.g., a clap or tap). This mode is typically enabled or disabled by a long press of the **DOWN** button or a specific combination of buttons. Refer to the quick start guide for your specific model if this function is not immediately apparent.



Image 6.1: Demonstrating the voice control power saving mode.

7. MAINTENANCE

- **Cleaning:** Wipe the clock gently with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** If using battery backup, replace AAA batteries when the display dims or functions become erratic. Replace the CR2032 memory battery periodically (e.g., annually) to ensure settings are retained during power interruptions.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is off or dim.	Power saving mode active, no power, or low batteries.	Tap the clock or make a sound to activate display. Check USB power connection. Replace AAA batteries.
Alarm does not sound.	Alarm is not enabled or set incorrectly.	Verify alarm settings (ON/OFF) and ensure the alarm time is correct.

Problem	Possible Cause	Solution
Incorrect time or date.	Time/date not set correctly after power loss or initial setup.	Follow instructions in Section 6.2 to reset time and date. Replace CR2032 memory battery if settings are frequently lost.
Buttons are unresponsive.	Temporary software glitch.	Press the RESET key on the back of the clock.

9. SPECIFICATIONS

Feature	Detail
Model Number	Luqeeeggxrwo5h2y8620
Material	Engineered Wood, PVC
Color	White Log (bûche blanche)
Functions	Time, Temperature, Date, Alarm, Memory, Brightness Adjustment
Display Type	Digital LED
Brightness Levels	3
Power Source	Battery Powered (3 AAA, 1 CR2032 for memory) / USB Powered
Connectivity Technology	USB
Mounting Type	Tabletop
Item Shape	Rectangular
Dimensions (Package)	9.9 x 8 x 7.5 cm
Weight (Package)	157 grams
Country of Origin	China

10. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For warranty claims, technical support, or any questions regarding the operation of your Luqeeeg Digital Wooden Alarm Clock, please contact the retailer or manufacturer's customer service. Please have your model number (Luqeeeggxrwo5h2y8620) and purchase information ready when contacting support.