

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Yimaut](#) /

› [Yimaut IR Remote Control User Manual for Roku Players and Roku TVs](#)

Yimaut fd447714-5f15-48b3-93c2-4df9ef75223d

Yimaut IR Remote Control User Manual

For Roku Players and Roku TVs

1. INTRODUCTION

This manual provides detailed instructions for the setup and operation of your Yimaut IR Remote Control. This remote is designed to enhance your viewing experience with compatible Roku players and built-in Roku TVs. Please read this manual thoroughly before use.

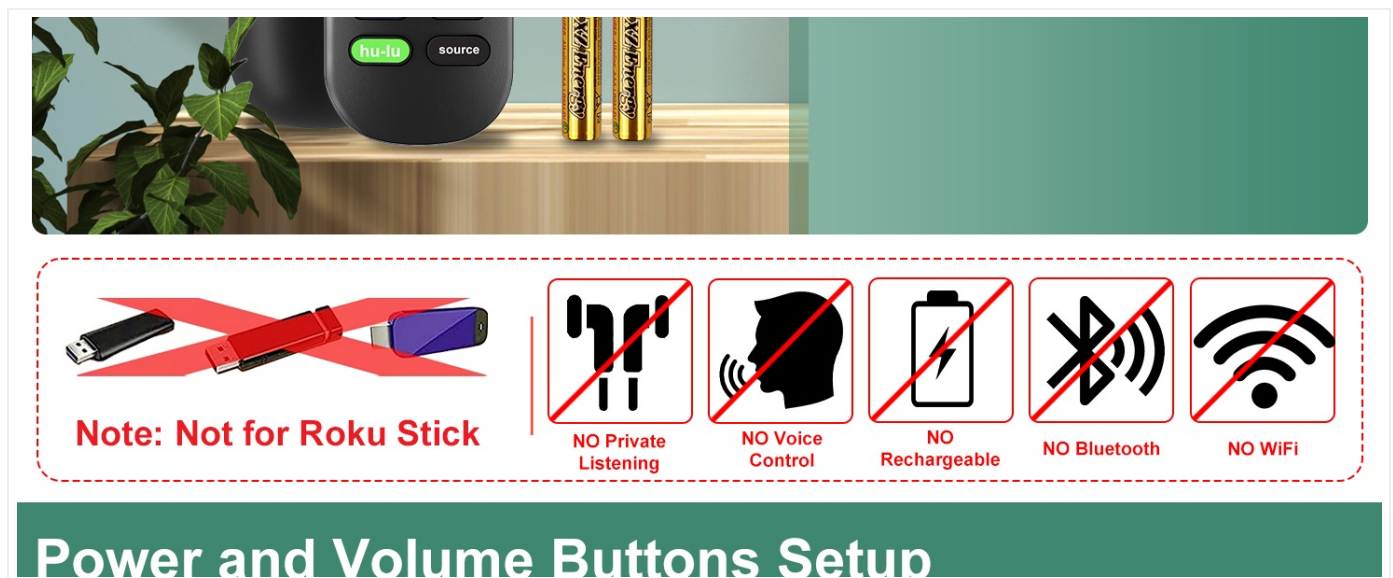 


Figure 1: The Yimaut IR Remote Control, designed for ease of use, shown alongside two AAA batteries for power.

2. COMPATIBILITY

The Yimaut IR Remote Control is compatible with a wide range of Roku devices and TVs. Please verify your device's compatibility before proceeding with setup.

2.1. Compatible Roku Players

- Roku Box
- Roku 1, 2, 3, 4 (Models: SE 2710/X/R, HD 3000, XD 3050, XS 3100 2720, 4210/XB/X2, 4200, 4230, 4400)
- Roku HD/LT/XS/XD (Models: HD(2500/X/R 2000 N1100), LT(2450/X/XB/D 2400), XD(2050), XDS(2100))
- Roku Express/+ (Models: 3700/X/R/RW, 3900/R/X/XB/RW, 3930/X/R/RWXB/X-BDL1, 3940/RW, 3710/X/XB/RW, 3910/RW, 3931/W, 3941/X)

- Roku Premiere/+ (Models: 2700/R, 3920/X/R/RW/XB/EU/EU-GB, 4620/X/R/RW, 3921RW, 4630/X)
- Roku Ultra 1/LT (Models: 4640, 4660/X2, 4661, 4662, 4670, 4800)
- Roku Soundbar

2.2. Compatible Built-in Roku TVs (No Setup Required)

This remote works directly with the following built-in Roku TV brands without additional setup:


- TCL Roku TV
- Hisense Roku TV
- Onn Roku TV
- Sharp Roku TV
- Haier Roku TV
- Insignia Roku TV
- Sanyo Roku TV
- Hitachi Roku TV
- RCA Roku TV
- Philips Roku TV
- Element Roku TV
- LG Roku TV
- JVC Roku TV
- Magnavox Roku TV
- Westinghouse Roku TV


For All Roku Built-in TV---- No Setup Required

No setup required, can be used directly

<ul style="list-style-type: none"> -For TCL Roku TV -For Element Roku TV -For Hitachi Roku TV -For Sharp/Insignia/RCA/JVC/Magnavox Roku TV 	<ul style="list-style-type: none"> -For Hisense Roku TV -For Onn Roku TV -For Sanyo Roku TV 	<ul style="list-style-type: none"> -For Westinghouse Roku TV -For Philips Roku TV -For LG
--	--	--

line-of-sight require





Come with Batteries

Figure 2: The Yimaut remote is compatible with many built-in Roku TV brands, including TCL, Hisense, Onn, Sharp, Haier, Insignia, Sanyo, Hitachi, RCA, Philips, Element, LG, JVC, Magnavox, and Westinghouse. No additional setup is required for these TVs.

3. SETUP AND OPERATION

3.1. Inserting Batteries

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.



Safety Material

Safe for Baby and Pregnant Women



Figure 3: The Yimaut IR Remote Control comes with two AAA batteries, ready for immediate use. This eliminates the need for a separate battery purchase.

3.2. Using with Built-in Roku TVs

For TVs with built-in Roku functionality (listed in Section 2.2), the remote is ready to use immediately after battery insertion. No programming is required. Simply point the remote directly at your TV to operate.

3.3. Using with Roku Players (External Devices)

When using this remote with an external Roku player (e.g., Roku Box, Express, Premiere, Ultra), ensure there is a clear line of sight between the remote and the Roku player. Obstructions can block the infrared (IR) signal, preventing the remote from functioning correctly. Do not hide the Roku player behind the TV or inside a cabinet.

For TV with Roku Player Setup ---- Need Setup

Please follow the instructions to setup.

Only for the Models Listed Below, other Devices are Not Supported.	
Roku 1/2/3/4	SE 2710/X/R, HD 3000, XD 3050, XS 3100, 2720, 4210/XB/X2, 4200, 4230, 4400
HD/LT/XS/XD	HD(2500/X/R 2000 N1100), LT(2450/X/XB/D 2400), XD(2050), XDS(2100)
Roku Express/+	3700/X/R/RW, 3900/R/X/XB/RW, 3930/X/R/RWXB/X-BDL1, 3940/RW, 3710/X/XB/RW, 3910/RW, 3931/W, 3941/X
Roku Premiere/+	2700/R, 3920/X/R/RW/XB/EU/EU-GB, 4620/X/XB/R/RW, 3921RW, 4630/X
Roku Ultra/LT	4640, 4660/X2, 4661, 4662, 4670, 4800

⚠️ Avoid obstructions, don't hide the Roku Player behind the TV or in the cabinet—it won't receive signals.

⚠️ Align the remote control within 30 degrees of the device for best results.

⚠️ If the remote control can't working or damage, please tell us for assistance.

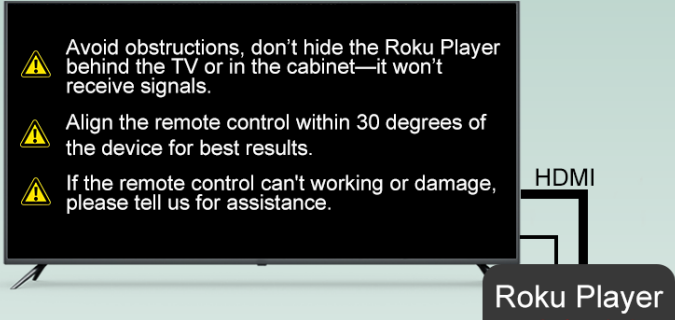 


Figure 4: When using the remote with a separate Roku Player, maintain a clear line of sight between the remote and the player. Avoid obstructions and ensure the player is not hidden behind the TV or in a cabinet for optimal signal reception.

3.4. Learning Power and Volume Functions (Function 4)

To control your TV's power and volume using the Yimaut remote, you must program these functions from your original TV remote control. This process requires your old TV remote to be functional.

1. Ensure both the Yimaut remote and your original TV remote have working batteries.
2. Place the Yimaut remote and your original TV remote face-to-face, approximately 1 inch apart.
3. On the Yimaut remote, press and hold the **Power** button until the indicator light begins to flash slowly.
4. While the indicator light is flashing, press the **Power** button on your original TV remote. The Yimaut remote's indicator light should flash rapidly, then turn solid, indicating successful learning.
5. Repeat steps 3 and 4 for the **Volume Up**, **Volume Down**, and **Mute** buttons.
6. Test the newly programmed buttons to ensure they control your TV as expected.


Note: If you do not have your old TV remote, you will not be able to set up the power and volume buttons on the Yimaut remote.


Step 1:

- ✖ Please prepare your old TV remote control for the purpose of learning the volume and power button functions.
- ✖ Do not purchase without an old TV remote control.

Step 2:

- ✖ Use Function 4 in the manual to learn the buttons of your old TV remote.





Power

Volume

Figure 5: This image illustrates the process of programming the Power and Volume buttons on your Yimaut remote by learning signals from your original TV remote control. Ensure both remotes are facing each other within 1 inch during this process.

4. FEATURES

4.1. Shortcut Keys

The Yimaut remote includes 8 dedicated shortcut keys for quick access to popular streaming services and input sources:

- Amazon Prime Video
- NETFLIX
- YouTube
- Prime (likely another Amazon Prime shortcut)
- Disney+
- ESPN+
- Hulu
- Source (for changing TV input)

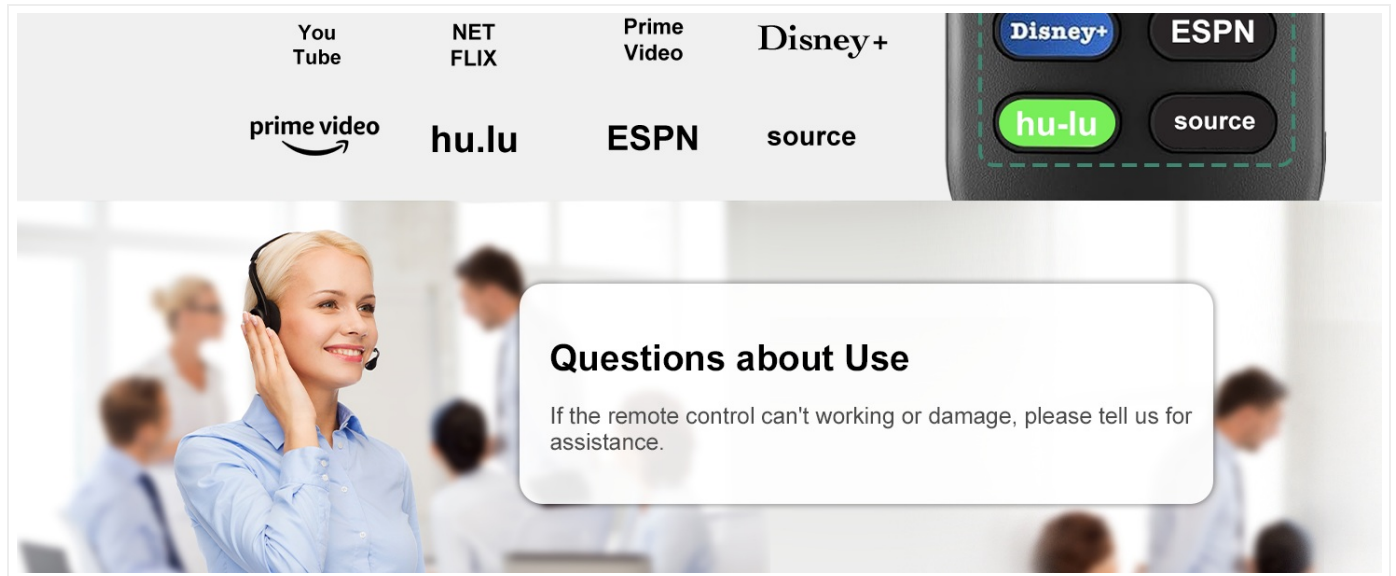 



Figure 6: The remote features 8 shortcut keys for popular streaming services and input selection, allowing for quick navigation.

4.2. Responsive Design

The remote is engineered for a quick transmission and response time of 0.2 seconds, ensuring commands are executed almost instantly. The buttons are designed for durability, tested to support over 100,000 clicks.

5. IMPORTANT NOTES AND LIMITATIONS

 - This is an **IR (Infrared) remote control**. It requires a direct line of sight to the device it is controlling.
- **Not compatible with Roku Stick devices.**
- **No Private Listening:** This remote does not support private listening through headphones.
- **No Voice Control:** Voice command functionality is not available with this remote.
- **No Bluetooth or Wi-Fi Connectivity:** This remote operates solely via IR and does not use Bluetooth or Wi-Fi.
- **Not Rechargeable:** The remote uses AAA batteries and is not designed for recharging.

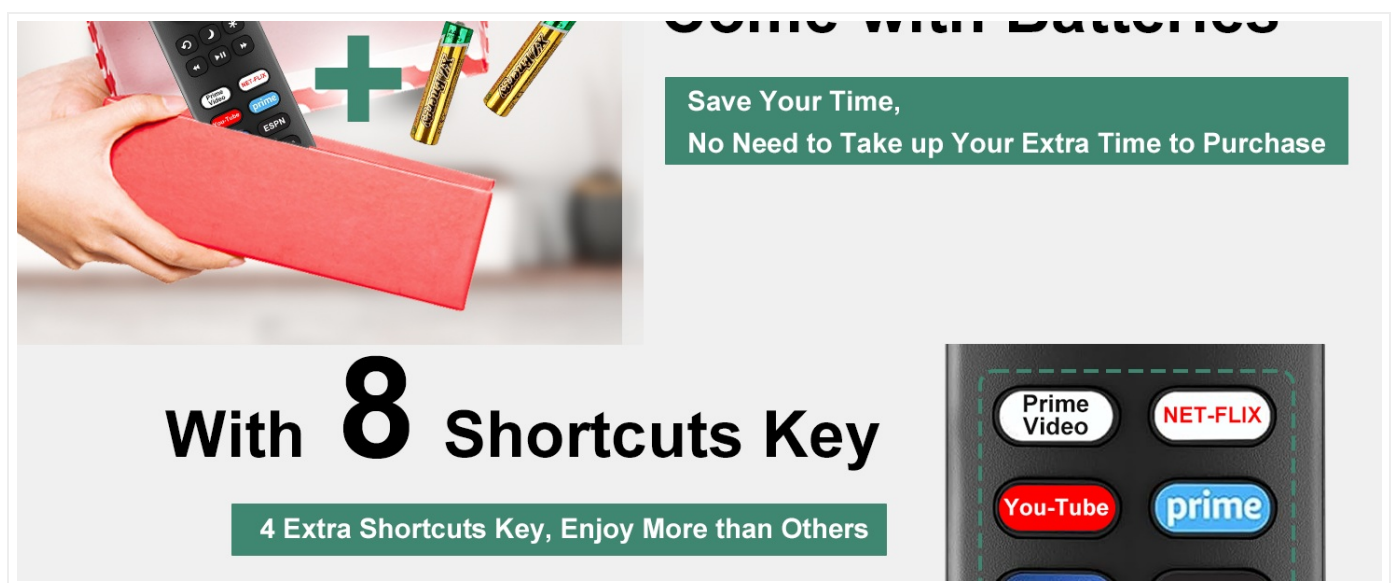

Save Your Time,
No Need to Take up Your Extra Time to Purchase

With **8** Shortcuts Key

4 Extra Shortcuts Key, Enjoy More than Others

Figure 7: This remote is a standard IR remote and does not support features such as private listening, voice control, Bluetooth connectivity, or Wi-Fi. It is not compatible with Roku Stick devices and is not rechargeable.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly and are not depleted. Replace batteries if necessary.
 - Check for any obstructions between the remote and your Roku device/TV.
 - Verify that the remote is pointed directly at the IR receiver of your device.
- **Power/Volume buttons not working:**
 - Confirm that these buttons have been successfully programmed using the learning function (Section 3.4).
 - Repeat the learning process if the programming was unsuccessful.

7. SPECIFICATIONS

Brand	Yimaut
Model Number	fd447714-5f15-48b3-93c2-4df9ef75223d
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (included)
Item Weight	2.39 ounces
Package Dimensions	6.12 x 2.54 x 0.92 inches
Max Number of Supported Devices	1
Special Features	Ergonomic design, 8 Shortcut Keys, TV Power/Volume Learning Function

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Yimaut customer service directly. If your remote control is not working or is damaged, please reach out for assistance.

