

[Manuals.plus](#) /

› [SRJTEK](#) /

› SRJTEK Sky Devices Elite OctaPlus Touch Screen Digitizer Replacement Manual

SRJTEK Elite OctaPlus

SRJTEK Sky Devices Elite OctaPlus Touch Screen Digitizer Replacement Manual

Model: Elite OctaPlus

[Product Overview](#)

[Package Contents](#)

[Compatibility](#)

[Safety & Precautions](#)

[Installation](#)

[Guide](#)

[Troubleshooting](#)

[Specifications](#)

[Maintenance](#)

[Warranty & Support](#)

1. PRODUCT OVERVIEW

This document provides instructions for the SRJTEK Touch Screen Digitizer Replacement for the Sky Devices Elite OctaPlus 8-inch tablet. This component is designed to replace a broken or malfunctioning touch screen panel, restoring touch functionality to your device. Please note that this product is the digitizer glass only and does not include the LCD display.



Image 1.1: Front and back view of the SRJTEK Sky Devices Elite OctaPlus 8-inch touch screen digitizer replacement, highlighting the flexible connector cable and pre-applied adhesive on the reverse side.

2. PACKAGE CONTENTS

Upon opening the package, verify that all the following items are present and in good condition:

- 1x SRJTEK Touch Screen Digitizer Panel for Sky Devices Elite OctaPlus 8-inch
- 1x Set of Operation Tools (includes screwdrivers, pry tools, suction cup, and sim ejector tool)
- 1x Adhesive strip (may be pre-applied to the digitizer)
- 1x Cleaning Wipes (Wet and Dry)

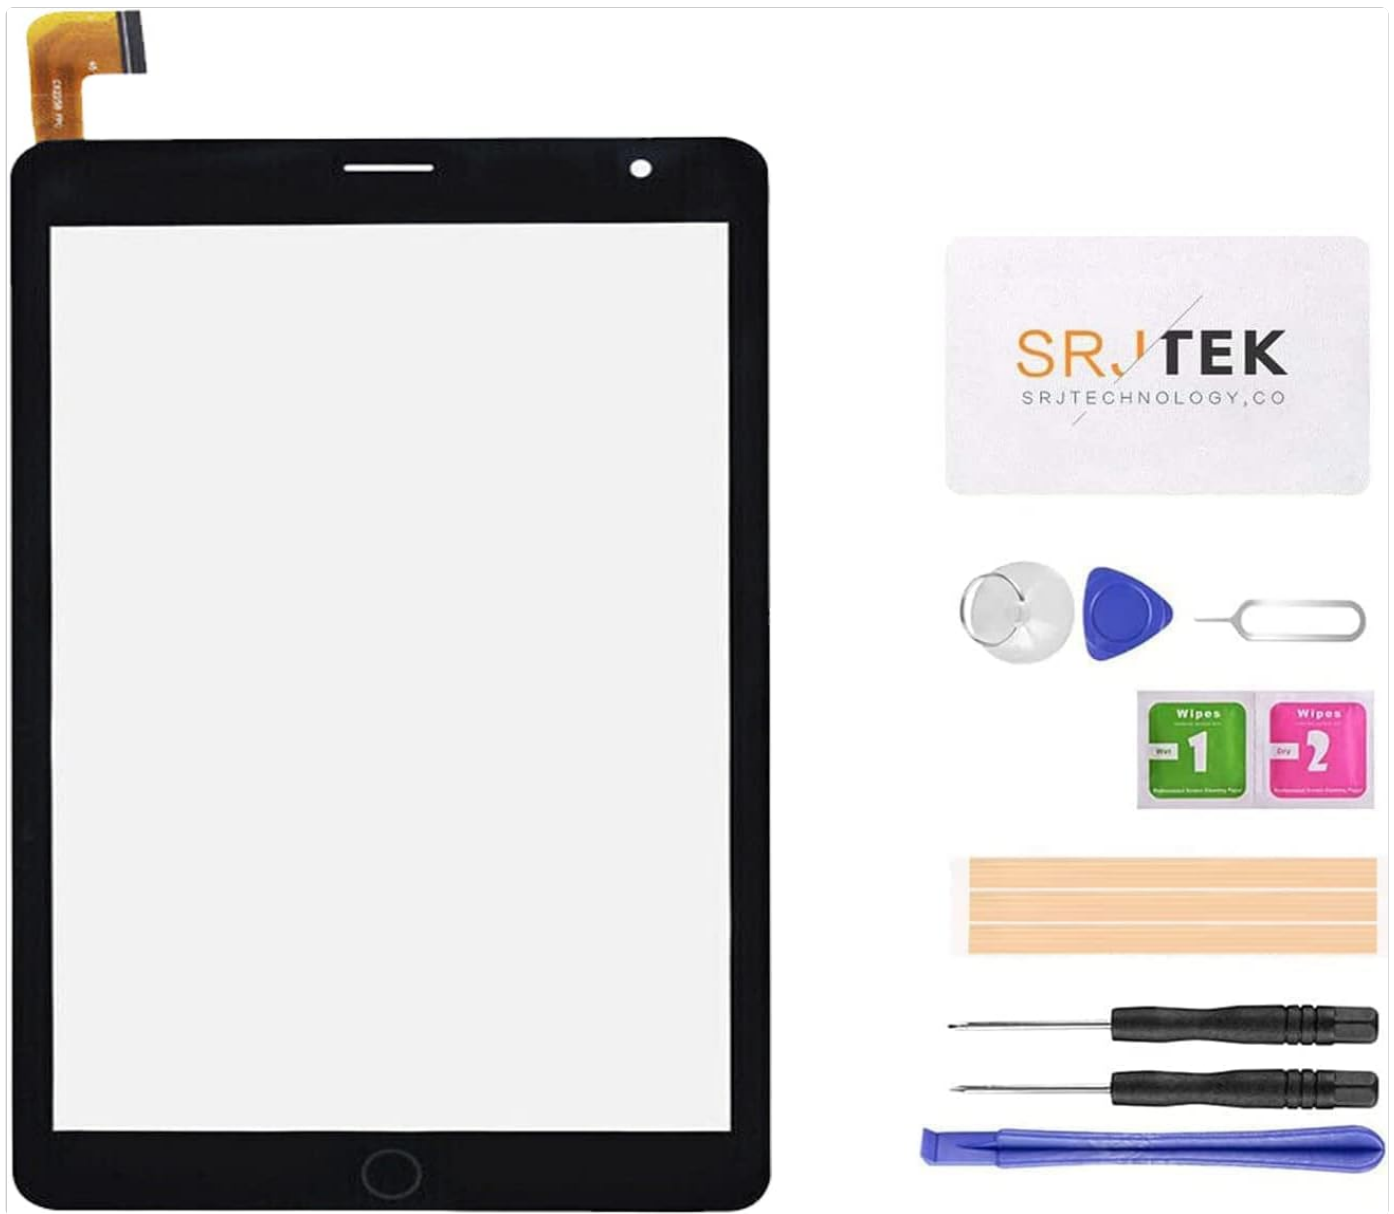


Image 2.1: The complete package contents for the SRJTEK Sky Devices Elite OctaPlus touch screen digitizer replacement, showing the digitizer panel, a set of repair tools, adhesive strips, and cleaning wipes.

3. COMPATIBILITY

This touch screen digitizer is specifically designed for the **Sky Devices Elite OctaPlus 8-inch tablet**. It is crucial to confirm your device model before attempting installation.

Important: This digitizer is **NOT** compatible with Sky Devices Elite OctaX, Elite OctaMax, or any other tablet models. It does not include the LCD display; it is solely the touch screen glass panel.

4. IMPORTANT SAFETY INFORMATION & PRECAUTIONS

Please read and understand all safety information and precautions before proceeding with installation. Failure to follow these guidelines may result in damage to the product or your device.

- **Pre-Installation Check:** Before removing any protective films or labels, thoroughly inspect the new digitizer for any physical damage. Test the functionality of the digitizer by connecting it to the motherboard without fully installing it.
- **Fragile Component:** The screen is made of glass and is extremely fragile. Handle with extreme care to prevent cracks or breakage.
- **Static Electricity:** Be mindful of static electricity. Wear an anti-static wrist strap or frequently touch a grounded

metal object to discharge static electricity, which can damage electronic components.

- **Flex Cable Handling:** Do not bend the flexible connector cable excessively or at an angle greater than 90 degrees during installation or testing. Excessive bending can cause damage, leading to display issues such as a black screen.
- **Professional Installation Recommended:** If you lack experience in electronic device repair, it is highly recommended to seek professional assistance. Attempting self-repair without proper knowledge can lead to further damage to your device and void the product warranty.

5. INSTALLATION GUIDE

Replacing a tablet digitizer requires precision and care. We strongly recommend professional installation. If you choose to proceed with self-installation, please follow these general guidelines and refer to online resources for detailed visual instructions.

1. **Power Off Device:** Ensure your Sky Devices Elite OctaPlus tablet is completely powered off before beginning.
2. **Discharge Static:** Take anti-static precautions as mentioned in Section 4.
3. **Remove Old Digitizer:** Carefully heat the edges of the old digitizer to soften the adhesive. Use appropriate pry tools to gently separate the old digitizer from the tablet frame. Disconnect the flex cable from the motherboard.
4. **Clean Frame:** Thoroughly clean any remaining adhesive or glass fragments from the tablet frame.
5. **Test New Digitizer:** Before applying adhesive, connect the new digitizer's flex cable to the motherboard. Power on the tablet to test touch functionality across the entire screen. Ensure there are no dead spots or unresponsive areas.
6. **Apply Adhesive:** If the new digitizer does not have pre-applied adhesive, carefully apply the provided adhesive strips to the tablet frame or the back of the new digitizer.
7. **Install New Digitizer:** Carefully align the new digitizer with the tablet frame and gently press it into place, ensuring a secure fit.
8. **Final Check:** Power on the tablet and perform a final check of touch functionality.

For visual guidance, search for "Sky Devices Elite OctaPlus digitizer replacement" on video platforms like [YouTube](#). Always prioritize videos from reputable sources.

6. TROUBLESHOOTING

Issue: Black Screen After Installation

If your tablet displays a black screen after installing the new digitizer, but you can feel vibrations when pressing the power button, this often indicates that the main flex cable (or the digitizer's flex cable) is not properly connected to the motherboard.

Solution:

1. Power off the device completely.
2. Carefully reopen the tablet.
3. Inspect the connection of the digitizer's flex cable and any other main flex cables to the motherboard. Ensure they are securely and correctly seated.
4. Reassemble and test the device.

If you encounter other issues or the problem persists, please refer to the Warranty & Support section for assistance.

7. SPECIFICATIONS

Feature	Detail
Product Type	Touch Screen Digitizer Panel (Glass only)
Compatibility	Sky Devices Elite OctaPlus 8-inch Tablet
Screen Size	8.0 inches
Material	Glass
Brand	SRJTEK

8. MAINTENANCE

To ensure the longevity and optimal performance of your new touch screen digitizer, follow these maintenance tips:

- **Cleaning:** Use a soft, lint-free cloth, slightly dampened with water or a screen-specific cleaner, to gently wipe the screen. Avoid harsh chemicals or abrasive materials.
- **Protection:** Consider using a screen protector to guard against scratches and minor impacts.
- **Handling:** Avoid placing heavy objects on the tablet screen or exposing it to sharp objects.
- **Temperature:** Do not expose the tablet to extreme temperatures, as this can affect the adhesive and screen components.

9. WARRANTY & SUPPORT

SRJTEK provides a **6-month after-sale service** for this product. This warranty covers manufacturing defects and issues arising from normal use.

What is Covered:

- Non-responsive touch functionality (not caused by improper installation or physical damage).
- Dead pixels or display anomalies (if the LCD is part of the assembly, which it is not for this product).
- Other manufacturing defects.

What is Not Covered:

- Damage caused by improper installation.
- Physical damage (e.g., cracks, drops, impacts).
- Damage from liquid exposure.
- Damage from unauthorized repairs or modifications.

How to Obtain Support:

If you experience any issues with your SRJTEK digitizer replacement within the warranty period, please contact SRJTEK customer service through the platform where you purchased the product. Be prepared to provide your order details and a description of the issue. SRJTEK will provide a new replacement or a satisfactory solution.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question