

[Manuals.plus](#) /

› [Sekonda](#) /

› Sekonda Airborne Men's 40mm Quartz Chronograph Watch 30027 Instruction Manual

Sekonda 30027

Sekonda Airborne Men's 40mm Quartz Chronograph Watch - Model 30027

Instruction Manual

INTRODUCTION

This manual provides instructions for the proper use and care of your Sekonda Airborne Men's 40mm Quartz Chronograph Watch, Model 30027. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.



Image: The Sekonda Airborne Men's 40mm Quartz Chronograph Watch, Model 30027, featuring a blue dial and blue leather strap, worn on a wrist.

COMPONENTS OVERVIEW

Familiarize yourself with the main components of your watch:

WATCH FEATURES.

Date
Window

Two Year
Guarantee

Chronograph
Dials

Blue
Leather Strap

30027 - Sekonda Airborne Men's Chronograph Watch
with Silver Case & Blue Leather Strap with Blue Dial

Image: A diagram highlighting key features of the Sekonda Airborne watch, including the date window, chronograph dials, and blue leather strap.

- **Crown:** Used for setting the time and date.
- **Pushers (A & B):** Used to operate the chronograph functions.
- **Hour, Minute, Second Hands:** Indicate the current time.
- **Chronograph Dials:** Measure elapsed time (e.g., 1-second chronograph up to 1 hour).
- **Date Window:** Displays the current date.
- **Blue Leather Strap:** Secures the watch to your wrist.

SETUP

1. Setting the Time

1. Pull the crown out to position 2 (the furthest position).
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time. Ensure the

AM/PM is correctly set if your watch has a 24-hour indicator or if setting the date.

3. Push the crown back into position 0 (normal position) to start the watch.

2. Setting the Date

1. Pull the crown out to position 1 (the first click).
2. Turn the crown clockwise or counter-clockwise to set the date. Avoid setting the date between 9:00 PM and 3:00 AM, as this may interfere with the automatic date change mechanism.
3. Once the date is set, push the crown back into position 0.

3. Operating the Chronograph

Your watch features a 1-second chronograph that can measure up to 1 hour.

1. **Start:** Press pusher A (top pusher) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press pusher A again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** Press pusher B (bottom pusher) to reset the chronograph hands to their zero positions. Ensure the chronograph is stopped before resetting.

OPERATING

Water Resistance

This watch is water resistant up to 50 meters (5 ATM). This means it is suitable for everyday use, showering, bathing, and swimming in shallow water. It is **not** suitable for diving or snorkeling.

- Do not operate the crown or pushers while the watch is wet or submerged in water.
- Ensure the crown is fully pushed in before exposing the watch to water.
- Avoid exposing the watch to extreme temperature changes, such as moving from a hot shower to cold water, as this can affect the water resistance seals.

MAINTENANCE

Cleaning

- Wipe the watch case and crystal regularly with a soft, dry cloth to remove dust and smudges.
- For the leather strap, avoid prolonged exposure to water, direct sunlight, and harsh chemicals, as these can cause damage or discoloration. Clean with a slightly damp cloth and allow to air dry.

Battery Replacement

The watch is powered by a quartz movement with an estimated battery life of up to 2 years. When the battery runs low, the watch may stop or the second hand may jump in irregular intervals (End-of-Life indicator). Battery replacement should be performed by a qualified watch technician to ensure proper sealing and function.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Watch has stopped or runs intermittently.	Low battery.	Replace the battery (recommended by a professional).
Time or date is incorrect.	Crown not fully pushed in, or time/date not set correctly.	Refer to the "Setting the Time" and "Setting the Date" sections. Ensure the crown is fully pushed in.
Chronograph hands do not reset to zero.	Chronograph was not stopped before resetting, or a calibration issue.	Ensure the chronograph is stopped (press pusher A) before pressing pusher B to reset. If the issue persists, consult a watch technician for calibration.
Condensation inside the watch.	Exposure to extreme temperature changes or compromised water resistance.	Immediately take the watch to a professional watch repair service. Do not attempt to dry it yourself.

SPECIFICATIONS

- **Model Number:** 30027
- **Brand:** Sekonda
- **Display Type:** Analog
- **Watch Movement:** Japanese Quartz Chronograph
- **Case Material:** Stainless Steel
- **Case Diameter:** 40mm
- **Case Shape:** Cushion
- **Dial Window Material:** Mineral Glass
- **Dial Color:** Blue
- **Band Material Type:** Leather
- **Band Color:** Blue
- **Band Width:** 21mm
- **Clasp Type:** Buckle
- **Water Resistance Depth:** 50 Meters (5 ATM)
- **Special Features:** Chronograph, Date Display
- **Power Source:** Battery Powered (1 Unknown battery included)

WARRANTY & SUPPORT

Your Sekonda Airborne watch comes with a **2-year guarantee** from the date of purchase, covering manufacturing defects. This guarantee does not cover normal wear and tear, damage caused by improper use, or unauthorized repairs.



Image: Sekonda branding details, confirming the 2-year guarantee.

For warranty claims or technical support, please contact your retailer or the official Sekonda customer service. Keep your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question