

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Play-Doh](#) /

› [Play-Doh Kitchen Creations Busy Chef's Restaurant Playset Instruction Manual](#)

**Play-Doh F8107**

# Play-Doh Kitchen Creations Busy Chef's Restaurant Playset Instruction Manual

Model: F8107

## 1. PRODUCT OVERVIEW

The Play-Doh Kitchen Creations Busy Chef's Restaurant Playset allows children to engage in imaginative play by running their own pretend restaurant. Kids can create, customize, and share various Play-Doh food creations with pretend customers. This playset is designed to foster creativity and fine motor skills.



Figure 1: Play-Doh Kitchen Creations Busy Chef's Restaurant Playset.

## Key Features

- **2-Sided Restaurant Kitchen Playset:** Allows multiple children to play simultaneously, fostering collaborative imaginative play.
- **Dual Food Stamper:** Attach two stampers and press the lever to create two pretend food items (burgers, pizza, chicken, or spaghetti) at once.
- **Sliding Griddle:** The griddle automatically slides to the prep station when the lever is released, simulating a real kitchen workflow.
- **Half-Molds for Decorations:** Integrated half-molds on both sides of the playset allow for creating various toppings and side dishes.
- **Serving Window:** Creations can be placed on a plate and passed through the serving window to friends or family.
- **Play Kitchen Accessories:** Includes a spatula, knife, plate, and a mini menu board to enhance the pretend play experience.
- **5 Play-Doh Colors:** Comes with 2-ounce cans of red, yellow, green, blue, and brown Play-Doh compound.

## 2. WHAT'S IN THE BOX

The Play-Doh Kitchen Creations Busy Chef's Restaurant Playset includes the following components:

- Restaurant playset (main unit)
- 4 Food stampers (interchangeable)
- 1 Roller
- 1 Menu board
- 1 Spatula
- 1 Knife
- 1 Plate
- 5 Cans of Play-Doh Brand Modeling Compound (net weight 10 oz/284 g)



Figure 2: All included components.

### 3. SETUP INSTRUCTIONS

Follow these steps to set up your Play-Doh Kitchen Creations Busy Chef's Restaurant Playset:

1. Carefully remove all components from the packaging.
2. Ensure the main playset unit is stable on a flat surface.
3. Attach the desired food stampers to the designated slots on the playset's press mechanism.
4. Familiarize yourself with the various half-molds located on both sides of the playset.



Figure 3: Child interacting with the playset.

## 4. OPERATING INSTRUCTIONS

### Creating Play-Doh Foods

1. **Prepare Play-Doh:** Take a small amount of Play-Doh compound and roll it into a ball or shape it to fit into the chosen stamper.
2. **Stamp Food Items:** Place the prepared Play-Doh into the attached stampers. Press the red lever down firmly to stamp out pretend burgers, pizza, chicken, or spaghetti.
3. **Slide to Prep Station:** Release the lever, and the griddle will automatically slide over to the prep station, presenting your freshly stamped Play-Doh food.



*Figure 4: Stamping and sliding mechanism.*

4. **Decorate with Half-Molds:** Use the various half-molds located on both sides of the playset to create toppings like lettuce, cheese, fruits, or other side dishes.



*Figure 5: Using fruit half-molds.*

5. **Use the Oven:** The playset features a small oven. Use the spatula to place pretend desserts or other creations inside the oven for imaginative baking.



*Figure 6: Placing Play-Doh in the oven.*

6. **Serve Your Creations:** Once your Play-Doh food is complete, place it on the included plate and pass it through the serving window to your customers.



Figure 7: Serving food through the window.

- Change Stampers:** The playset includes interchangeable stampers for different food types. Simply pull off the current stamper and replace it with another to create a new dish.



Figure 8: Changing food stampers.

## Official Product Video

Your browser does not support the video tag.

Video 1: Official demonstration of the Play-Doh Kitchen Creations Busy Chef's Restaurant Playset.

## 5. MAINTENANCE AND CARE

---

- **Storing Play-Doh:** Always return Play-Doh compound to its containers after use and seal them tightly to prevent drying. If Play-Doh becomes dry, a few drops of water can help restore its pliability.
- **Cleaning the Playset:** Wipe down the playset and accessories with a damp cloth after each play session. Avoid harsh chemicals or abrasive cleaners.
- **Cleaning Tools:** Wash plastic tools and molds with warm water and mild soap. Ensure they are completely dry before storing.

## 6. SAFETY INFORMATION

---

**WARNING:** Small parts may be generated. Not for children under 3 years.

- **Recommended Age:** This playset is recommended for ages 3 years and up.
- **Play-Doh Compound:** Play-Doh compound contains wheat. Individuals with wheat allergies should

exercise caution.

- **Adult Supervision:** Adult supervision is recommended during play to ensure safe use of all components.

## 7. PRODUCT SPECIFICATIONS

Specification	Detail
Product Dimensions	7.87 x 14.37 x 8.46 inches
Item Weight	2.26 pounds
Item Model Number	F8107
Manufacturer Recommended Age	3 years and up
Release Date	June 1, 2023
Language	English
Manufacturer	Hasbro