

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Tiny Love](#) /

> [Tiny Love 5-in-1 Stationary Activity Center \(Magical Tales\) Instruction Manual](#)

Tiny Love WA111FGO

Tiny Love 5-in-1 Stationary Activity Center (Magical Tales) Instruction Manual

Model: WA111FGO | Brand: Tiny Love

INTRODUCTION

The Tiny Love 5-in-1 Stationary Activity Center is designed to support your child's development from infancy through toddlerhood. This versatile product offers five distinct modes of use, adapting to your child's changing needs and developmental stages. It features a variety of interactive toys that stimulate senses and encourage motor skill development.

The five modes include: Tummy Time, Stationary Activity Center, Baby Balance Board, Toddler Activity Table, and Child Table and Chair.

SAFETY INFORMATION

Always ensure adult supervision when the child is using the activity center. Before each use, inspect the product for any loose parts, damage, or signs of wear. Do not use if any components are broken or missing. Ensure all parts are securely locked into place when converting between modes.

- **Age and Weight Limits:** This activity center is suitable for children who can hold their head upright unassisted and are not yet able to walk or climb out of the product in the stationary activity center mode. Refer to the product labels for specific weight and height restrictions for each mode.
- **Placement:** Place the activity center on a flat, level surface away from stairs, windows, and heat sources.
- **Choking Hazard:** Regularly check all toys and components for small parts that could become detached and pose a choking hazard.

SETUP AND ASSEMBLY

The Tiny Love 5-in-1 Stationary Activity Center is designed for easy assembly without the need for special tools. Follow these general steps for initial setup and conversion between modes.

Initial Assembly

1. Unpack all components and verify against the parts list in your included manual.
2. Attach the legs to the main activity table frame, ensuring they click securely into place.
3. Insert the central seat or the balance board platform into the designated opening, depending on the desired mode.
4. Attach the interactive toys to the activity table at the desired positions.

Height Adjustment

The activity center features 3 height options to grow with your child. To adjust the height, locate the adjustment buttons on each leg, press them, and slide the leg to the desired height setting until it locks into place.



Bouncing bear with spinning rattle
for sensory stimulation

Image: The activity center demonstrating its three adjustable height settings.

Converting to Activity Table / Child Table & Chair

The activity center easily transforms into a toddler activity table or a child table and chair set.

1. To convert to an activity table, remove the central seat. The foot platform can be removed and inserted into the central opening to create a flat table surface.
2. To create a child table and chair, detach the legs from the main table. The foot platform can be detached and converted into a small stool by attaching separate legs (included).



Image: The activity center transformed into a toddler table with a separate stool.

Your browser does not support the video tag.

Video: Demonstrates the various modes and how the activity center grows with your baby.

Your browser does not support the video tag.

Video: Shows the conversion process of the activity center into different configurations.

OPERATING INSTRUCTIONS

Each mode of the Tiny Love 5-in-1 Stationary Activity Center offers unique developmental benefits and engagement opportunities.

1. Tummy Time Mode

Remove the electronic musical piano from the activity table and place it on the floor for tummy time play. The piano features lights and sounds to encourage reaching and interaction.

2. Stationary Activity Center Mode

Place your baby in the central swiveling seat. Ensure the seat is securely installed. The baby can rotate 360 degrees to access all interactive toys around the table. The foot platform provides support and allows for gentle bouncing.



Over 20 activities will engage your baby in continuous creativity & learning experiences.

Image: A baby engaging with the toys in the stationary activity center mode.

3. Baby Balance Board Mode

With the baby in the seat, the foot platform allows for gentle bouncing and encourages leg strength and balance. Ensure the platform is set to the appropriate height for your baby's feet to comfortably touch.

Let your baby embark on an exciting journey of growth & discovery.



Image: Close-up of a baby's feet on the textured balance board, promoting leg development.

4. Toddler Activity Table Mode

Once your child outgrows the seat, remove it and insert the foot platform into the central opening to create a flat activity table. This provides a stable surface for standing play and interaction with the removable toys.



Baby-activated musical piano with lights & sounds teaches little ones the basics of **cause & effect**.

Image: A toddler standing and playing with toys on the converted activity table.

5. Child Table and Chair Mode

For older toddlers, the main table can be used as a standalone child's table, and the foot platform converts into a small stool. This mode supports independent play, drawing, and other activities.



Image: A child sitting comfortably at the table with the stool, ideal for creative play.

Interactive Toys

The activity center includes 6 interactive toys designed for developmental stimulation:

- **Electronic Musical Piano:** Features lights and sounds, detachable for tummy time.
- **Bouncing Beads Drum:** Offers audio and visual stimulation with colorful beads.
- **Bouncing Bear with Spinning Rattle:** Provides sensory stimulation and encourages grasping.
- **Lily with Crinkly Leaves:** Offers tactile stimulation.
- **Playful Bead Maze with Rotating Mirror:** Fosters eye-hand coordination.
- **Bird Wind Chime:** Offers sweet sounding audio stimulation.



Image: A detailed view of the various interactive toys, including the piano, drum, and animal figures.

Your browser does not support the video tag.

Video: A detailed look at the interactive toys and features of the activity center.

MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and hygiene of your Tiny Love 5-in-1 Stationary Activity Center.

- **Cleaning the Seat Pad:** The fabric seat pad is removable and machine washable. Use a gentle cycle with cold water and mild detergent. Air dry or tumble dry on low heat.
- **Cleaning Plastic Parts:** Wipe down all plastic surfaces with a damp cloth and mild soap. Rinse thoroughly and dry completely before reassembly. Avoid abrasive cleaners or solvents.
- **Toy Care:** Detachable toys can be wiped clean with a damp cloth. Do not immerse electronic toys in water.

TROUBLESHOOTING

If you encounter any issues with your activity center, please refer to the following common solutions:

- **Toys Not Functioning:** For electronic toys like the musical piano, ensure batteries are correctly installed and not depleted. Replace batteries if necessary.
- **Difficulty Converting Modes:** Ensure all locking mechanisms are fully disengaged before attempting to convert between modes. Apply gentle pressure and follow the assembly instructions carefully.
- **Unstable Structure:** Double-check that all legs and components are securely locked into their designated positions. Ensure the activity center is placed on a flat, stable surface.

SPECIFICATIONS

Product Dimensions	26.38 x 25.75 x 6 inches
Item Model Number	WA111FGO
Target Gender	Unisex
Material Type	Plastic, Polyester
Power Source	Manual (Electronic piano requires batteries, not included)
Item Weight	17.36 pounds

WARRANTY AND SUPPORT

For warranty information, product registration, or further assistance, please refer to the warranty card included with your purchase or visit the official Tiny Love website. Contact customer support for any questions or concerns regarding the product.