

[Manuals.plus](#) /

> [Apple](#) /

> Apple iPhone 14 Pro Max Silicone Case with MagSafe - Lilac User Manual

Apple MPTW3ZM/A

Apple iPhone 14 Pro Max Silicone Case with MagSafe - Lilac User Manual

Model: MPTW3ZM/A

1. INTRODUCTION

This manual provides instructions for the proper use and care of your Apple iPhone 14 Pro Max Silicone Case with MagSafe. Designed specifically for the iPhone 14 Pro Max, this case offers protection and enhances functionality with MagSafe compatibility.

2. KEY FEATURES

- **Premium Silicone Material:** The exterior features a soft-touch silicone finish for a comfortable grip.
- **Microfiber Lining:** A soft microfiber lining on the interior provides additional protection against scratches.
- **MagSafe Compatibility:** Integrated magnets ensure perfect alignment with iPhone 14 Pro Max for secure attachment and faster wireless charging with MagSafe accessories.
- **Durable Protection:** Engineered to protect your iPhone from scratches and drops.
- **Precise Fit:** Custom-designed by Apple for the iPhone 14 Pro Max, ensuring full access to all buttons and ports.





Figure 2.1: Rear view of the Lilac Silicone Case with MagSafe for iPhone 14 Pro Max.

3. SETUP AND INSTALLATION

Installing your Apple Silicone Case is a straightforward process:

1. **Clean Your iPhone:** Before installing the case, ensure your iPhone 14 Pro Max is clean and free of dust or debris.
2. **Align the Case:** Hold your iPhone with the screen facing up. Align the top edge of the case with the top edge of your iPhone.
3. **Insert iPhone:** Gently push your iPhone into the case, starting from the top. Ensure all corners and edges are securely seated within the case.
4. **Check Fit:** Verify that the case fits snugly around your iPhone, and all buttons (volume, power) and ports (charging, speakers) are accessible and functional.



Figure 3.1: Proper alignment of the case with the iPhone's side buttons.

4. OPERATING AND USAGE

The Silicone Case is designed for seamless integration with your iPhone 14 Pro Max.

4.1 MagSafe Charging

The built-in magnets in the case allow for easy and efficient wireless charging with MagSafe chargers. Simply place your iPhone (with the case on) onto a MagSafe charger. The magnets will align the phone perfectly for optimal charging.

- Ensure your MagSafe charger is connected to a power source.
- Place the back of your cased iPhone onto the MagSafe charger.
- A charging animation will appear on your iPhone screen to confirm connection.

4.2 MagSafe Accessories

The case is compatible with other MagSafe accessories, such as MagSafe wallets or car mounts. These accessories will magnetically attach to the back of the case, providing a secure connection.



Figure 4.1: iPhone 14 Pro Max with the Lilac Silicone Case and an attached MagSafe wallet.

5. MAINTENANCE AND CARE

To keep your Apple Silicone Case in optimal condition:

- **Cleaning:** Wipe the case regularly with a soft, damp, lint-free cloth. Avoid harsh chemicals or abrasive materials, as these can damage the silicone finish.
- **Stain Removal:** For stubborn stains, a mild soap solution can be used. Ensure the case is completely dry before reattaching it to your iPhone.
- **Avoid Extreme Conditions:** Do not expose the case to extreme temperatures or direct sunlight for prolonged periods, as this may affect the material's integrity and color.

6. TROUBLESHOOTING

6.1 MagSafe Not Attaching Securely

- **Check for Obstructions:** Ensure there are no foreign objects (e.g., dust, debris, credit cards) between the case and the MagSafe accessory or charger.
- **Proper Alignment:** Confirm the MagSafe accessory is correctly aligned with the magnetic ring on the back of the case.
- **Accessory Compatibility:** Verify that the accessory is MagSafe compatible.

6.2 Case Appears Loose

- **Correct Model:** Ensure you have the correct case model for your iPhone 14 Pro Max. This case is specifically designed for the iPhone 14 Pro Max.
- **Re-installation:** Remove the case and re-install it, ensuring all edges and corners are properly seated.

7. SPECIFICATIONS

Feature	Detail
Product Name	Apple iPhone 14 Pro Max Silicone Case with MagSafe
Model Number	MPTW3ZM/A
Compatible Devices	iPhone 14 Pro Max
Material	Silicone (exterior), Microfiber (interior)
Color	Lilac
Dimensions	7.67 x 3.79 x 0.68 inches
Item Weight	3.25 ounces
Manufacturer	Apple

8. WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support for your Apple iPhone 14 Pro Max Silicone Case with MagSafe, please refer to the official Apple website or contact Apple Support directly.

Apple Support Website: <https://support.apple.com/>

Please retain your proof of purchase for warranty claims.