

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [VASAGLE](#) /

> [VASAGLE LSD112N01 Electric Height-Adjustable Standing Desk User Manual](#)

## VASAGLE LSD112N01

# VASAGLE LSD112N01 Electric Height-Adjustable Standing Desk User Manual

Model: LSD112N01 | Brand: VASAGLE

## PRODUCT OVERVIEW

---

The VASAGLE LSD112N01 is an electric height-adjustable standing desk designed for versatile use in various office or home environments. It features a robust construction, integrated power solutions, and convenient storage options to enhance productivity and comfort.

# VASAGLE

by SONGMICS HOME



Image: The VASAGLE LSD112N01 electric height-adjustable standing desk, showcasing its design and functionality in a modern office environment.

## SAFETY INFORMATION

---

- Ensure the desk area is clear of obstructions before adjusting height to prevent damage or injury.
- Keep all electrical components, including the power strip and motor, away from liquids to avoid electrical hazards.

- This desk is designed for indoor use only.
- Do not exceed the maximum weight capacity of 70 kg (154 lbs) on the desktop.
- Regularly check all screws and connections to ensure they remain tight and secure.

## PARTS LIST

---

Before assembly, verify that all components listed below are present in your package:

- 1 x Desktop
- 1 x Control Panel
- 1 x Drawer (22.7 x 32.5 x 4.0 cm)
- 1 x Integrated Power Strip (2 outlets, 2 USB ports)
- 1 x Headphone Hook
- 4 x Casters (optional, for mobility)
- 1 x Accessory Pack (screws, tools, etc.)
- 1 x User Manual (this document)
- Desk Frame (legs, crossbars)

## SETUP AND ASSEMBLY

---

Assembly is required for this product. Follow the detailed instructions provided in the accessory pack. It is recommended to assemble the desk in the room where it will be used due to its weight.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify against the parts list.
2. **Assemble Desk Frame:** Attach the legs to the crossbars using the provided hardware. Ensure all connections are secure.
3. **Attach Desktop:** Secure the desktop to the assembled frame. Pay attention to alignment.
4. **Install Drawer and Hook:** Mount the drawer and headphone hook according to the instructions. The drawer is designed for office supplies or small electronics.
5. **Connect Power Strip:** Integrate the power strip into the designated slot on the desktop. Connect the internal wiring as instructed.
6. **Install Feet or Casters:** Choose between the adjustable feet for stationary use or the included casters for mobility. If using casters, ensure the brakes are engaged when the desk is in a desired position.

# Stable et robuste

- Double barres de maintien stables, capacité de charge de 70 kg
- Les pieds peuvent être remplacés par des roulettes avec freins



Bons matériaux



Remplaçable par des roulettes

Image: The desk's base showing adjustable feet and optional casters with brakes for stability or mobility.

## OPERATING INSTRUCTIONS

### Height Adjustment

The desk's height can be continuously adjusted between 72 cm and 120 cm (28.3 inches to 47.2 inches). The motor operates quietly, typically below 50 dB.

- **Manual Adjustment:** Use the 'Up' and 'Down' arrow buttons on the control panel to adjust the desk to your desired height. The current height will be displayed on the LED screen.
- **Memory Presets:** The desk allows you to save up to 4 preferred heights.
  - a. Adjust the desk to your desired height using the arrow buttons.
  - b. Press the 'M' button, then press one of the numbered preset buttons (M1, M2, M3, M4) to save the current height.
  - c. To recall a saved height, simply press the corresponding numbered preset button.

## Hauteur personnalisée

Ajustez la hauteur de la table en fonction de vos besoins, que vous soyez assis ou debout

Min. **72 cm**

Max. **120 cm**



Écran LED

Hauteur réglable  
entre 72 et 120 cm

Fonction mémoire  
4 hauteurs

Port USB-A

Image: Close-up of the desk's control panel, showing the LED display, up/down arrows, and four memory preset buttons (M1-M4).



Image: A sound meter indicating the desk's quiet operation, with noise levels typically below 50 dB.

### **Integrated Power Strip**

The desk includes a built-in power strip with 2 standard outlets (220V-250V, 15A-16A) and 2 USB-A ports (5V/2A) for convenient charging of your devices.

- Plug the desk's main power cable into a wall outlet.
- Use the integrated outlets and USB ports to power or charge your laptop, phone, tablet, and other accessories directly from your desk.

# Multiprise encastrée



2 prises de charge  
220-250V/15-16A



2 ports USB-A  
5V/2A



Image: The integrated power strip on the desk, showing two power outlets and two USB ports in use for charging a phone and tablet.

## Storage Features

- **Drawer:** A small drawer is located under the desktop for storing office supplies, notebooks, or even a laptop.
- **Headphone Hook:** A convenient hook is provided to hang your headphones, keeping them within reach and off the desktop.

# Rangement multifonctionnel

- Plateau pour ordinateurs portables
- Tiroir pour accessoires
- Crochet pour casques



Crochet



Tiroir en tissu

Image: The desk's integrated drawer, suitable for storing a laptop or documents, and a side-mounted hook for headphones.

## MAINTENANCE

- **Cleaning:** Wipe the desktop and frame with a damp cloth. For stubborn marks, use a mild cleaning solution. Dry immediately with a clean, dry cloth.
- **Electrical Components:** Ensure all electrical connections are dry and free from dust. Do not spray cleaning liquids

directly onto electrical parts.

- **Hardware Check:** Periodically check all screws and bolts to ensure they are tight. Loose hardware can affect stability and safety.
- **Weight Distribution:** Distribute weight evenly across the desktop to prevent stress on the lifting mechanism.



Image: Demonstrating the water-resistant properties of the desk surface, being wiped clean with a cloth.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk does not move.	Power cable disconnected, motor error, overload.	Check power connections. Reduce weight on desk. Refer to the full manual for error codes.
Unstable desk.	Loose screws, uneven floor, casters not locked.	Tighten all assembly screws. Adjust leveling feet or lock caster brakes.
Memory function not working.	Incorrect programming.	Reprogram the memory presets following the operating instructions.

For further assistance, please contact customer support.

## SPECIFICATIONS

Feature	Detail
Model Number	LSD112N01
Dimensions (L x W x H)	119.99 x 59.99 x 72.01 cm (47.2 x 23.6 x 28.3 inches)
Weight	29.2 kg (64.4 lbs)
Height Adjustment Range	72 cm - 120 cm (28.3 inches - 47.2 inches)
Max Load Capacity	70 kg (154 lbs)
Noise Level (Operation)	< 50 dB

Feature	Detail
Power Strip Outlets	2 (220V-250V, 15A-16A)
USB Ports	2 x USB-A (5V/2A)
Desktop Material	Engineered Wood (FSC Certified), Varnished
Frame Material	Alloy Steel
Color	Natural Oak + Cloud White
Special Features	Electric height adjustment, 4-height memory, integrated power strip, drawer, headphone hook, optional casters.

# Large surface, bonne capacité de charge

Pour jouer aux jeux vidéo ou pour travailler



Image: Detailed dimensions of the VASAGLE LSD112N01 desk, including height adjustment range and desktop measurements.

## PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video demonstrating key features of the VASAGLE electric height-adjustable desk, including stable height adjustment, integrated drawer, power strip, headphone hook, and the option to use casters or adjustable feet. It also highlights the quiet motor operation and memory function.

## WARRANTY AND SUPPORT

---

For warranty information, please refer to the documentation included with your purchase or visit the official VASAGLE website. If you encounter any issues or require assistance, please contact VASAGLE customer support.

**Customer Support:** Refer to your purchase receipt or the product packaging for contact details.

