

[Manuals.plus](#) /

› [BoostArea](#) /

› BoostArea Modern Pendant Light Fixtures Instruction Manual

BoostArea BD0001

BoostArea Modern Pendant Light Fixtures Instruction Manual

Model: BD0001

1. INTRODUCTION

Thank you for choosing the BoostArea Modern Pendant Light Fixture. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new lighting fixture. Please read these instructions thoroughly before beginning installation and retain them for future reference.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, fire, or injury to persons, please follow these guidelines:

- Always disconnect power at the main circuit breaker before installation or maintenance.
- All wiring must be in accordance with national and local electrical codes. If you are unsure about wiring, consult a qualified electrician.
- Do not exceed the maximum wattage specified for the bulbs (Max 60W for incandescent, Max 15W for LED equivalent).
- Ensure the fixture is securely mounted to a structural part of the ceiling.
- This fixture is designed for **indoor use only**. Do not expose to moisture or outdoor elements.
- Allow the bulb to cool completely before replacing it.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Pendant Light Fixture with Clear Glass Shade
- Mounting Hardware (screws, wire nuts, canopy)
- Installation Guide
- *Note: Bulb is not included.*



Figure 1: Exploded view of the pendant light components, illustrating the canopy, wiring connections, glass shade, and bulb socket for easy assembly.

4. PRODUCT SPECIFICATIONS

Attribute	Detail
Brand	BoostArea
Model Name	BD0001
Color	Clear Glass with Matte Black Finish
Material	Glass, Metal
Product Dimensions (L x W x H)	5.51" x 5.51" x 70.86" (Overall length)
Cord Length	61.02 inches (Adjustable)
Canopy Size (D x H)	4.7" x 0.98"

Shade Size (D x H)	5.51" x 6.69"
Voltage	120 Volts (AC)
Max Wattage (Incandescent)	60 Watts
Max Wattage (LED Equivalent)	15 Watts
Bulb Base	E26 Standard
Installation Type	Flush Mount
Indoor/Outdoor Usage	Indoor Only



Figure 2: Detailed dimensions of the pendant light, highlighting the adjustable cord length and shade size.

5. SETUP AND INSTALLATION

The BoostArea pendant light is designed for easy installation. Follow these steps for a secure setup:

- 1. Prepare for Installation:** Before starting, ensure the power supply to the installation area is turned off at the circuit breaker. Gather all necessary tools (not included) such as a screwdriver, wire strippers, and electrical tape.
- 2. Adjust Cord Length:** The pendant light features an adjustable cord (up to 61.02 inches). Unscrew the fastening

fitting on the canopy to adjust the cord to your desired hanging height. This allows for customization in various spaces, including vaulted, sloped, or flat ceilings.

3. **Mount the Canopy:** Attach the mounting bracket (included) to your ceiling's electrical box. Ensure it is firmly secured. The canopy (4.7" D x 0.98" H) is designed for flush mounting and can adapt to sloped ceilings.
4. **Wire Connections:** Connect the fixture's wires to your household wiring according to local electrical codes. Typically, black to black (live), white to white (neutral), and bare copper/green to green (ground). Secure connections with wire nuts.
5. **Secure the Fixture:** Carefully push the wires into the electrical box and secure the canopy to the mounting bracket using the provided screws.
6. **Install the Glass Shade:** Gently attach the clear glass cylinder shade (5.51" D x 6.69" H) to the fixture.
7. **Insert Bulb:** Screw in an E26 standard base bulb (Max 60W incandescent or 15W LED equivalent). Ensure the bulb is fully seated.
8. **Restore Power:** Once installation is complete and all connections are secure, turn the power back on at the circuit breaker.



Figure 3: Detailed view of the adjustable cord and wiring setup, demonstrating how to customize the hanging length and connect the electrical components.

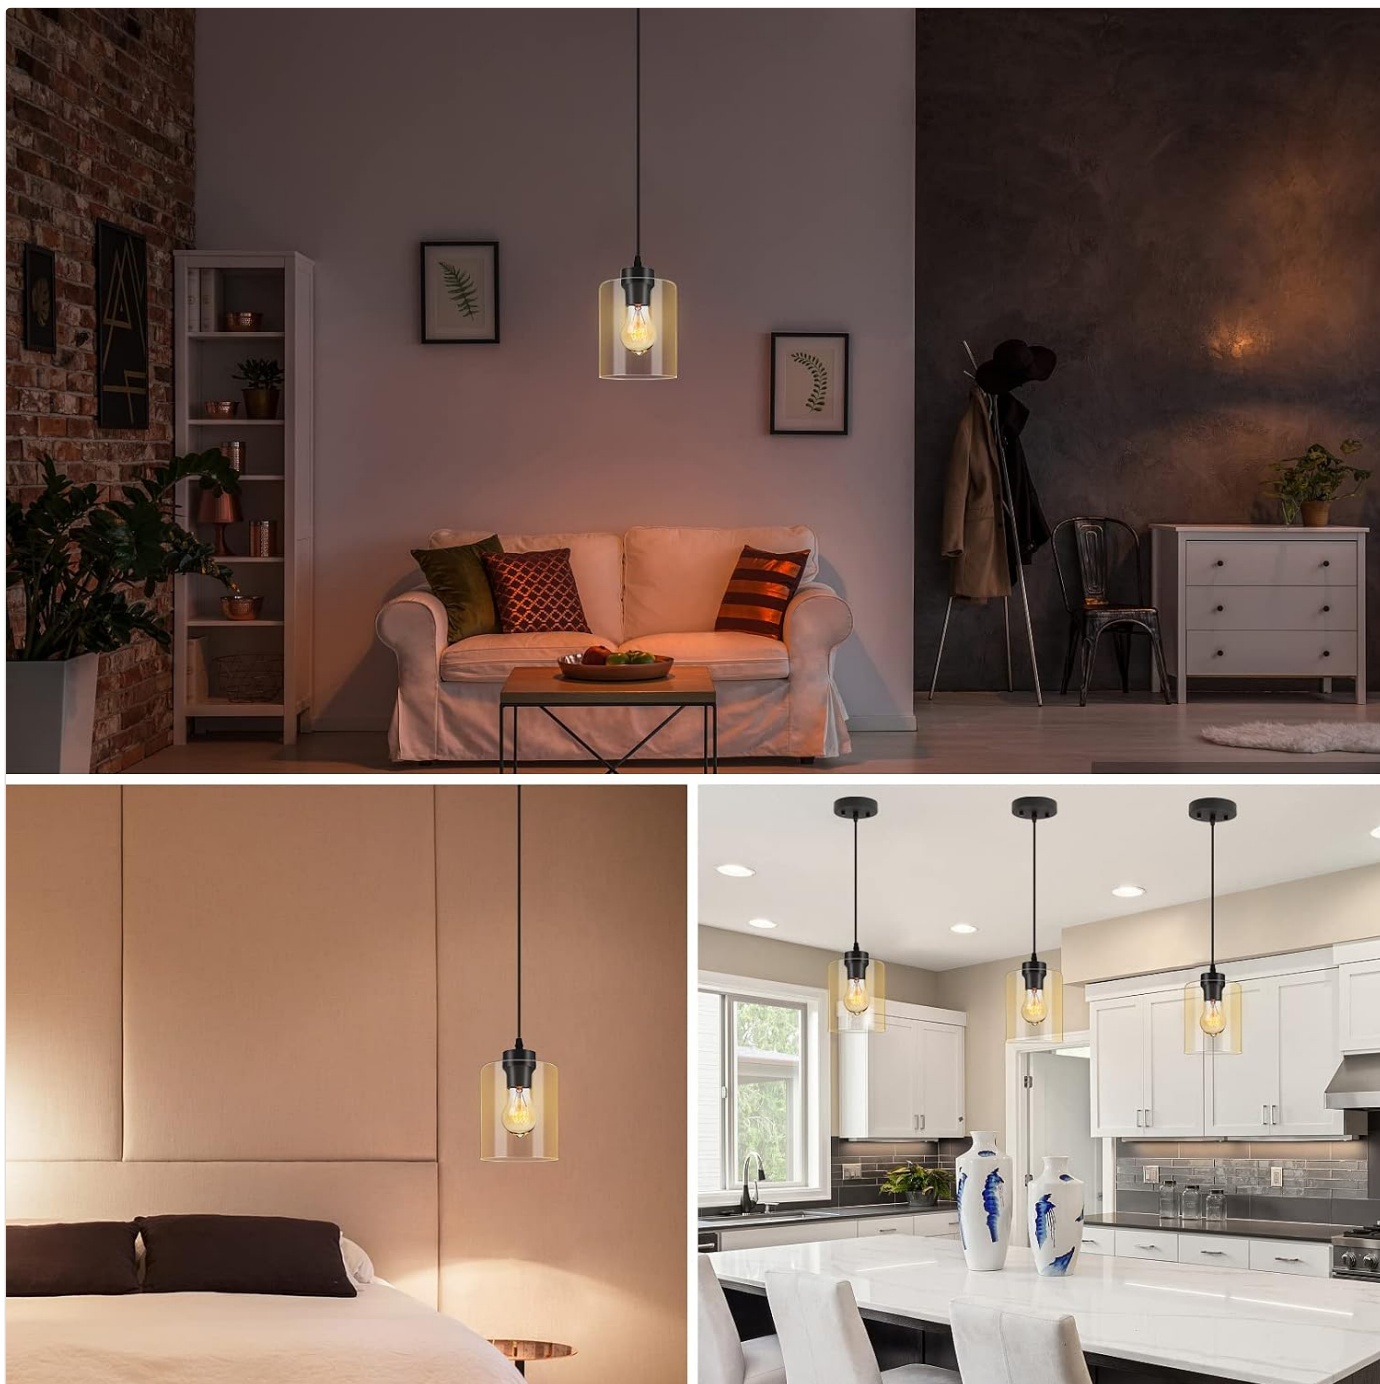


Figure 4: Example of the pendant light installed over a kitchen island, illustrating its aesthetic appeal in a contemporary setting.

6. OPERATING YOUR LIGHT FIXTURE

Your BoostArea pendant light is designed for simple operation once installed.

- **Power On/Off:** Control the light using your standard wall switch.
- **Bulb Compatibility:** This fixture is compatible with E26 standard base bulbs, including LED (Max 15W equivalent), CFL, incandescent, and halogen bulbs (Max 60W).
- **Dimmable Functionality:** The pendant light is designed to be dimmable when used with a compatible dimmable bulb and a dimmer switch (both sold separately). This allows you to create various atmospheres in your home.
- **Control Method:** While the primary control is via a wall switch, some advanced smart bulbs compatible with E26 bases may offer app control if paired with a smart home system.

E26



Figure 5: Illustration of different E26 bulb types that can be used with the fixture, offering flexibility in lighting style and energy efficiency.

7. CARE AND MAINTENANCE

Proper care will ensure the longevity and appearance of your light fixture:

- **Cleaning:** To clean the fixture, ensure power is off and the light is cool. Wipe the metal parts with a soft, dry cloth. The clear glass shade can be easily removed for cleaning with a mild glass cleaner and a soft cloth. Avoid abrasive cleaners that may damage the finish or glass.
- **Bulb Replacement:** Always turn off the power and allow the bulb to cool before attempting to replace it. Unscrew the old bulb and screw in a new E26 standard base bulb within the specified wattage limits.

8. TROUBLESHOOTING

If you experience issues with your pendant light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture, loose wiring, faulty bulb, tripped circuit breaker.	Check circuit breaker. Ensure all wire connections are secure. Replace bulb.
Light flickers.	Loose bulb, incompatible dimmer switch/bulb, unstable power supply.	Tighten bulb. Ensure dimmer and bulb are compatible. Consult electrician if power supply is suspected.
Glass shade is loose.	Shade not properly secured.	Gently tighten the retaining ring or screws holding the shade in place.

If the issue persists after attempting these solutions, please contact customer support.

9. WARRANTY AND CUSTOMER SUPPORT

BoostArea stands behind the quality of its products. This pendant light fixture comes with a **1-year warranty** from the date of purchase, covering defects in materials and workmanship.

For warranty claims, technical assistance, or any questions regarding your product, please contact BoostArea customer support through the retailer's platform or the official BoostArea website. Please have your model number (BD0001) and proof of purchase ready.

© 2024 BoostArea. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BDLYRCR7>

More documents and user manuals: <https://manuals.plus/>