

- Manuals.plus /
- › Septpenta /
- › RC4875 TV Remote Control User Manual

Septpenta Septpentawb04tyfopm

RC4875 TV Remote Control User Manual

Brand: Septpenta | Model: Septpentawb04tyfopm

INTRODUCTION

This manual provides detailed instructions for the Septpenta RC4875 TV Remote Control. Designed for ease of use and broad compatibility, this remote offers a seamless replacement experience for various LED television models. Please read this manual carefully to ensure correct usage and optimal performance.



Image: The Septpenta RC4875 TV Remote Control, showcasing its ergonomic design and button layout.

SETUP

Battery Installation

The RC4875 remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

No programming or setting is required after battery installation; the remote is ready for use.



Image: View of the open battery compartment on the back of the remote, showing where to insert AAA batteries.

OPERATING INSTRUCTIONS

The RC4875 remote control is designed for intuitive operation with compatible TV models. Once batteries are installed, it functions immediately without additional setup.

Key Features and Functions:

- **Quick Response:** Experience high sensitivity and quick response times for seamless control of your television.
- **Long Control Distance:** Operates effectively up to approximately 10 meters (32.8 feet) from the television.
- **Ergonomic Design:** Small in size and light in weight, providing a comfortable grip and hand touch.
- **Direct Replacement:** Functions identically to the original remote control for a perfect replacement experience.
- **Durable Material:** Constructed from premium ABS material, ensuring wear-resistance and long service life.





Image: A clear view of all buttons on the RC4875 remote control, including number pad, navigation, volume, channel, and media controls.



Image: A hand holding the RC4875 remote control, illustrating its compact and comfortable design.

COMPATIBLE MODELS

The RC4875 remote control is compatible with a wide range of television models. Below is a list of known compatible models:

- **For FINLUX:** 24FLZ274S, 32FLZ274S, FIN19DVDBK, FIN22DVDBK
- **For CR-TV:** CR-TV20-100, CR-TV32-100, CR-TV28-100, CR-TV22-100
- **For TE Series:** TELORC4875, TE49280S20F2T10D, TE32182B311T10D, TE24180B31T10E, TE19180B31T10E, TE50275N26F1T10D, TE40240S20F2T10ES4, TE20265S20T10E, TE65240G26F4T10, TE28275B31T10E, TE40275N2, TE32275B311T10D, TE24275B31T10E, DGQ32169HDDR, TE32280B311T10D, TE39275N26F1T10D, TE24275B30S10E, TE32275B301S10D, TE32265B301C10D, TE22275B30FC10E, TE22272B30FC10E
- **For SL Series:** SL48990, ASL399202T, SL42960, ASL329202T, ASL24960
- **For Technika:** SM32-240-AW15, 24FHA4160, ASL28920-2T, DGQ40169FHDD
- **For XD Series:** XD28HDV, XD39FHV, XD22FHV, XD32HDV
- **For FLE/FLN Series:** FLE40382SMART, FLN32T339

Remote Control Replacement

Compatible Models:

For FINLUX 24FLZ274S, FINLUX 32FLZ274S, FINLUX FIN19DVDBK, FINLUX FIN22DVDBK.

For CR-TV20-100, CR-TV32-100, CR-TV28-100, CR-TV22-100,

For TELORC4875, TE49280S20F2T10D, TE32182B311T10D, TE24180B31T10E, TE19180B31T10E, TE50275N26F1T10D, TE40240S20F2T10ES4, TE20265S20T10E, TE65240G26F4T10.

For SL48990, ASL399202T, SL42960, ASL329202T, ASL24960, for Technika SM32-240-AW15, 24FHA4160, ASL28920-2T, DGQ40169FHDD.



Image: The RC4875 remote control displayed alongside a graphic listing many of its compatible television models.

MAINTENANCE

To ensure the longevity and proper functioning of your RC4875 remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote. Store in a cool, dry place away from direct sunlight.
- **Avoid Drops:** While durable, avoid dropping the remote control, as this can damage internal components.

TROUBLESHOOTING

If you encounter issues with your RC4875 remote control, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Confirm you are within the effective operating range (approx. 10 meters).
- **Buttons Not Working:**
 - Clean the remote control, especially around the buttons, to remove any dirt or debris that might be preventing proper contact.
 - If only specific buttons are not working, the remote might be damaged.
- **Intermittent Operation:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure consistent line-of-sight to the TV.

If problems persist after trying these steps, please refer to the support information.

SPECIFICATIONS

Feature	Detail
Item Type	TV Remote Control
Material	ABS
Model	RC4875
Product Size (Approx.)	16 x 4.5 x 2 cm / 6.3 x 1.8 x 0.8 inches
Battery Type	2 x AAA batteries (not included)
Remote Distance (Approx.)	10 meters / 32.8 feet
Item Weight	2.11 ounces
Manufacturer	Septpenta

IMPORTANT SAFETY INFORMATION

Please read the product instructions carefully before use to ensure correct use.



1 Warning

Please read the product instructions carefully before use to ensure correct use.

2 Warnung

Bitte lesen Sie das Produkthandbuch vor dem Gebrauch sorgfältig durch, um sicherzustellen, dass es korrekt und gemäß den Anweisungen verwendet wird.

3 Avertissement

Euillez lire attentivement les instructions du produit avant utilisation pour garantir une utilisation correcte selon les instructions.

4 Advertencia

Por favor, lea detenidamente el manual del producto antes de usarlo para asegurarse de seguir correctamente las instrucciones.

5 Attenzione

Leggere attentamente il manuale del prodotto prima dell'uso per garantire il corretto utilizzo delle istruzioni.

6 Waarschuwing

Lees voor gebruik aandachtig de handleiding van het product om er zeker van te zijn dat het correct en in overeenstemming met de instructies wordt gebruikt.

7 Varning

Läs bruksanvisningen noggrant före användning för att säkerställa att produkten används på rätt sätt och i enlighet med instruktionerna.

8 Ostrzeżenie

Przed użyciem prosimy dokładnie przeczytać instrukcję obsługi produktu, aby upewnić się, że są przestrzegane poprawne wskazówki dotyczące użytkowania.

9 Uyarı

Lütfen doğru kullanım talimatlarını sağlamak için kullanmadan önce ürün kılavuzunu dikkatlice okuyun.

Image: A warning graphic emphasizing the importance of reading instructions for correct usage.

WARRANTY AND SUPPORT

For any questions, technical support, or warranty inquiries regarding your Septpenta RC4875 TV Remote Control, please contact your retailer or the manufacturer directly. Keep your purchase receipt for warranty purposes.

Manufacturer: Septpenta

For more information, you may visit the [Septpenta Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BDMMDVXQ>

More documents and user manuals: **<https://manuals.plus/>**