

OBERLY HD-05

OBERLY Portable Blender HD-05 Instruction Manual

Model: HD-05
Brand: OBERLY

1. INTRODUCTION

Thank you for choosing the OBERLY Portable Blender. This compact and powerful device is designed to help you prepare fresh and healthy beverages on the go. Please read this manual carefully before using your blender to ensure safe and optimal operation. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Keep the blender out of reach of children.
- Do not immerse the blender base (motor unit) in water or any other liquid to avoid electric shock.
- Ensure the blending jar is securely attached to the base before operating. The blender features a unique safety design that prevents operation unless properly assembled.
- Avoid touching moving parts. Keep hands and utensils out of the jar while blending to prevent injury.
- Do not operate the blender with an empty jar.
- Do not overload the blender. Cut ingredients into small pieces (approximately 1 inch) to prevent motor strain.
- Unplug the blender when not in use, before assembling or disassembling parts, and before cleaning.
- Built-in safety features prevent overheating and overcharging. If the blender stops unexpectedly, allow it to cool down before resuming use.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your OBERLY Portable Blender:



This detailed diagram highlights key components of the OBERLY Portable Blender, including measurement markings, waterproof rubber ring, stainless steel 6-point blades, battery indicator, waterproof rubber plug, anti-slip design, and Type-C charging port. It also illustrates various charging methods: laptop, power bank, USB, and car charging.

- **Blender Base:** Contains the motor, battery, control button, and charging port.
- **Blending Jar:** 18 oz capacity, made from high-quality BPA-free and PCTG food-grade material, with measurement markings.
- **Blade Assembly:** Integrated 6-point stainless steel blades for efficient blending.
- **Lid:** Secure lid with a carrying strap for portability.
- **USB-C Charging Port:** For convenient recharging.
- **Battery Indicator:** LED lights to show battery level.

4. SETUP

Initial Charging

Before first use, fully charge your OBERLY Portable Blender. Connect the provided USB-C charging cable to the charging port on the blender base and plug it into a compatible USB power source (e.g., power bank, laptop, car charger, or USB wall adapter). The battery indicator lights will illuminate during charging and turn solid when fully charged. A full charge typically takes 3-5 hours and provides power for 20-25 blending cycles.

Assembly

Place the blending jar onto the blender base. Twist the jar clockwise until it is securely locked into place. The blender will only operate when the jar and base are compactly attached, ensuring safety.

5. OPERATING INSTRUCTIONS

Preparing Ingredients

For best results and to prevent motor strain, cut all solid ingredients (fruits, vegetables, ice) into small pieces, approximately 1 inch (2.5 cm) or smaller. Always add liquid ingredients first to ensure proper blending.

Blending Your Beverage

1. Add your desired ingredients to the blending jar. Remember to add liquids first. Do not exceed the maximum fill line.
2. Securely attach the lid to the jar and the jar to the base.
3. To start blending, double-click the power button on the base. The blender will begin to operate.
4. For optimal blending, especially with frozen ingredients or ice, gently shake or tilt the blender during operation to ensure all ingredients come into contact with the blades.
5. The blending cycle typically lasts 30-40 seconds. You can stop the blender at any time by single-clicking the power button.
6. Once blending is complete, open the lid and enjoy your fresh beverage directly from the jar or pour it into another container.

This video demonstrates the OBERLY Portable Blender in action, successfully blending ingredients into a smooth consistency. It highlights the ease of use and efficiency of the device for preparing beverages.



This image showcases the versatility of the OBERLY Portable Blender, with individuals enjoying smoothies in a gym, at home, in an office, and during outdoor activities like cycling.

6. CLEANING AND MAINTENANCE

Easy Cleaning Method

The OBERLY Portable Blender is designed for easy cleaning:

1. After each use, add a small amount of water and a drop of dish soap to the blending jar.
2. Secure the lid and double-click the power button to start a short blending cycle (5-10 seconds).
3. Rinse the jar thoroughly with clean water.

Hand Washing

The blending cup is detachable and can be hand-washed. Use a soft brush or sponge to clean the inside of the jar and around the blades. Be cautious around the blades to avoid injury.



A hand is shown rinsing the blending jar of the OBERLY Portable Blender under running water in a kitchen sink, demonstrating its easy-to-clean, waterproof design.

Important: Never immerse the blender base (motor unit) in water or place it in a dishwasher. Wipe the base with a damp cloth only.

7. TROUBLESHOOTING GUIDE

Issue	Possible Cause	Solution
Blender not starting	Jar not aligned correctly; Battery low; Power button not double-clicked.	Ensure jar is securely twisted onto the base; Charge the blender; Double-click the power button to activate.
Blender stops during operation	Overload protection activated; Battery low; Ingredients too large or too much.	Reduce ingredients, cut into smaller pieces, or add more liquid; Charge the blender; Allow motor to cool down.
Leaking from the jar	Lid or base not securely tightened.	Ensure both the lid and the blending jar are tightly screwed onto their respective parts.

8. PRODUCT SPECIFICATIONS

- **Brand:** OBERLY
- **Model:** HD-05
- **Capacity:** 18 Fluid Ounces
- **Power Source:** Battery Powered (USB Rechargeable)
- **Battery:** 4000mAh Lithium Ion (included)
- **Charging Time:** 3-5 hours
- **Blending Cycles per Charge:** 20-25 cups
- **Blade Material:** 6-Point Stainless Steel
- **Material Type Free:** BPA Free, PCTG Food Grade
- **Product Dimensions:** 3.2"D x 3.2"W x 9.6"H
- **Item Weight:** 1.1 pounds
- **Special Feature:** Portable, Waterproof Design

9. WARRANTY AND CUSTOMER SUPPORT

Your OBERLY Portable Blender comes with a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your packaging for specific terms and conditions. For any questions, concerns, or technical support, please contact OBERLY customer service through the retailer's platform or visit our official website for contact information. Our team is dedicated to providing you with the best possible experience.