

[Manuals.plus](#) /

› [Smoby](#) /

› Smoby Supermarket Play Set with Shopping Cart and Real Calculator, Model 350228 User Manual

Smoby 350228

Smoby Supermarket Play Set with Shopping Cart and Real Calculator, Model 350228

User Instruction Manual

1. SAFETY INFORMATION

WARNING! This product is not suitable for children under 3 years of age. The minimum recommended age is 36 months. Contains small parts which may present a choking hazard.
Always supervise children during play. Ensure all parts are securely assembled before use.

2. PRODUCT OVERVIEW

The Smoby Supermarket Play Set (Model 350228) is an interactive role-play toy designed for children aged 3 years and above. It allows children to simulate a supermarket experience with various functional elements and accessories.

Key Features:

- Electronic cash register with an LCD screen and real calculator functions.
- Electronic barcode scanner with sound and light effects.
- Mechanical scale with weight adjustment based on items placed.
- Integrated cash drawer and credit card reader.
- Includes a shopping cart for realistic play.
- Comes with 42 accessories, including dummy food boxes, fruits, vegetables, pastries, cans, play money (coins and banknotes), and receipts.



Image 2.1: The complete Smoby Supermarket Play Set with its shopping cart.



Image 2.2: A selection of the 42 included accessories, such as play food, money, and a credit card.

3. SETUP AND ASSEMBLY

The Smoby Supermarket Play Set requires self-assembly. Please follow the detailed assembly instructions provided in the separate manual included in the product packaging. Ensure all components are correctly connected and secured.

Battery Installation:

The electronic features of the play set require batteries. One LR54 battery is included for certain functions, and two LR03 (AAA) batteries are required but not included. Locate the battery compartments on the electronic cash register and barcode scanner. Insert batteries according to the polarity indicators (+/-). Securely close the battery compartments.

4. OPERATING INSTRUCTIONS

4.1. Supermarket Sign and Promo Shelf

The top sign indicates 'SUPER MARKET' and features a clock. A small shelf below can be used to display 'PROMO' items.



Image 4.1: Close-up of the supermarket sign and the 'PROMO' display shelf.

4.2. Barcode Scanner

The electronic barcode scanner produces sound and light when activated. Point the scanner at the barcodes on the play food items to simulate scanning.



Image 4.2: The electronic barcode scanner emitting light and sound when scanning a play item.

4.3. Mechanical Scale

Place play food items on the mechanical scale. The displayed weight will adjust, providing a realistic weighing experience.



Image 4.3: A play tomato being weighed on the mechanical scale, showing the weight display.

4.4. Electronic Cash Register

The cash register features a real calculator with an LCD screen. Children can input prices, perform calculations, and manage transactions. It also includes a dummy microphone for announcements.



Image 4.4: The electronic cash register with its calculator keypad and LCD screen.

4.5. Cash Drawer and Credit Card Reader

Open the cash drawer to store play coins and banknotes. The credit card reader allows for simulated card payments using the included play credit card and receipts.



Image 4.5: The cash drawer open, revealing play coins and banknotes.



Image 4.6: The credit card reader with a play credit card inserted and a receipt.

5. MAINTENANCE

To clean the play set, wipe surfaces with a damp cloth and mild soap. Avoid using abrasive cleaners or harsh chemicals. Ensure all electronic components are dry before use. Store the play set in a dry, clean environment away from direct sunlight when not in use.

6. TROUBLESHOOTING

- **Electronic features not working:** Check if batteries are correctly installed and not depleted. Replace batteries if necessary (1 LR54 included, 2 LR03/AAA not included).
- **Barcode scanner not producing sound/light:** Ensure batteries are fresh and correctly inserted. If the issue persists after battery replacement, contact customer support.
- **Parts are loose:** Re-check the assembly instructions to ensure all connections are secure.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions (L x W x H)	60 x 60 x 89.6 cm
Weight	4.72 kg
Manufacturer Recommended Age	36 months - 6 years
Educational Value	Role Play
Manufacturer Reference	7600350228
Number of Pieces	1 (main unit)
Self-assembly Required	Yes
Batteries Required	Yes (1x LR54 included, 2x LR03/AAA not included)
Main Material	Plastic
Color	Grey
Country of Manufacture	France

8. WARRANTY AND SUPPORT

For warranty information or customer support regarding your Smoby Supermarket Play Set, please refer to the contact details provided in your product packaging or visit the official Smoby website. Keep your proof of purchase for any warranty claims.

© 2023 Smoby. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BDNSZ3Y3>

More documents and user manuals: <https://manuals.plus/>