

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Graco](#) /
- › [Graco SmartSense Baby Swing Instruction Manual, Model 1AU00RRI](#)

Graco 1AU00RRI

Graco SmartSense Baby Swing Instruction Manual

Model: 1AU00RRI

Brand: Graco

INTRODUCTION

The Graco SmartSense Baby Swing is designed to provide soothing comfort for infants. It features advanced cry detection technology that automatically responds to your baby's cries with a variety of calming motions, sounds, and vibrations. This manual provides essential information for the safe and proper use, assembly, and maintenance of your SmartSense Baby Swing.

Key Features:

- **SmartSense Cry Detection Technology:** Automatically responds to baby's cries with soothing combinations.
- **Multiple Motion Options:** Mimics natural parent movements with options to swing, rock, cradle, and glide.
- **Calming Vibrations:** Offers gentle vibration settings for added comfort.
- **Soothing Sounds & Music:** Includes white noise, nature sounds, and melodies.
- **Adjustable Recline:** Three recline positions to suit your baby's comfort.
- **Comfortable Infant Support:** Removable body support made with organic cotton fabrics.
- **5-Point Harness:** Ensures your child's safety and security.
- **Washable Fabrics:** Easy to remove and clean fabric components.
- **Toy Bar:** Provides visual stimulation with soft toys.

SAFETY INFORMATION

Always read and understand all instructions and warnings before using the Graco SmartSense Baby Swing. Failure to follow these instructions could result in serious injury or death.

Important Warnings:

- **FALL HAZARD:** A baby's movement can slide the product. Never place the product on countertops, tables, or other elevated surfaces.
- **SUFFOCATION HAZARD:** Infants have suffocated in gaps between extra padding and the side of the product, and on soft bedding.
- Use **ONLY** the pad provided by Graco. **NEVER** add a pillow, comforter, or another mattress for padding.

- NEVER use this product for an infant who can sit up unassisted or weighs more than 25 lbs (11.3 kg).
- ALWAYS use the restraint system. Adjust to fit snugly.
- NEVER leave child unattended.
- DO NOT move or lift the product with the child in it.
- Discontinue use of the product if any parts are broken or missing.

SETUP AND ASSEMBLY

Follow these steps to assemble your Graco SmartSense Baby Swing. Refer to the included assembly guide for detailed diagrams.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify all components are present according to the parts list in your separate assembly guide.
2. **Assemble Base:** Connect the swing's base components securely. Ensure all locking mechanisms click into place.
3. **Attach Seat Frame:** Securely attach the seat frame to the assembled base.
4. **Install Seat Pad and Infant Support:** Place the main seat pad onto the seat frame. Insert the removable infant body support, ensuring it is correctly positioned for your baby's comfort and safety.
5. **Attach Toy Bar:** Secure the toy bar to the designated attachment points on the swing. Ensure it is firmly in place.
6. **Connect Power:** Plug the power adapter into the swing's base and then into a wall outlet.



Image: Fully assembled Graco SmartSense Baby Swing, ready for use.

OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and various functions of your SmartSense Baby Swing.

Control Panel Overview:



Image: Detailed view of the control panel with various buttons for motion, speed, sound, and vibration settings.

1. **Power On/Off:** Press the power button (usually indicated by a circle with a vertical line) on the control panel to turn the swing on or off.
2. **Adjust Motion:** Use the motion selection buttons (often depicted as arrows or wave patterns) to cycle through the four unique motions: swing, rock, cradle, and glide.
3. **Adjust Speed:** Use the speed adjustment buttons (up/down arrows or dots indicating levels) to select from multiple speed options.
4. **Select Sounds/Music:** Press the sound/music button to choose between various melodies, white noise, or nature sounds. Use the volume buttons (+/-) to adjust the audio level.
5. **Activate Vibration:** Press the vibration button (often a wavy line icon) to turn on the calming vibration feature. There are typically two intensity levels.
6. **Cry Detection Technology (SmartSense):** Activate the cry detection feature by pressing the dedicated button (often a baby face icon). When activated, the swing will automatically detect your baby's cries and cycle through soothing combinations of motion, sound, and vibration until the baby is calm. Once soothed, it will return to the previously selected settings.

7. **Recline Positions:** The seat offers three recline positions. Adjust the recline by pressing the recline adjustment button or lever, usually located on the side or back of the seat, and moving the seat to the desired angle.
8. **Harness System:** Always secure your baby with the 5-point harness. Ensure the straps are snug but not too tight, and the buckle is properly fastened. The shoulder pads are removable for cleaning or adjustment.

From
cries...

A baby is shown in the Graco SmartSense Baby Swing, crying. The baby is wearing a pink onesie and is secured by the 5-point harness. The swing is white with a light blue trim. The background is a soft, out-of-focus indoor setting.

...to
comfort

A baby is shown in the Graco SmartSense Baby Swing, smiling. The baby is wearing a pink onesie and is secured by the 5-point harness. The swing is white with a light blue trim. The background is a soft, out-of-focus indoor setting.

SmartSense™
Detects and responds to baby's cries
automatically

Image: A baby comfortably seated in the Graco SmartSense Baby Swing, demonstrating proper use.

MAINTENANCE AND CARE

Regular cleaning and maintenance will ensure the longevity and hygiene of your Graco SmartSense Baby Swing.

- **Fabric Care:** The seat pad and infant body support are made with organic cotton fabrics and are 100% washable. Remove the fabric components from the swing frame. Machine wash on a delicate cycle with cold water. Do not bleach. Tumble dry on low heat or air dry.
- **Frame Cleaning:** Wipe down the plastic and metal parts of the swing frame with a damp cloth and mild soap. Do not use abrasive cleaners.
- **Storage:** When not in use, store the swing in a clean, dry place away from direct sunlight and extreme

temperatures.

- **Inspection:** Periodically check all parts for wear, damage, or loose fasteners. Discontinue use if any part is broken or missing.

TROUBLESHOOTING

If you encounter any issues with your Graco SmartSense Baby Swing, refer to the following common solutions. For persistent problems, contact customer support.

Problem	Possible Cause	Solution
Swing does not turn on.	Power adapter not connected or faulty outlet.	Ensure power adapter is securely plugged into the swing and a working wall outlet. Try a different outlet.
Swing motion is weak or inconsistent.	Weight limit exceeded or obstruction.	Ensure baby's weight is within the 25 lbs limit. Check for any obstructions preventing smooth motion.
Cry detection not responding.	Feature not activated or excessive background noise.	Verify the cry detection button is active. Reduce ambient noise for optimal performance.
Vibration not working.	Vibration feature not activated.	Press the vibration button to activate or cycle through intensity levels.


SPECIFICATIONS

- **Model Number:** 1AU00RRI
- **Maximum Weight Recommendation:** 25 Pounds (11.3 kg)
- **Material Type:** Cotton, Polyester
- **Style:** SmartSense Swing
- **Batteries Required:** No (AC adapter powered)
- **Portability:** Yes (removable rocker seat)
- **Item Weight:** 20 Pounds (9.07 kg)
- **Age Range:** Baby
- **Color:** Rori

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the official Graco website or contact their customer service department directly. Specific warranty terms and conditions may vary and are typically provided with your product purchase documentation.

Online Support: Visit the official [Graco Store](#) for additional product information and support resources.

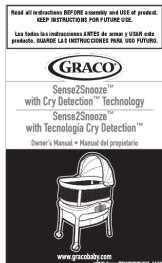

[Graco Sense2Snooze™ Bassinet with Cry Detection™ Technology Owner's Manual](#)

Comprehensive owner's manual for the Graco Sense2Snooze™ Bassinet, featuring Cry Detection™ Technology. This guide provides detailed instructions for assembly, product features, usage of controls and modes, care and maintenance, troubleshooting, and warranty information.



[Graco Duet Glide LX Gliding Swing Owner's Manual](#)

This owner's manual provides instructions for the Graco Duet Glide LX Gliding Swing, covering assembly, use, care, and safety warnings. It includes information on features, modes of use, and troubleshooting.



 
[Graco Duet Glide Gliding Swing with Portable Rocker Owner's Manual](#)

Comprehensive owner's manual for the Graco Duet Glide Gliding Swing with Portable Rocker, providing assembly instructions, safety warnings, usage guidelines, and care information.




[Graco DuetSoothe Swing & Rocker Owner's Manual](#)

Comprehensive owner's manual for the Graco DuetSoothe Swing & Rocker, providing essential safety warnings, assembly instructions, and usage guidelines for parents and caregivers.

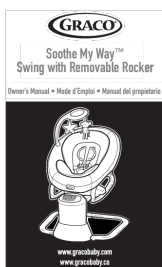

[Graco Soothe My Way™ Swing with Removable Rocker Owner's Manual](#)

 Comprehensive owner's manual for the Graco Soothe My Way™ Swing with Removable Rocker. Includes detailed instructions for assembly, safe usage, care, and maintenance. Learn about features, modes, and troubleshooting for this baby swing and rocker combination.

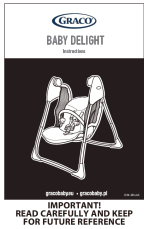

[Graco Baby Delight Instructions Manual](#)

This manual provides detailed instructions for assembling, using, and maintaining the Graco Baby Delight baby swing, including safety warnings and troubleshooting tips.