

## KAMEP Chime 09

# KAMEP Wireless Indoor Chime Instruction Manual

Model: Chime 09

### INTRODUCTION

This manual provides detailed instructions for the KAMEP Wireless Indoor Chime. This device is designed to work exclusively with KAMEP video doorbells, specifically models J10, J9, J9Plus, J7, J4SN, J4N, and J4SN-W. It is not compatible with other brands such as Ring, Blink, Tapo, or Eufy.

Please read this manual thoroughly before use to ensure proper installation and operation.

### PACKAGE CONTENTS

- 1 x KAMEP Wireless Indoor Chime (Model: Chime 09)
- (Batteries not included, requires 3.7V AAA batteries)

### PRODUCT OVERVIEW

Familiarize yourself with the components of your KAMEP Wireless Indoor Chime.



Image: KAMEP Wireless Indoor Chime showing the 'Setting', 'Volume', and 'Melody' buttons on the side, and a speaker grille on the front.

- **Setting Button:** Used for pairing and mode selection.
- **Volume Button:** Adjusts the chime volume.
- **Melody Button:** Changes the chime melody.
- **Indicator Light:** Displays status (e.g., pairing mode).
- **Speaker:** Emits the chime sound.

## SETUP AND INSTALLATION

### Powering the Chime

The KAMEP Wireless Indoor Chime is battery-powered only. It requires 3.7V AAA batteries (not included). Ensure batteries are inserted correctly according to polarity markings.

**Important:** When the battery level is low, replace the batteries immediately. Failure to do so may damage the product or cause malfunctions.

### Pairing with KAMEP Video Doorbell

1. **Step 1:** On the indoor chime unit, briefly press the "Setting" button once. The red indicator light on the chime unit will flash, indicating it is in pairing mode.
2. **Step 2:** Press the round button on your KAMEP video doorbell. The chime's indicator light will change from red to blue, and the chime will sound, confirming successful pairing.



Image: The KAMEP Wireless Indoor Chime positioned above five different KAMEP video doorbell models (J9, J9PLUS, J4SN, J4N, J4SN-W), illustrating compatibility.

## OPERATING INSTRUCTIONS

### Adjusting Volume

Press the "Volume" button on the side of the chime to cycle through 4 different volume levels. The maximum volume is 110dB.

### Changing Melodies

Press the "Melody" button on the side of the chime to select from 4 different available melodies.



## Wireless Indoor Chime

remind you of visitors when your phone is not by your side

Image: A KAMEP Wireless Indoor Chime with musical notes emanating from its speaker grille, symbolizing its function to play melodies.

### MAINTENANCE

#### Battery Replacement

The chime is powered by 3.7V AAA batteries. When the chime's performance degrades or the low battery indicator activates (if present), replace all batteries with new ones. Ensure correct polarity during installation.

#### Cleaning

Wipe the chime with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

### TROUBLESHOOTING

Problem	Possible Cause	Solution
Chime does not sound.	Low or dead batteries. Not paired with doorbell. Volume too low.	Replace batteries. Re-pair the chime with the doorbell (see Setup section). Increase volume.

Problem	Possible Cause	Solution
Chime does not pair.	Incorrect pairing procedure. Incompatible doorbell.	Follow pairing steps carefully. Ensure your doorbell is a compatible KAMEP model (J10/J9/J9Plus/J7/J4SN/J4N/J4SN-W).
Chime sounds intermittently.	Weak battery. Interference.	Replace batteries. Ensure chime and doorbell are within effective range and away from major sources of interference.

## SPECIFICATIONS

- **Model:** Chime 09
- **Brand:** KAMEP
- **Power Source:** Battery Powered (3.7V AAA batteries required)
- **Compatible Devices:** KAMEP J10/J9/J9Plus/J7/J4SN/J4N/J4SN-W Video Doorbells ONLY
- **Volume Levels:** 4 (Max 110dB)
- **Melodies:** 4 selectable tunes
- **Dimensions (LxWxH):** 6.5 x 2.8 x 6.5 cm
- **Weight:** 110 g
- **Connectivity:** Wireless
- **Usage:** Indoor

## IMPORTANT COMPATIBILITY NOTE

This KAMEP Wireless Indoor Chime is designed to function exclusively with specific KAMEP video doorbell models: J10, J9, J9Plus, J7, J4SN, J4N, and J4SN-W. It is not compatible with video doorbells from other brands, including but not limited to RING, Blink, Tapo, and Eufy. Attempting to pair with incompatible devices will not be successful and is not covered under troubleshooting.

## Not Compatible with Ring, Blink, and Other Brands.



Image: A KAMEP Wireless Indoor Chime with an overlay text explicitly stating "Not Compatible with Ring, Blink, and Other Brands," reinforcing its exclusive compatibility.

### SUPPORT

For further assistance or inquiries, please refer to the KAMEP official website or contact customer support through your purchase platform.