

## LELO DOT

# LELO DOT Clitoral Pinpoint Vibrator User Manual

Model: DOT

				<a href="#">Introduction</a>	<a href="#">What's</a>			
<a href="#">Included</a>	<a href="#">Features</a>	<a href="#">Setup</a>	<a href="#">Operation</a>	<a href="#">Maintenance</a>	<a href="#">Troubleshooting</a>	<a href="#">Specifications</a>	<a href="#">Warranty</a>	
			<a href="#">&amp; Support</a>	<a href="#">Safety Information</a>				

## 1. INTRODUCTION

---

The LELO DOT is a clitoral pinpoint vibrator designed for precise external stimulation. It features LELO's innovative Infinite Loop technology, providing a unique elliptical motion and eight distinct pleasure settings. This manual provides comprehensive instructions for the safe and effective use, care, and maintenance of your LELO DOT.

## 2. WHAT'S INCLUDED

---

Carefully unpack your LELO DOT and ensure all items are present:

- LELO DOT Clitoral Pinpoint Vibrator
- USB Charging Cable
- Satin Storage Pouch
- Instruction Manual (this document)
- Warranty Registration Card
- Water-based Lubricant Sachet (5 ml / 0.17 fl. oz.)

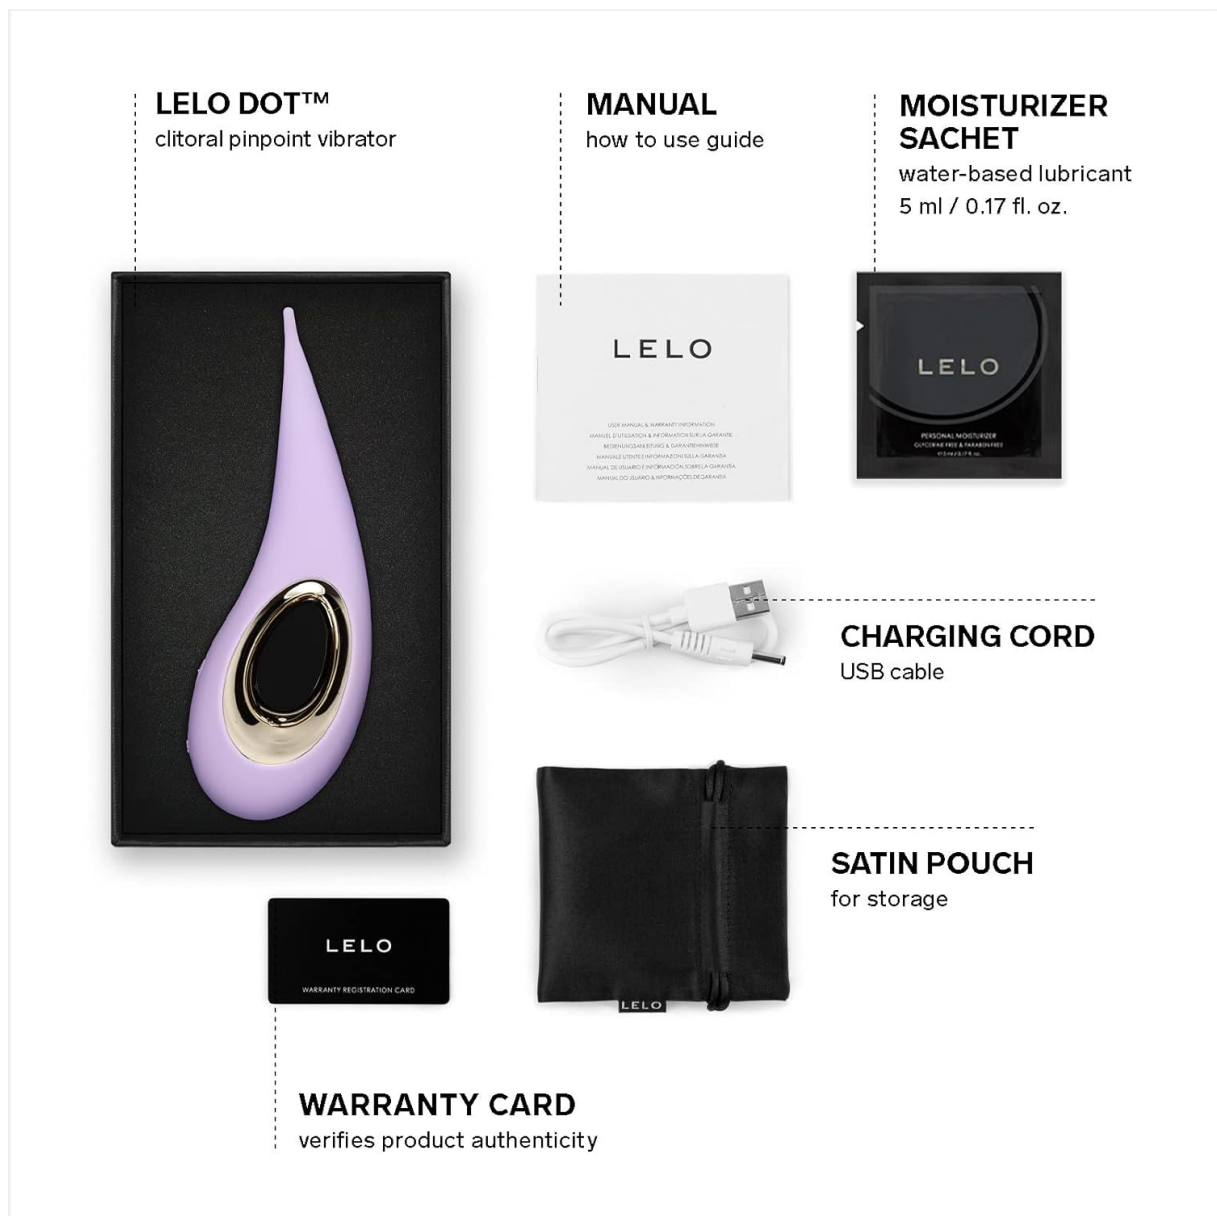 


Image: Contents of the LELO DOT package, including the vibrator, charging cable, satin pouch, manual, warranty card, and lubricant sachet.

### 3. KEY FEATURES

The LELO DOT is engineered with several features to enhance your experience:

- **Clitoral Pinpoint Stimulation:** Designed to gently tease any external erogenous zone with its soft and bendable tip.
- **Infinite Loop Technology:** Provides a captivating figure-eight massage with a pleasant, elliptical motion for continuous stimulation.
- **8 Vibration Settings:** Offers a range of eight distinct vibration patterns and intensities, allowing for personalized preference.
- **Body-Safe Silicone:** Constructed from ultra-smooth, flexible, and body-safe silicone for a comfortable and durable design.
- **Waterproof Design:** IPX7 certified, making it safe for use in the bath or shower and easy to clean.
- **USB Rechargeable:** Conveniently recharges via USB for long-lasting use.

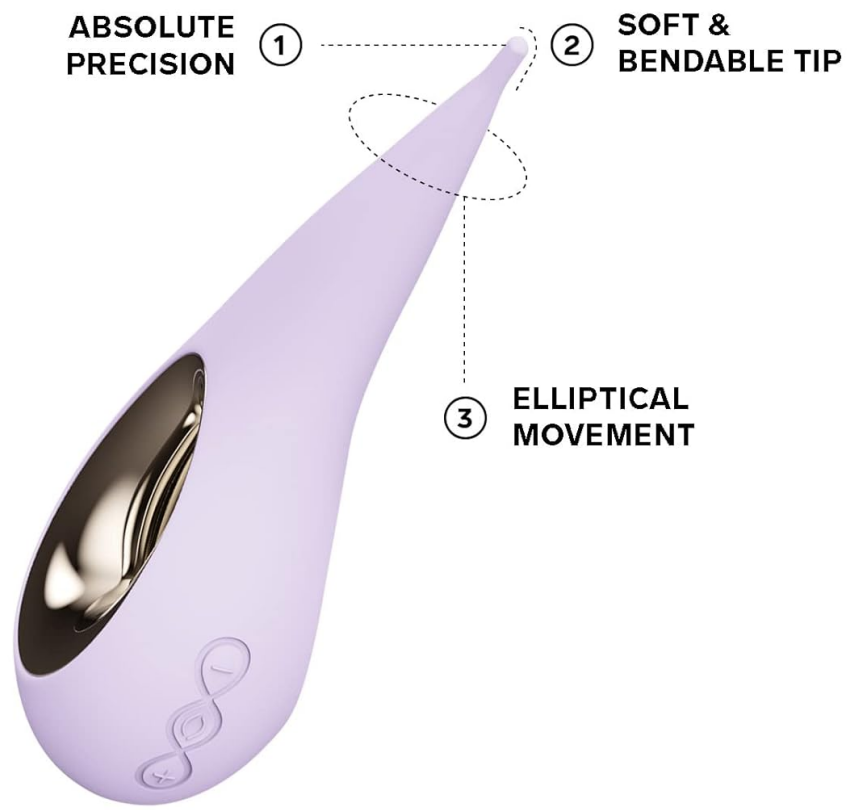 


Image: A diagram illustrating the LELO DOT's design, pointing out its absolute precision, soft and bendable tip, and elliptical movement.

# Features



## INFINITE LOOP™ TECHNOLOGY

enjoy multiple climaxes without numbness or saturation



## 8 SETTINGS

from a teasing murmur to a satisfying pulse



## LONG-LASTING CHARGE

longer time for pleasure



## SCULPTED FOR YOUR PLEASURE

fits your body like a glove



## WATERPROOF DESIGN

perfect for the bath and shower



## EXTRA-SOFT SILICONE

ultra-smooth premium silicone that feels warm to the touch



Image: A visual representation of the LELO DOT's features, including Infinite Loop Technology, 8 settings, long-lasting charge, sculpted design, waterproof design, and extra-soft silicone, with the device held in a hand.

## 4. SETUP

### 4.1 Initial Charging

Before the first use, fully charge your LELO DOT. Connect the USB charging cable to the charging port on the device and plug the other end into a USB power source (e.g., computer, wall adapter). The LED lights will blink to indicate the battery level during charging. A full charge typically takes 2 hours.

### 4.2 Cleaning Before First Use

Clean the LELO DOT thoroughly before its initial use. Refer to the 'Maintenance' section for detailed cleaning instructions.

## 5. OPERATING INSTRUCTIONS

The LELO DOT is designed for intuitive use. Follow these steps to operate your device:

# How to use

## BEFORE FIRST USE

charge your device for 2 hours

## TO TURN IT ON

press the (∞) button

## THE LED LIGHTS WILL BLINK

to indicate the battery level

## TO SWITCH BETWEEN 8 PLEASURE SETTINGS

press the (∞) button

## TO DECREASE OR INCREASE INTENSITY

use the + and the - buttons

## TO TURN IT OFF

press the (∞) button for 3 seconds

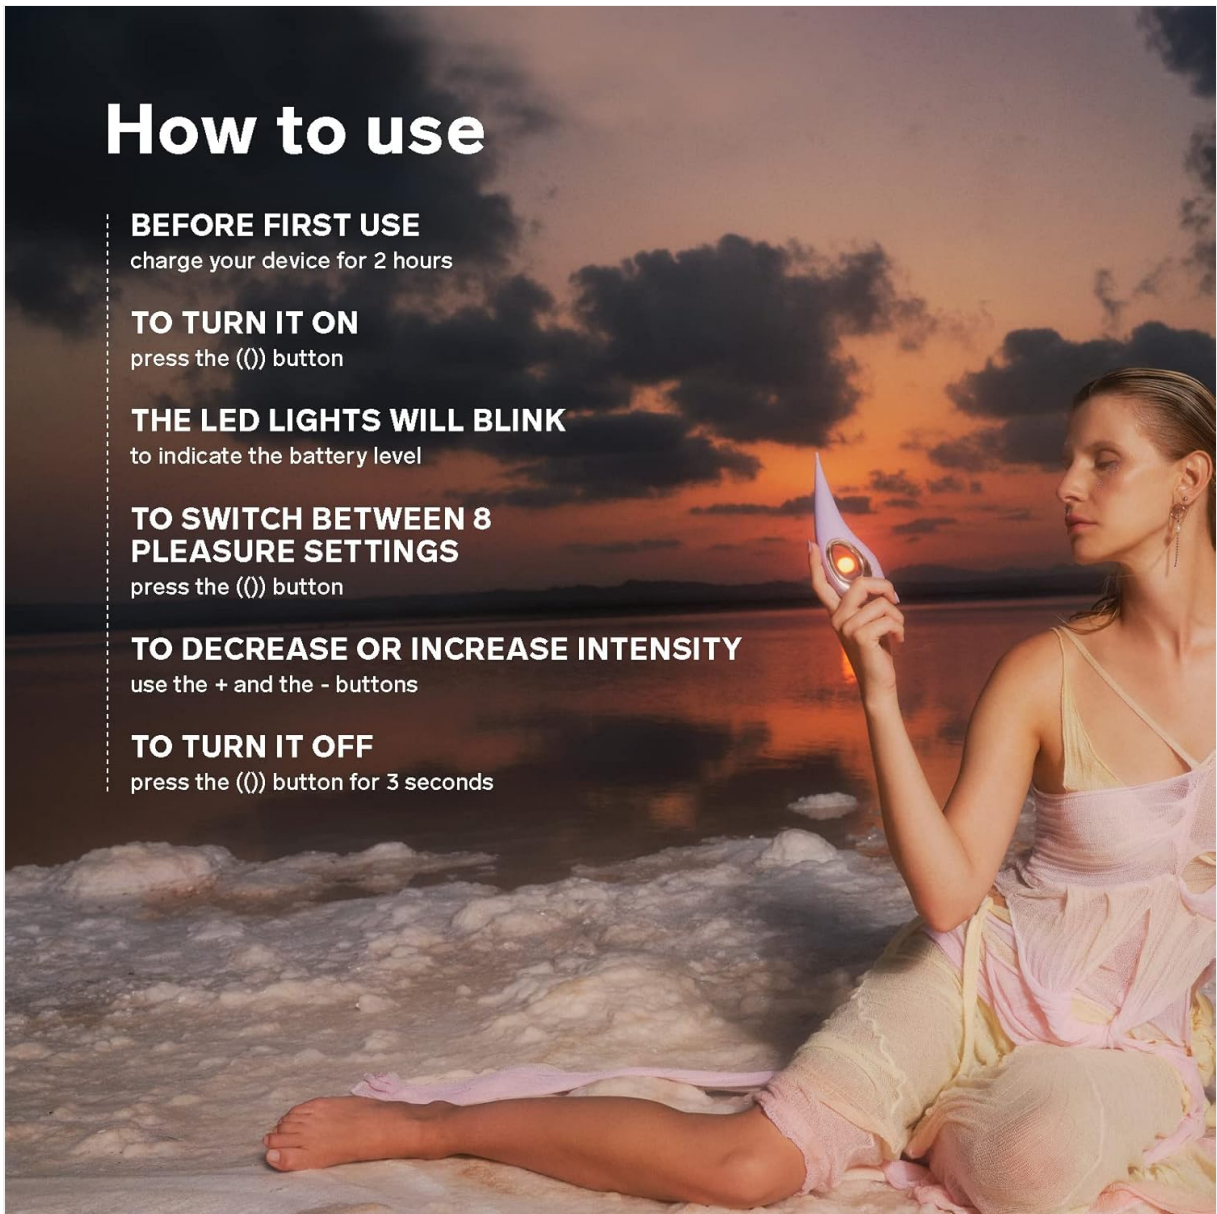


Image: A visual guide detailing how to use the LELO DOT, including charging, turning on/off, and adjusting settings.

- Turning On:** Press the power button (often marked with an infinity symbol or similar) to turn on the device. The LED lights will blink to indicate the battery level.
- Changing Pleasure Settings:** Press the power button again to cycle through the 8 available vibration patterns.
- Adjusting Intensity:** Use the '+' and '-' buttons to increase or decrease the vibration intensity within the selected pattern.
- Turning Off:** Press and hold the power button for 3 seconds to turn off the device.

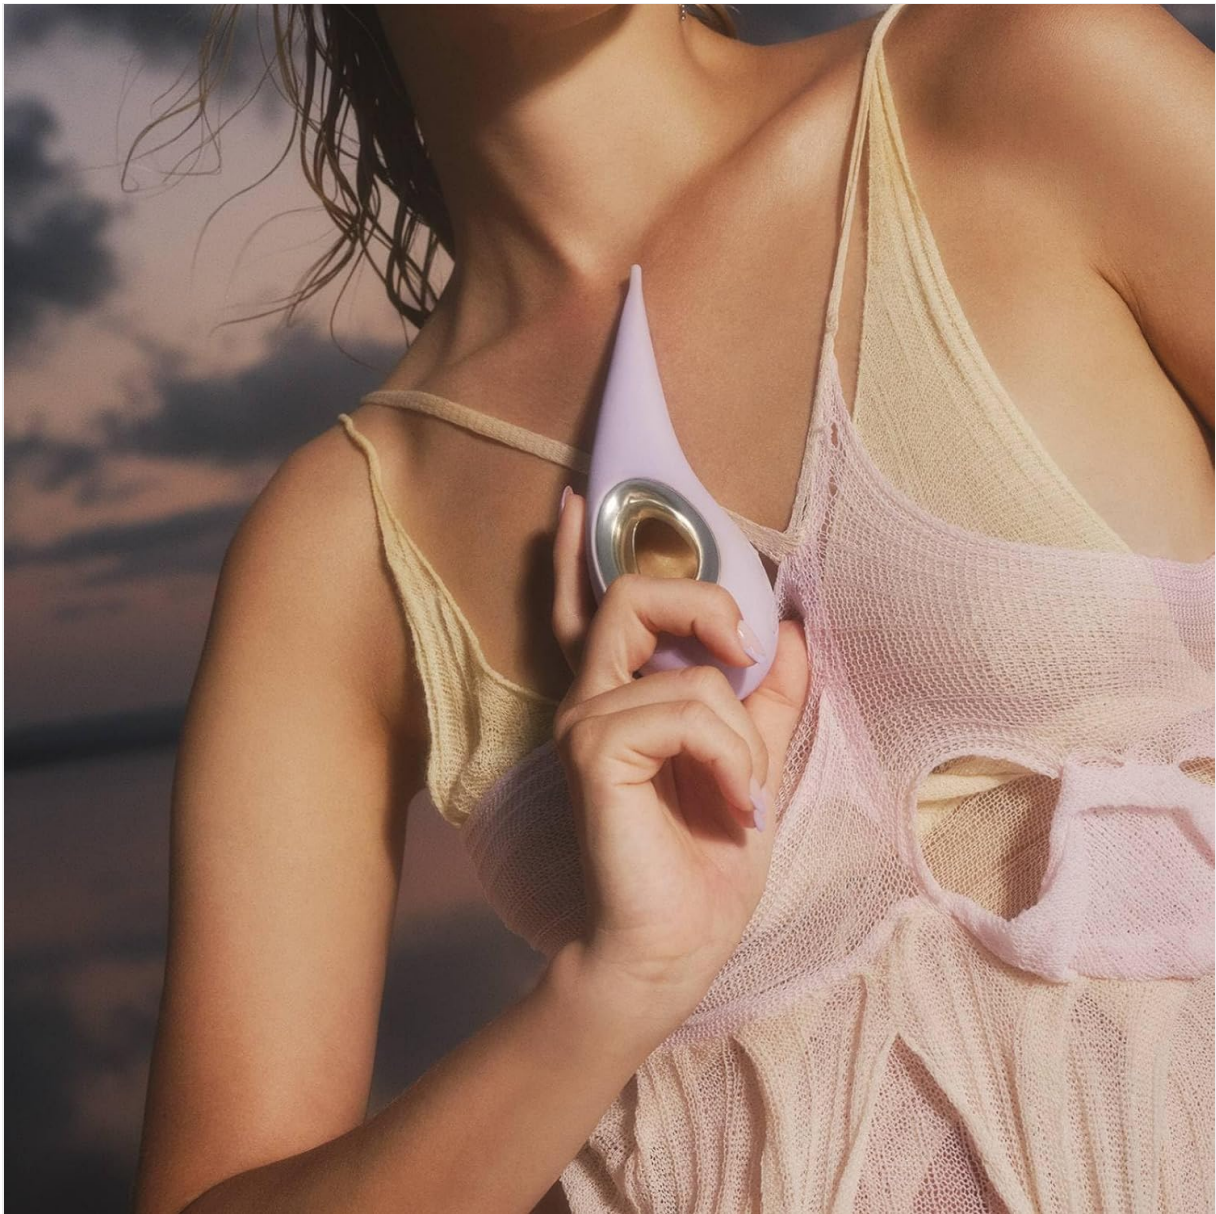 


Image: A person holding the LELO DOT, illustrating its ergonomic design and how it can be positioned for use.

## 5.1 Official Product Video

Your browser does not support the video tag.

Video: Official video demonstrating the features and use of the LELO DOT Clitoral Pinpoint Vibrator. This video provides a visual guide to the product's functionality and design.

## 6. MAINTENANCE

---

### 6.1 Cleaning

The LELO DOT is fully waterproof, making cleaning simple and hygienic. Always clean your device thoroughly before and after each use.

- Wash the device with warm water and a toy cleaner or mild antibacterial soap.
- Rinse thoroughly with clean water.
- Pat dry with a lint-free cloth or towel.
- Avoid using cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.

## 6.2 Storage

Store your LELO DOT in its provided satin pouch in a cool, dry, and dust-free place. Keep it away from direct sunlight and extreme temperatures. Avoid storing it with other toys made of different materials to prevent material degradation.

## 7. TROUBLESHOOTING

If you encounter any issues with your LELO DOT, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Ensure the device is fully charged (approx. 2 hours).
Device does not hold a charge.	Battery degradation or charging cable issue.	Try a different USB charging port or cable. If the issue persists, contact LELO customer support.
Vibrations are weak or inconsistent.	Low battery or internal motor issue.	Fully charge the device. If the problem continues, contact LELO customer support.
Buttons are unresponsive.	Temporary software glitch or low battery.	Ensure the device is charged. Try turning the device off and on again.

If these solutions do not resolve the issue, please contact LELO customer support for further assistance.

## 8. SPECIFICATIONS

- **Model Name:** DOT
- **Item Model Number:** 8908
- **Material:** Body-safe Silicone
- **Color:** Lilac
- **Dimensions:** 3.54 x 1.38 x 9.45 inches
- **Weight:** 3.46 ounces
- **Battery:** 1 Lithium Polymer battery (included)
- **Charging:** USB Rechargeable
- **Waterproof:** IPX7 Certified
- **Vibration Settings:** 8

## 9. WARRANTY & SUPPORT

LELO products are manufactured to the highest standards and come with a comprehensive warranty:

- **1-Year Warranty:** Covers manufacturing defects from the date of purchase.
- **10-Year Quality Guarantee:** Ensures product quality and performance for an extended period.

For warranty claims, technical support, or any product-related inquiries, please visit the official LELO website or contact their customer service directly. Retain your proof of purchase and warranty registration card.

## 10. SAFETY INFORMATION

---

Please read and understand all safety information before using your LELO DOT:

- This device is for external use only.
- Do not use if the device appears damaged or if the silicone is torn.
- Discontinue use immediately if you experience any discomfort or pain.
- Consult a healthcare professional if you have any medical concerns or conditions before use.
- Keep out of reach of children.
- Use only with water-based lubricants. Oil-based lubricants can damage the silicone material.
- Do not immerse the device in water for extended periods beyond its IPX7 rating.
- Do not attempt to disassemble the device. This will void the warranty.