

[Manuals.plus](#) /

- › [We R Memory Keepers](#) /
- › We R Memory Keepers Craft Projector Instruction Manual

We R Memory Keepers 60000598

We R Memory Keepers Craft Projector Instruction Manual

Model: 60000598

INTRODUCTION

The We R Memory Keepers Craft Projector is designed to assist crafters in transferring images from a smartphone directly onto a project surface. This device allows for easy tracing of designs, enabling precise and detailed work without the need for complex equipment. It operates without cords, batteries, or electricity, offering a simple and portable solution for various crafting needs.

WHAT'S IN THE BOX

- Craft Projector (main assembly)

SETUP

The Craft Projector is designed for straightforward assembly and use. Follow these steps to set up your projector:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble the Base:** Extend the legs of the projector base to create a stable foundation.
3. **Attach the Vertical Pole:** Securely insert the vertical pole into the base. Ensure it is firmly seated.
4. **Position Phone Holder and Lens:** Attach the phone holder and the projector lens assembly to the vertical pole. These components are designed to slide up and down for adjustment.



CRAFT PROJECTOR
PROJECTEUR POUR ARTISAN
PROYECTOR ARTESANAL
KUNSTHANDWERK-PROJEKTOR





Image: The fully assembled We R Memory Keepers Craft Projector, ready for use.

Once assembled, place the projector on a flat, stable surface suitable for your crafting project.

OPERATING INSTRUCTIONS

Using the Craft Projector involves a few simple steps to project and trace your desired image.

1. Preparing Your Device

Select the image you wish to project on your smartphone. Ensure the image is displayed clearly on your screen. For optimal projection, maximize your phone's screen brightness and consider using the projector in a dimly lit room.

2. Placing Your Phone

Carefully place your smartphone into the adjustable phone holder at the top of the projector. The holder is designed to grip most phone models securely. Ensure the phone's screen is facing downwards towards the projector lens.



Image: A smartphone positioned in the projector's holder, with an image displayed on its screen.

3. Focusing and Sizing the Image

To adjust the focus and size of the projected image, slide both the phone holder and the projector lens assembly up or down the vertical pole. Move them until the image projected onto your crafting surface is clear and at your desired size. The projector can enlarge images up to 250% of their original size.

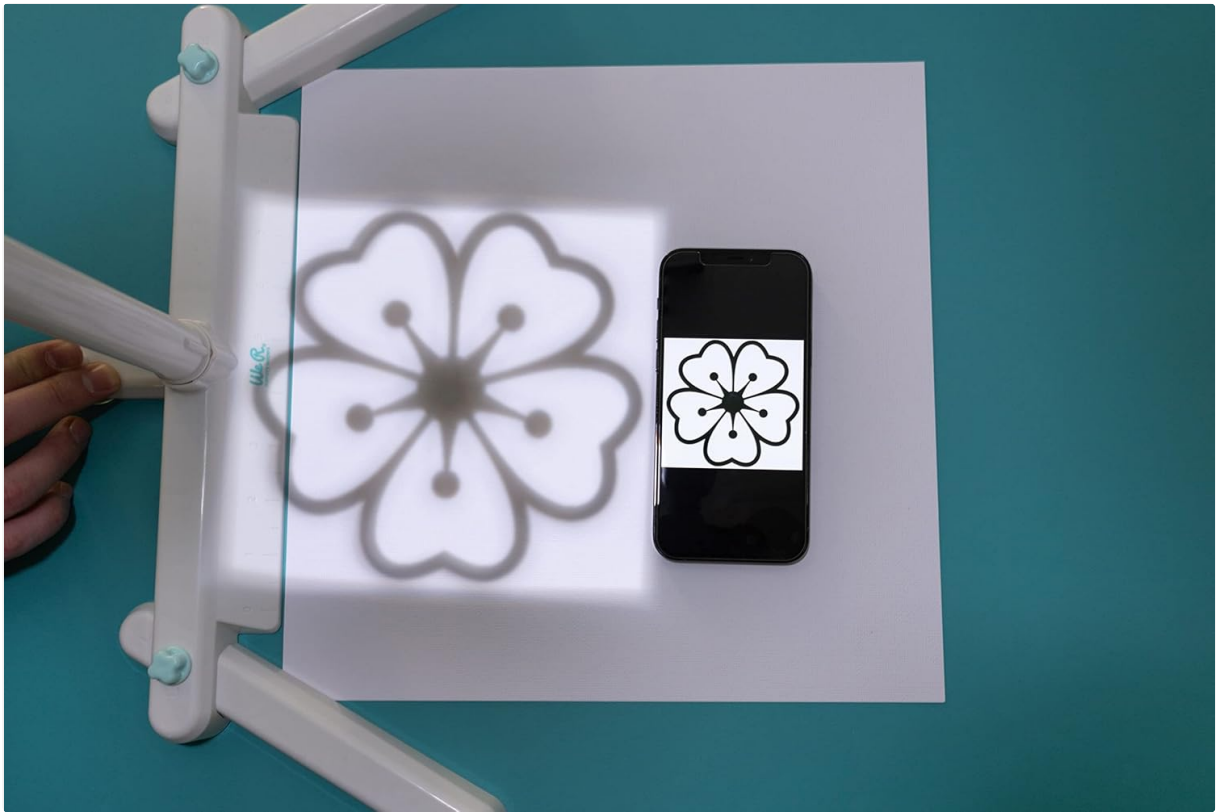


Image: A clear image projected onto a crafting surface, ready for tracing.

4. Tracing Your Image

Once the image is focused and sized correctly, you can begin tracing it onto your chosen crafting material (paper, fabric, etc.) using a pencil or appropriate crafting tool.



Image: A hand tracing a bird design onto an embroidery hoop, guided by the projected image.

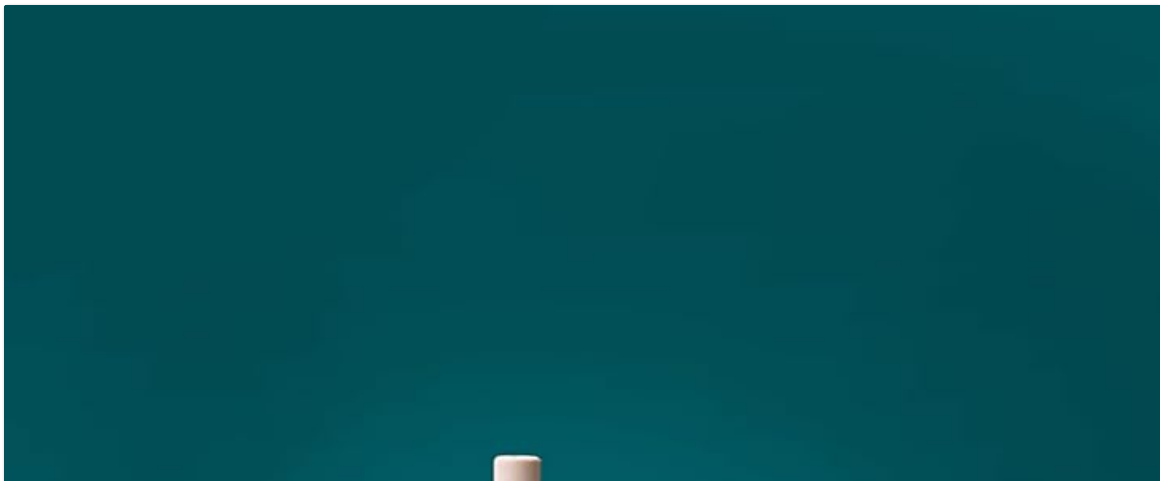




Image: The Craft Projector in active use, projecting a floral pattern onto a surface for tracing.

MAINTENANCE

To ensure the longevity and optimal performance of your Craft Projector, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the projector's surfaces with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- **Lens Care:** Gently clean the projector lens with a microfiber cloth to remove dust or smudges. Do not use harsh chemicals.
- **Storage:** The projector disassembles easily for compact storage. Store it in a dry, cool place away from direct sunlight when not in use.

TROUBLESHOOTING

If you encounter issues with your Craft Projector, refer to the following common problems and solutions:

- **Issue: Image is blurry or out of focus.**
Solution: Adjust the height of the phone holder and the projector lens by sliding them up or down the pole until the image is clear. Ensure the projection surface is flat.
- **Issue: Projector is unstable or tips over.**
Solution: Ensure the projector is placed on a stable, flat surface. The base is designed for tabletop use. Avoid excessive force when adjusting components.
- **Issue: Image is too dim or hard to see.**
Solution: The projector utilizes your phone's screen brightness. For best results, use the projector in a dimly lit room. Increase your phone's screen brightness to maximum.
- **Issue: Phone does not fit securely.**
Solution: The phone holder is adjustable to grip most phone models. Ensure your phone is properly seated and secured.

SPECIFICATIONS

Brand	We R Memory Keepers
Model Name	WR CRAFT PROJECTOR
Model Number	60000598
Recommended Uses	Crafts
Special Feature	Portable
Display Resolution	1024 x 768
Display Type	LED
Form Factor	Portable
Mounting Type	Tabletop Mount
Compatible Devices	Smartphones
Item Weight	1.2 Pounds

WARRANTY AND SUPPORT

Warranty Information

This product is covered by the manufacturer's standard warranty. Please refer to the product packaging or the official We R Memory Keepers website for specific warranty terms and conditions.

Customer Support

For further assistance, product inquiries, or to view additional resources, please visit the official We R Memory Keepers website: [We R Memory Keepers Store](#).