

Manuals.plus /

- › Bernini Fountains /
- › Bernini Alba Cordless Water Fountain User Manual

Bernini Fountains LG6375

Bernini Alba Cordless Water Fountain User Manual

Brand: Bernini Fountains | Model: LG6375

INTRODUCTION

The Bernini Alba Cordless Water Fountain is designed to enhance your outdoor or indoor living space with the soothing sound of flowing water. This battery-powered fountain offers unparalleled flexibility, allowing placement anywhere without the need for electrical cords or plumbing. Its durable construction and versatile 3-in-1 finial make it a perfect addition to any garden, patio, deck, porch, or home environment.





Image: The Bernini Alba Cordless Water Fountain in Terracotta, showcasing its elegant design.

PRODUCT FEATURES

- **Cordless Operation:** Powered by 4 D cell batteries (not included), eliminating the need for power cords or plumbing.
- **Versatile Placement:** Ideal for gardens, patios, decks, porches, or indoor spaces.
- **3-in-1 Finial:** The top finial can be configured as an infinity pool, a bird feeder, or a self-watering planter.

3-IN-1 FINIAL CAN BE USED AS A SELF-WATERING PLANTER, BIRD FEEDER OR INFINITY POOL



Image: Illustration of the 3-in-1 finial, showing configurations as a self-watering planter, bird feeder, and infinity pool.

- **Durable Construction:** Made from long-lasting faux concrete material that resists cracking, chipping, and fading.
- **Adjustable Timer:** Features adjustable timer settings from 1 to 4 hours, running daily at the same time.




Image: A hand pressing the control button on the fountain, highlighting the push-button controls for on/off and daily repeat timer.

- **Multiple Spray Tips:** Includes three interchangeable spray tips to customize the water flow: Shower, Pirouette, and Umbrella.

INCLUDES 3 SPRAY TIPS TO CHOOSE FROM



SHOWER

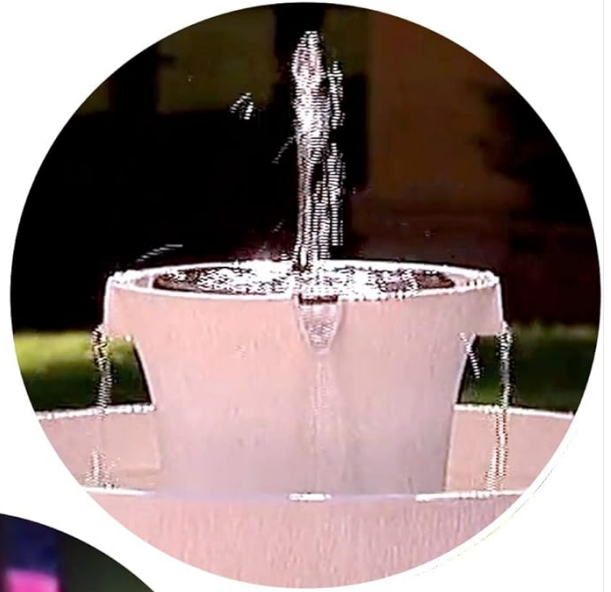

PIROUETTE



UMBRELLA

Image: Visual representation of the three included spray tips: Shower, Pirouette, and Umbrella, demonstrating different water patterns.

Product Overview Video

Your browser does not support the video tag.

Video: An official overview of the Bernini Alba Cordless Fountain, demonstrating its features, easy assembly, and versatile finial options.

SETUP

The Bernini Alba Cordless Water Fountain is designed for quick and easy assembly, typically taking less than 5 minutes.

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components are present: fountain base, main bowl, finial, pump assembly, and spray tips.



Image: All individual components of the Bernini Alba Cordless Water Fountain laid out, including the main body, finial, pump, and various accessories.

2. **Assemble Fountain Body:** Place the main bowl securely onto the fountain base.
3. **Install Pump:** Insert 4 D cell batteries (not included) into the battery compartment of the pump. Place the pump assembly into the designated slot within the finial.



Image: A close-up view of the pump being inserted into the finial of the fountain.

4. **Place Finial:** Position the finial with the installed pump onto the center of the main bowl.
5. **Add Water:** Fill the main bowl with clean water until the pump is fully submerged and the water level reaches the recommended fill line.



Image: Water being poured into the fountain's main bowl, demonstrating the filling process.

6. **Select Spray Tip (Optional):** Choose your desired spray tip and attach it to the pump outlet.

OPERATION

Operating your Bernini Alba Cordless Water Fountain is simple and intuitive.

- **Power On/Off:** Locate the power button on the pump assembly (typically on the top or side of the finial). Press the button once to turn the fountain on. Press it again to turn it off.
- **Setting the Timer:** The fountain features an adjustable timer that allows it to run for 1, 2, 3, or 4 hours daily.
 - To activate the timer, press and hold the power button for approximately 3 seconds until you hear a beep or see a light indicator.
 - Each subsequent press of the button will cycle through the timer settings (e.g., 1 hour, 2 hours, 3 hours, 4 hours, continuous).
 - The fountain will run for the selected duration and then automatically turn off. It will then automatically turn on at the same time each day for the set duration.
- **Battery Life:** With average use, 4 D cell batteries can last up to 200 days. Battery life may vary based on usage frequency and timer settings.

MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your fountain.

- **Water Level:** Check the water level daily, especially in warm weather, and refill as needed to ensure the pump remains fully submerged. Low water levels can damage the pump.
- **Cleaning:**
 - Periodically clean the fountain and pump to prevent algae buildup and mineral deposits.
 - Turn off the fountain and disconnect the pump.
 - Drain the water and wipe down all surfaces with a soft cloth and mild soap. Rinse thoroughly.


- Clean the pump filter regularly to ensure proper water flow. Refer to the pump's specific instructions for filter cleaning.
- **Battery Replacement:** When the water flow weakens or stops, it's likely time to replace the D cell batteries. Ensure the fountain is off before replacing batteries.
- **Winterization (for outdoor use):** In freezing climates, drain all water from the fountain and store it indoors in a dry, protected area to prevent damage from ice expansion.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fountain not running	Low water level; Dead batteries; Clogged pump/filter; Pump not properly connected.	Refill water to recommended level; Replace batteries; Clean pump and filter; Ensure pump is securely connected.
Weak water flow	Low water level; Weak batteries; Partially clogged pump/filter.	Refill water; Replace batteries; Clean pump and filter thoroughly.
Fountain runs for short periods	Timer set for short duration; Batteries are low.	Adjust timer setting to desired duration; Replace batteries.
Water splashing excessively	Incorrect spray tip; Fountain not level.	Try a different spray tip; Ensure fountain is placed on a level surface.

SPECIFICATIONS

Attribute	Detail
Model Number	LG6375
Color	Terracotta
Material	Faux Concrete

Attribute	Detail
Product Dimensions (L x W x H)	<p data-bbox="308 159 475 188">16" x 16" x 26"</p>  <p data-bbox="355 792 679 880">29.5" TO TOP OF FINIAL</p> <p data-bbox="451 1384 1331 1413">Image: Diagram illustrating the dimensions of the Bernini Alba Cordless Water Fountain.</p>
Item Weight	16 Pounds
Power Source	Battery Powered (4 D cell batteries, not included)
Battery Life (Average Use)	Up to 200 days
Manufacturer	Bernini Fountains
UPC	810077921777
Country of Origin	China
Date First Available	September 9, 2022

For warranty information or technical support, please contact Bernini Fountains directly. Refer to the product packaging or the official Bernini Fountains website for the most current contact details.

As a small business brand, Bernini Fountains is committed to customer satisfaction and innovation in gardening products.