

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bernini Fountains](#) /

› [Bernini Alba Cordless Water Fountain - 26" Battery Powered Water Fountains Outdoor or Indoor for Garden, Patio, Deck, Porch and Home, Requires No Cords or Plumbing \(Patina Green\) User Manual](#)

Bernini Fountains LG6375

Bernini Alba Cordless Water Fountain User Manual

Model: LG6375

PRODUCT OVERVIEW

The Bernini Alba Cordless Water Fountain is a versatile, battery-powered water feature designed for both outdoor and indoor use. Its cordless design eliminates the need for plumbing or electrical cords, offering flexible placement options in your garden, patio, deck, porch, or home. Constructed from durable faux concrete, it resists chipping, cracking, and fading, ensuring long-lasting beauty. The fountain features a unique 3-in-1 finial that can function as an infinity pool, bird feeder, or self-watering planter, providing multiple aesthetic and functional possibilities.



This image shows the Bernini Alba Cordless Water Fountain in its Patina Green color, highlighting its elegant design and two-tiered structure. The fountain is designed to be a focal point in any setting, providing a soothing water display.

WHAT'S INCLUDED




This image displays all the components included with your Bernini Alba Cordless Water Fountain. You will receive the main fountain body (base and large bowl), the inner finial component, the pump assembly, various spray tips, and the optional top bowl for the 3-in-1 finial features. Ensure all parts are present before beginning assembly.

- Fountain Base and Main Bowl
- Inner Finial Component
- Pump Assembly
- 3-in-1 Finial Topper (can be used as infinity pool, bird feeder, or self-watering planter)
- Assorted Spray Tips (Shower, Pirouette, Umbrella)
- Instruction Manual


SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all parts from the packaging and place them on a flat, stable surface. Verify all components listed in the "What's Included" section are present.

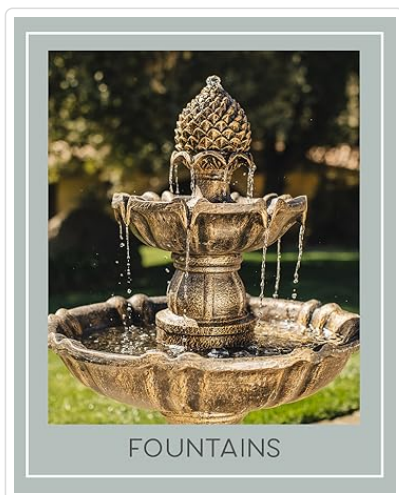

This image shows a person placing the main fountain bowl onto the base. Ensure the base is stable and level on your chosen surface before proceeding with assembly.

2. **Assemble Fountain Body:** Place the main bowl securely onto the fountain base. Ensure it is stable and level.

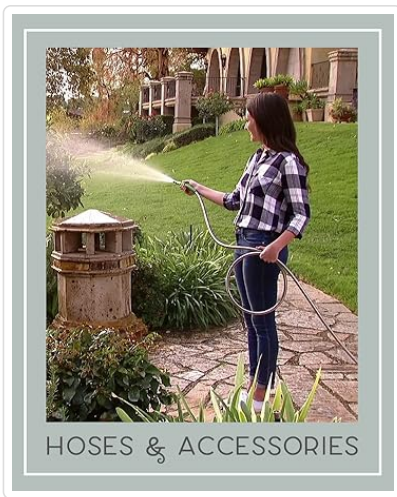

This image illustrates the step of inserting the inner finial component into the main fountain bowl. Make sure it fits snugly and is centered.

- 3. Install Pump and Batteries:** Insert 4 D-cell batteries (not included) into the battery compartment of the pump. Place the pump assembly into the designated slot within the inner finial component. Ensure the pump is fully submerged when water is added.



This image shows a hand pressing a button on the pump unit, which is located within the inner finial. This button is used for power and timer settings.

- 4. Add Water:** Fill the main bowl with distilled water until the pump is fully submerged and the water level is appropriate for operation. Do not overfill.



This image depicts water being poured into the main bowl of the fountain. Ensure the water level is sufficient to cover the pump for proper operation.

- 5. Choose Spray Tip (Optional):** Select one of the three included spray tips (Shower, Pirouette, Umbrella) and attach it to the pump nozzle for different water effects.



This image showcases the three different spray patterns available: Shower, Pirouette, and Umbrella. You can choose the tip that best suits your desired water effect.

6. **Attach 3-in-1 Finial Topper (Optional):** If desired, place the 3-in-1 finial topper on top of the inner finial. This can be used as an infinity pool, bird feeder, or self-watering planter.



This image demonstrates the versatility of the 3-in-1 finial, showing it configured as a self-watering planter, an infinity pool, and a bird feeder. Choose the function that best fits your needs.

OPERATING INSTRUCTIONS

Power On/Off and Timer Settings

The Bernini Alba fountain operates using a simple push-button control located on the pump unit. This button allows you to turn the fountain on or off and set daily repeat timers.

- **To Turn On:** Press the button once. The fountain will begin operating.
- **To Turn Off:** Press and hold the button for a few seconds until the fountain stops.
- **Timer Settings:** The fountain features adjustable timer settings that allow it to run for 1-4 hours each day at the same time. Refer to the specific instructions on the pump unit or the included quick start guide for detailed timer programming steps. Typically, multiple presses of the button will cycle through timer options (e.g., 1 hour, 2 hours, 3 hours, 4 hours, continuous).

Your browser does not support the video tag.

This video demonstrates the operation and features of the Bernini Alba Cordless Fountain, including its cordless nature, durable construction, easy assembly, battery life, and the versatile 3-in-1 finial. It highlights how the fountain can be placed anywhere without power cords or plumbing, and how it provides a relaxing sound of cascading water.

MAINTENANCE

Water Management

- **Refilling:** Regularly check the water level in the main bowl. Refill with distilled water as needed to ensure the pump remains fully submerged. Low water levels can damage the pump.
- **Cleaning:** Periodically clean the fountain to prevent algae buildup and mineral deposits. Empty the water, wipe down the surfaces with a soft cloth and mild soap, and rinse thoroughly. Do not use abrasive cleaners.

Battery Replacement

The fountain operates on 4 D-cell batteries. Battery life can last up to 200 days with average use, depending on the timer settings and quality of batteries. Replace batteries when the water flow weakens or stops.

1. Turn off the fountain and remove the pump unit.
2. Open the battery compartment on the pump.
3. Remove old batteries and insert new 4 D-cell batteries, ensuring correct polarity.
4. Securely close the battery compartment and reinsert the pump into the fountain.

Winterization (for Outdoor Use)

If using outdoors in freezing climates, it is recommended to drain all water from the fountain and store it indoors during winter months to prevent damage from ice expansion.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fountain not running or weak flow	Low water level; Dead or weak batteries; Clogged pump; Air bubble in pump.	Refill water to appropriate level; Replace batteries; Clean pump and filter; Gently shake pump to dislodge air bubble.
Water splashing excessively	Incorrect spray tip; Overfilled water; Uneven surface.	Try a different spray tip; Remove some water; Ensure fountain is on a level surface.
Algae buildup	Exposure to sunlight; Infrequent cleaning.	Clean fountain regularly; Consider using an algaecide safe for fountains (if applicable and safe for wildlife if used as bird bath).
Timer not working correctly	Battery issue; Incorrect setting.	Replace batteries; Re-program timer according to instructions.

SPECIFICATIONS

Model: LG6375

Color: Patina Green

Material: Faux Concrete

Dimensions: 16"L x 16"W x 26"H

Item Weight: 16 Pounds

Power Source: 4 x D-Cell Batteries (not included)

Special Feature: Cordless, 3-in-1 Finial (Infinity Pool, Bird Feeder, Self-Watering Planter)

Manufacturer: Bernini Fountains

UPC: 852117005443



This diagram provides detailed dimensions of the Bernini Alba Cordless Water Fountain, including its height, width, and the dimensions of its individual components. The overall height is approximately 26 inches, with the main bowl being 16 inches in diameter.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Bernini Fountains website or contact their customer service directly. Keep your purchase receipt for warranty claims.

Bernini Fountains has been in business for over 30 years, known for inventing and launching new products in outdoor decor and water features.

For additional products and information, visit the [Bernini Fountains Store on Amazon](#).