

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Bernini Fountains](#) /
- › [Bernini Alba Cordless Water Fountain User Manual](#)

Bernini Fountains LG6375

Bernini Alba Cordless Water Fountain User Manual

Model: LG6375

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Bernini Alba Cordless Water Fountain. Please read this manual thoroughly before use to ensure proper function and longevity of your product.

PRODUCT OVERVIEW

The Bernini Alba Cordless Water Fountain is a battery-powered water feature designed for both indoor and outdoor use. Its cordless design allows for flexible placement without the need for power cords or plumbing. It features a durable faux concrete construction and includes a 3-in-1 finial that can function as an infinity pool, bird feeder, or self-watering planter.





Image: The Bernini Alba Cordless Water Fountain in Taupe, showcasing its two-tiered design and textured faux concrete finish.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical products, especially when children are present. Read all instructions before using the fountain.

- Do not immerse the pump or battery compartment in water beyond normal operation.
- Ensure the fountain is placed on a stable, level surface to prevent tipping.
- Use only the specified battery type (4 D cell batteries).
- Keep children and pets away from the fountain during operation and maintenance.
- Do not operate the fountain if any part is damaged.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Fountain Base
- Upper Tier/Bowl
- 3-in-1 Finial Topper (Infinity Pool, Bird Feeder, Self-Watering Planter)
- Water Pump
- Battery Compartment
- 3 Spray Tips (Shower, Pirouette, Umbrella)
- Instruction Manual (this document)



Image: All components of the Bernini Alba Cordless Water Fountain laid out, including the main fountain body, finial, pump, battery compartment, and various spray tips.

SETUP AND ASSEMBLY

The Bernini Alba Cordless Water Fountain is designed for quick and easy assembly.

1. **Choose a Location:** Select a stable, level surface for your fountain. The cordless design allows placement anywhere in your garden, patio, porch, or indoors.
2. **Assemble the Fountain Body:** Place the upper tier/bowl onto the fountain base. Ensure it is seated securely.
3. **Install the Pump:** Insert the water pump into the designated slot within the upper tier. Connect the pump to the battery compartment.
4. **Insert Batteries:** Open the battery compartment and insert 4 D cell batteries (not included), ensuring correct polarity. Close the compartment securely.
5. **Place the Finial:** Position the 3-in-1 finial topper onto the pump. You can choose to use it as an infinity pool, bird feeder, or self-watering planter.
6. **Add Water:** Fill the fountain with clean water, ensuring the pump is fully submerged. Do not overfill.
7. **Select Spray Tip (Optional):** If desired, attach one of the three included spray tips (Shower, Pirouette, Umbrella) to the pump nozzle for different water effects.



Image: A person placing the upper tier onto the fountain base, demonstrating the ease of assembly.



Image: A person pouring water into the assembled fountain, showing the final step before operation.

Video: An official product video demonstrating the assembly and various features of the Bernini Alba Cordless Fountain, including its portability and different final uses.

OPERATING INSTRUCTIONS

The Bernini Alba fountain is designed for simple operation.

1. **Power On/Off:** Locate the push-button control on the pump. Press the button once to turn the fountain on. Press it again to turn it off.
2. **Setting the Timer:** The fountain features a daily repeat timer. Press the button to cycle through timer settings (1-4 hours). The fountain will run for the selected duration and then automatically turn off, repeating daily at the same time.
3. **Battery Life:** With 4 D cell batteries, the fountain can operate for up to 200 days with average use. Replace batteries when water flow diminishes or stops.



Image: A hand pressing the push-button control on the fountain's pump, highlighting the easy on/off and timer functions.

MAINTENANCE

Regular maintenance will ensure optimal performance and extend the life of your fountain.

- **Water Level:** Check the water level daily and refill as needed to ensure the pump remains submerged. Low water levels can damage the pump.
- **Cleaning:** Periodically clean the fountain and pump to prevent mineral buildup and algae growth. Use a soft brush and mild soap. Rinse thoroughly.
- **Algae Control:** For outdoor use, consider using an animal, bird, and frog-safe algaecide to prevent algae buildup.
- **Winterization:** In freezing climates, drain all water from the fountain and store it indoors during winter months to prevent damage from ice expansion.
- **Battery Replacement:** Replace batteries when the water flow weakens or stops. Dispose of old batteries responsibly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fountain not running or weak flow	<ul style="list-style-type: none">◦ Low water level◦ Dead or low batteries◦ Pump clogged with debris◦ Air bubble in pump	<ul style="list-style-type: none">◦ Add water to submerge pump◦ Replace batteries◦ Clean pump and filter◦ Remove pump, shake gently, and re-submerge
Fountain turns off unexpectedly	<ul style="list-style-type: none">◦ Timer activated◦ Batteries low◦ Pump overheating due to low water	<ul style="list-style-type: none">◦ Check timer setting◦ Replace batteries◦ Add water and allow pump to cool
Buttons not responding	<ul style="list-style-type: none">◦ Stuck button◦ Battery issue	<ul style="list-style-type: none">◦ Gently press and release button multiple times◦ Replace batteries

SPECIFICATIONS

- **Model:** LG6375
- **Brand:** Bernini Fountains
- **Color:** Taupe
- **Material:** Faux Concrete
- **Product Dimensions:** 16"L x 16"W x 26"H
- **Item Weight:** 16 Pounds
- **Power Source:** Battery Powered (4 D cell batteries, not included)
- **Special Feature:** Cordless, 3-in-1 Finial (Infinity Pool, Bird Feeder, Self-Watering Planter), Daily Repeat Timer
- **UPC:** 852117005450
- **Country of Origin:** China
- **First Available:** September 9, 2022

3-IN-1 FINIAL CAN BE USED AS A SELF-WATERING PLANTER, BIRD FEEDER OR INFINITY POOL



Image: A diagram illustrating the dimensions of the Bernini Alba Cordless Water Fountain, including height, width, and finial measurements.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Bernini Fountains directly. Refer to the product packaging or the official Bernini Fountains website for the most current contact details.

Bernini Fountains Store: [Visit Store](#)