

[Manuals.plus](#) /

› [Accutime](#) /

› Accutime FZN4733 Disney Frozen Kids LED Digital Watch Instruction Manual

Accutime FZN4733

Accutime FZN4733 Disney Frozen Kids LED Digital Watch Instruction Manual

Model: FZN4733

1. PRODUCT OVERVIEW

This manual provides instructions for the Accutime FZN4733 Disney Frozen LED Digital Watch. This watch features a digital LED display, a comfortable acrylic strap, and a design inspired by Disney's Frozen characters.

Key features include a luminous LED display for time (hours, minutes, seconds), month, and day. Both 12-hour and 24-hour time formats are available. All watch settings are managed using two buttons located on the right side of the watch case.

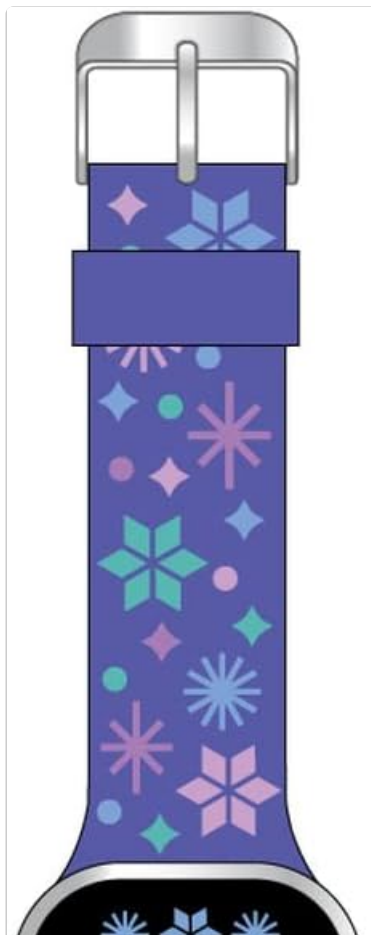




Image 1.1: Front view of the Accutime FZN4733 Disney Frozen Kids LED Digital Watch, showing the digital display and character design on the strap.

The watch is powered by an integrated CR2032 button cell battery, which is not designed to be recharged or replaced by the user.

2. SETUP

2.1 Strap Adjustment

The watch strap is approximately 21.7 cm long and features 7 adjustment holes. To adjust the strap, locate the buckle and the series of holes along the strap. Select the hole that provides a comfortable and secure fit on the wearer's wrist.







Image 2.1: Side view of the watch, illustrating the adjustable strap and the watch case profile.

2.2 Initial Power On

The watch is equipped with an integrated CR2032 button cell battery and is ready for use. To activate the LED display, press either of the two buttons located on the right side of the watch case. The display will illuminate, showing the current time.

3. OPERATING INSTRUCTIONS

The watch features two buttons on the right side of the case. For these instructions, we will refer to them as **Button 1** (the upper button) and **Button 2** (the lower button).

3.1 Displaying Time and Date

1. Press **Button 1** once to activate the LED display. The display will show the current time (hours and minutes).
2. The display will remain active for a few seconds and then turn off automatically to conserve battery power.
3. While the display is active, press **Button 1** repeatedly to cycle through the displayed information in the following order: Time (Hours:Minutes) → Seconds → Month → Day.

3.2 Setting Time and Date

To adjust the time and date settings:

1. Press **Button 1** once to activate the display.
2. Press and hold **Button 1** for approximately 3 seconds until the hours digit begins to flash. This indicates you are in setting mode.
3. While the hours digit is flashing, press **Button 2** repeatedly to adjust the hour.
4. Press **Button 1** again to confirm the hours and move to the minutes setting. The minutes digit will flash.
5. Press **Button 2** repeatedly to adjust the minutes.
6. Continue this sequence, pressing **Button 1** to move to the next setting (Month, Day) and **Button 2** to adjust the value.
7. **12/24 Hour Format:** When setting the hours, if 'AM' or 'PM' appears, you are in 12-hour format. Press **Button 2** to toggle between AM/PM or to switch to 24-hour format (where no AM/PM indicator is shown).
8. Once all settings are complete, press **Button 1** one last time to exit the setting mode, or simply wait for the display to time out automatically.



Image 3.1: Close-up view of the watch face, showing the LED display and the two control buttons on the right side.

4. MAINTENANCE

4.1 Cleaning

To clean your watch, gently wipe it with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the watch case, strap, or display.

4.2 Water Resistance

This watch is not specified as water-resistant. To prevent damage, avoid exposing the watch to water, including showering, swimming, or heavy rain. Do not submerge the watch in any liquid.

4.3 Battery Information

The Accutime FZN4733 watch contains an integrated CR2032 button cell battery. This battery is not designed to be replaced by the user and cannot be recharged. When the battery's life cycle concludes, the watch will cease to function. Attempting to open the watch case to replace the battery may damage the watch and void any potential warranty.

5. TROUBLESHOOTING

- **Display Does Not Light Up:**

Ensure that the button is pressed firmly. If the display still does not illuminate, the integrated battery may be depleted. As the battery is non-replaceable, the watch may need to be replaced.

- **Incorrect Time or Date Displayed:**

Refer to Section 3.2, "Setting Time and Date," to re-adjust the watch settings according to the instructions provided.

6. SPECIFICATIONS

Feature	Specification
Model Number	FZN4733
Manufacturer	Accutime Watch Corp.
Display Type	LED Digital

Time Formats	12-hour / 24-hour selectable
Battery Type	Integrated CR2032 (non-replaceable)
Strap Material	Acrylic
Strap Dimensions	Approx. 21.7 cm (length) x 2.2 cm (width)
Case Dimensions (L x H x D)	Approx. 3.8 cm x 3.7 cm x 0.9 cm
Weight	Approx. 24 grams
Target User	Children (Mixed)

7. WARRANTY AND SUPPORT

Warranty information for the Accutime FZN4733 watch is not explicitly provided in the product details. For specific warranty terms, please refer to the documentation included with your purchase or contact the retailer from whom the watch was purchased.

Information regarding the availability of spare parts for this product is not available.

For further support or inquiries, please contact the retailer or the manufacturer, Accutime Watch Corp., directly.

© 2023 Accutime Watch Corp. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BDSWDC93>

More documents and user manuals: **<https://manuals.plus/>**