



[Manuals.plus](#) /

› [Honeywell](#) /

› [Honeywell Medium Steel Security Safe with Digital Lock - Model 815610 Instruction Manual](#)

Honeywell 815610

Honeywell Medium Steel Security Safe with Digital Lock - Model 815610

Instruction Manual

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Honeywell Medium Steel Security Safe with Digital Lock, Model 815610. Please read this manual thoroughly before using your safe to ensure optimal security and longevity of the product. Keep this manual for future reference.



Image: Front view of the Honeywell Medium Steel Security Safe, showcasing the digital keypad and manual override dial.

SETUP

1. Unpacking and Initial Inspection

Carefully remove the safe from its packaging. Inspect the safe for any signs of damage. Report any damage to your retailer immediately. Ensure all included components, such as keys and mounting hardware, are present.

2. Battery Installation

The digital lock requires batteries for operation. Locate the battery compartment, typically on the inside of the safe door. Insert the specified number and type of batteries (usually AA, not included) according to the polarity indicators. Close the battery compartment securely.

3. Setting Your Personal Digital Code

Your safe comes with a factory default code. It is crucial to change this to a personal code immediately. Refer to the specific instructions provided inside the safe for programming your new code. Typically, this involves pressing a reset button inside the safe, entering your new code (4-8 digits), and confirming it. Test the new code multiple times with the door open before closing it.



Image: Close-up of the digital keypad on the Honeywell safe, showing the number buttons and manual override access.

4. Mounting the Safe

The safe is designed for freestanding or tabletop placement. For enhanced security, it is recommended to secure the safe using the provided mounting hardware. Locate the pre-drilled holes on the back or bottom of the safe. Use appropriate tools and fasteners to secure the safe to a wall or floor, ensuring it is firmly attached to a stable surface.



Image: The Honeywell safe with its door open, revealing the interior storage space and locking bolts.

OPERATION

1. Opening the Safe with Your Digital Code

1. Enter your personal digital code (4-8 digits) on the keypad.
2. Press the 'Enter' or '#' button (if applicable).
3. Within a few seconds of a successful entry, turn the handle clockwise to open the safe door.

2. Opening the Safe with the Override Key

In case of forgotten code, battery failure, or electronic malfunction, the safe can be opened using the override key.

1. Locate the keyhole, usually concealed behind a cover on the digital lock panel.
2. Insert the override key and turn it counter-clockwise.
3. While holding the key turned, rotate the handle clockwise to open the safe door.
4. Remove the key once the door is open. Store override keys in a secure location away from the safe.

3. Locking the Safe

To lock the safe, simply close the door and turn the handle counter-clockwise until the bolts engage. The digital lock will automatically secure the safe. No code entry is required to lock the safe.



Image: The interior of the Honeywell safe, showing documents and a passport stored securely.

MAINTENANCE

1. Battery Replacement

Replace the batteries annually or when the low battery indicator appears. Always use new, high-quality alkaline batteries of the specified type. Do not mix old and new batteries or different battery types.

2. Cleaning

Clean the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish. Do not spray cleaning solutions directly onto the keypad or lock mechanism.

3. Key Management

Keep your override keys in a secure location, separate from the safe. Do not store them inside the safe. It is advisable to make a note of your key number for reordering purposes, if available.

TROUBLESHOOTING

- **Digital Lock Not Responding:** Check if the batteries are correctly installed and have sufficient charge. Replace batteries if necessary. Ensure no buttons are stuck.
- **Forgotten Code:** Use the override key to open the safe. Once open, you can reset your personal digital code following the instructions in the 'Setting Your Personal Digital Code' section.

- **Door Not Opening/Closing Properly:** Ensure there are no obstructions preventing the door from closing fully. Check if the locking bolts are retracting or extending smoothly. If using the digital code, ensure it is entered correctly and the handle is turned within the allotted time.
- **Alarm System:** The safe features an anti-theft alarm. If the safe is tampered with or moved unexpectedly, the alarm may activate. Refer to the specific alarm instructions for deactivation and sensitivity settings.

SPECIFICATIONS

Brand	Honeywell
Model Number	815610
Lock Type	Electronic
Material	Alloy Steel
Color	Black
Special Feature	Alarm System
Mounting Type	Freestanding, Tabletop
Included Components	Key
Alarm	Anti-theft
Water Resistance Level	Not Water Resistant
Control Type	Touchpad Control
UPC	814113011491

WARRANTY & SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Honeywell website. If you require technical assistance or have questions regarding your safe, please contact Honeywell customer support. Keep your proof of purchase and model number readily available when contacting support.

Note: This manual provides general instructions. Specific details may vary slightly. Always refer to the documentation included with your product for the most accurate and up-to-date information.