

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bright Starts](#) /
- › [Bright Starts Disney Baby Minnie Mouse Activity Center Jumper User Manual](#)

Bright Starts 13062

Bright Starts Disney Baby Minnie Mouse Activity Center Jumper User Manual

Model: 13062 | Brand: Bright Starts

1. INTRODUCTION

Welcome to the Bright Starts Disney Baby Minnie Mouse Activity Center Jumper user manual. This manual provides essential information for the safe and proper assembly, operation, and maintenance of your new activity jumper. Designed to engage and entertain your little one, this jumper features a 360-degree rotating seat and a variety of Minnie-themed toys with lights and sounds.



Figure 1: Bright Starts Disney Baby Minnie Mouse Activity Center Jumper.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions before assembly and use of the activity jumper. Keep these instructions for future reference. Failure to follow these instructions could result in serious injury.

- **Age and Weight Limits:** Suitable for babies aged 6 months to 1 year, weighing up to 25 lbs (11 kg), and up to 30 inches (76 cm) tall. The child must be able to hold their head upright unassisted.
- **Supervision:** Always keep your child in view while they are in the activity jumper. Never leave your child unattended.
- **Placement:** Place the activity jumper on a flat, level surface. Do not use on elevated surfaces.
- **Assembly:** Ensure all parts are correctly assembled and securely fastened before each use.
- **Damage:** Do not use the activity jumper if it is damaged or broken. Contact customer support for replacement parts.
- **Batteries:** Requires 2 AA batteries (not included) for lights and sounds. Ensure batteries are inserted correctly

and replace them when needed.

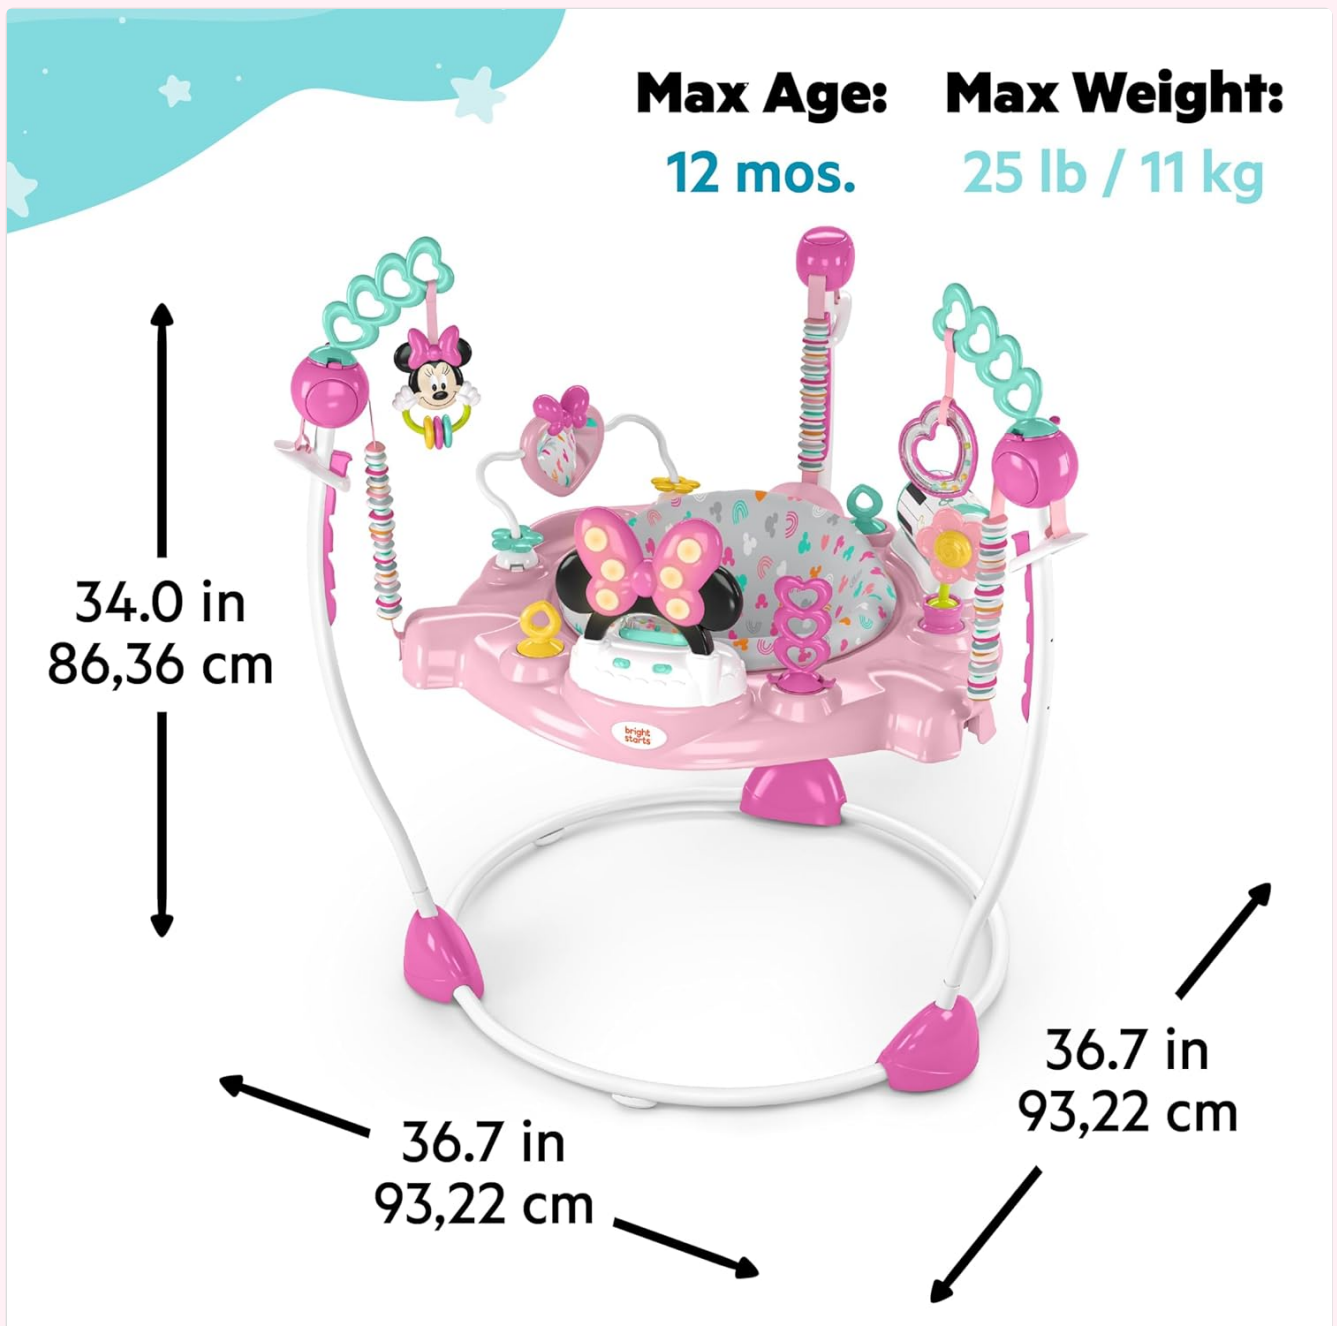


Figure 2: Maximum age and weight recommendations for safe use.

3. PARTS LIST

Before assembly, ensure all components are present and undamaged:

- Jumper Frame (Base and Support Legs)
- Activity Tray
- Fabric Seat Pad
- Minnie Mouse Electronic Toy Station (with lights and sounds)
- Heart-shaped Mirror Toy
- Spinner with Beads Toy
- Bead Chaser Toy
- Dangling Toys (various Minnie-themed characters)

- Other engaging toys (e.g., flower toy)



Figure 3: Front view of the assembled activity jumper.

4. SETUP

4.1 Assembly

Follow the detailed instructions provided in the included PDF user manual for complete assembly. Ensure all connections click into place securely.

4.2 Height Adjustment

The activity jumper features 4 height positions to grow with your baby. To adjust the height, locate the adjustment mechanisms on each support leg. Pull down on the handles on the bars and slide the legs up or down to the desired height. Ensure your baby's feet can safely and securely touch the floor with their balls of feet.



4 height positions to grow with baby

Figure 4: Adjusting the 4 height positions for optimal fit.



Figure 5: Check child's foot position to ensure proper height adjustment.

5. OPERATING INSTRUCTIONS

5.1 Placing Your Baby

Carefully place your baby into the fabric seat. Ensure they are securely positioned and comfortable.



Figure 6: Gently place your baby into the seat.

5.2 Engaging with Toys

The jumper features 10 engaging toys and activities around the 360-degree rotating seat. Your baby can easily access all toys by rotating the seat.

- **Minnie Mouse Electronic Toy Station:** This central toy features lights and sounds. Jumping activates music and lights, encouraging movement and introducing cause and effect. It has two volume options.
- **Heart-shaped Mirror:** Allows your baby to explore self-recognition.
- **Spinner with Beads & Bead Chaser:** Provides tactile and auditory stimulation.
- **Dangling Toys:** Various Minnie-themed toys are suspended for reaching and batting.



FROM THE
#1
MANUFACTURER OF
ACTIVITY JUMPERS
*Circana, U.S. dollar sales, Jan-Oct'23

10 engaging toys and activities

Figure 7: Baby engaging with the 10 toys and activities.



Seat rotates 360° for easy access to all toys

Figure 8: The seat rotates 360 degrees for full access to toys.



Machine-washable fabrics

Figure 9: Close-up of the Minnie Mouse electronic toy station with lights.



Figure 10: The heart-shaped mirror toy for self-discovery.

6. MAINTENANCE

6.1 Cleaning Instructions

- **Fabric Seat Pad:** The fabric seat pad is machine washable. Machine wash in cold water on a gentle cycle. Do not use bleach. Tumble dry on low heat.
- **Plastic and Metal Parts:** Wipe plastic and metal parts clean with a damp cloth and mild soap. Air dry thoroughly. Do not immerse any part of the frame or electronic components in water.



Figure 11: The fabric seat pad is machine washable for convenience.

7. TROUBLESHOOTING

• No Sound/Lights from Electronic Toy:

- Check if batteries are inserted correctly.
- Replace with new AA batteries.
- Ensure the power switch is in the 'on' position and volume is adjusted.

• Jumper Not Bouncing Properly:

- Verify that the height adjustment is set correctly for your child's height, allowing their feet to touch the floor.
- Ensure the jumper is on a flat, stable surface.

• Seat Not Rotating Smoothly:

- Check for any obstructions under the seat.
- Ensure the seat is properly installed in the activity tray.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	38"L x 38"W x 33"H (96.5 cm L x 96.5 cm W x 83.8 cm H)
Item Model Number	13062
Maximum Weight Recommendation	25 Pounds (11 kg)
Maximum Height Recommendation	30 Inches (76 cm)
Age Range	6 - 12 months
Material Type	Plastic, Metal, Fabric (40% Metal, 50% Plastic, 10% Fabric)
Batteries Required	2 AA batteries (not included)
Country/Region of Origin	China

9. WARRANTY AND SUPPORT

For detailed warranty information, troubleshooting guides, and customer support, please refer to the official user manual PDF available online:

[Download Full User Manual
\(PDF\)](#)

You may also visit the Bright Starts official website or contact their customer service for further assistance.