

[Manuals.plus](#) /

> [arungo](#) /

> arungo Portable CD Player User Manual

arungo KC-708

arungo Portable CD Player Instruction Manual

Model: KC-708

1. INTRODUCTION

Thank you for purchasing the arungo Portable CD Player. This device is designed to provide high-quality audio playback from various sources, including CDs and USB drives, with the convenience of portability and a long-lasting rechargeable battery. Please read this manual carefully to ensure proper use and maintenance of your new CD player.

2. PACKAGE CONTENTS

Please check the package for the following items:

- arungo Portable CD Player (Model: KC-708)
- USB Charging Cable
- 3.5mm AUX Cable
- Headphones (1 pair)
- User Manual



Image: arungo Portable CD Player with all included accessories.



Image: Overview of the arungo CD player and its accessories as packaged.

3. PRODUCT FEATURES

- **Super Long Battery Life:** Equipped with a built-in large capacity rechargeable lithium battery, providing up to 12

hours of continuous playback on a single full charge. Charging is convenient via the included USB cable.

- **Dual Headphones Hole Design:** Features two 3.5mm headphone jacks, allowing two users to listen simultaneously and share the audio experience. One pair of headphones is included.
- **Multiple Formats Supported:** Compatible with various audio formats including CD, MP3, WMA, CD-R, and CD-RW discs. It also supports reading audio files from a USB U-drive (up to 16GB).
- **Anti-skip and Shockproof:** Advanced anti-skip protection ensures uninterrupted music playback, with up to 60 seconds for standard CDs and 120 seconds for MP3 CDs.
- **Car Connectivity:** Includes a 3.5mm AUX cable for easy connection to car audio systems or other external audible devices, enhancing your listening experience on the go. Ensure your car has a compatible 3.5mm AUX port.
- **LED Display & Touch Buttons:** Features a clear LED display for track information and intuitive touch-sensitive buttons for easy operation.



Super Anti-shock

Shockproof time:

CD-60 seconds

MP3-120 seconds

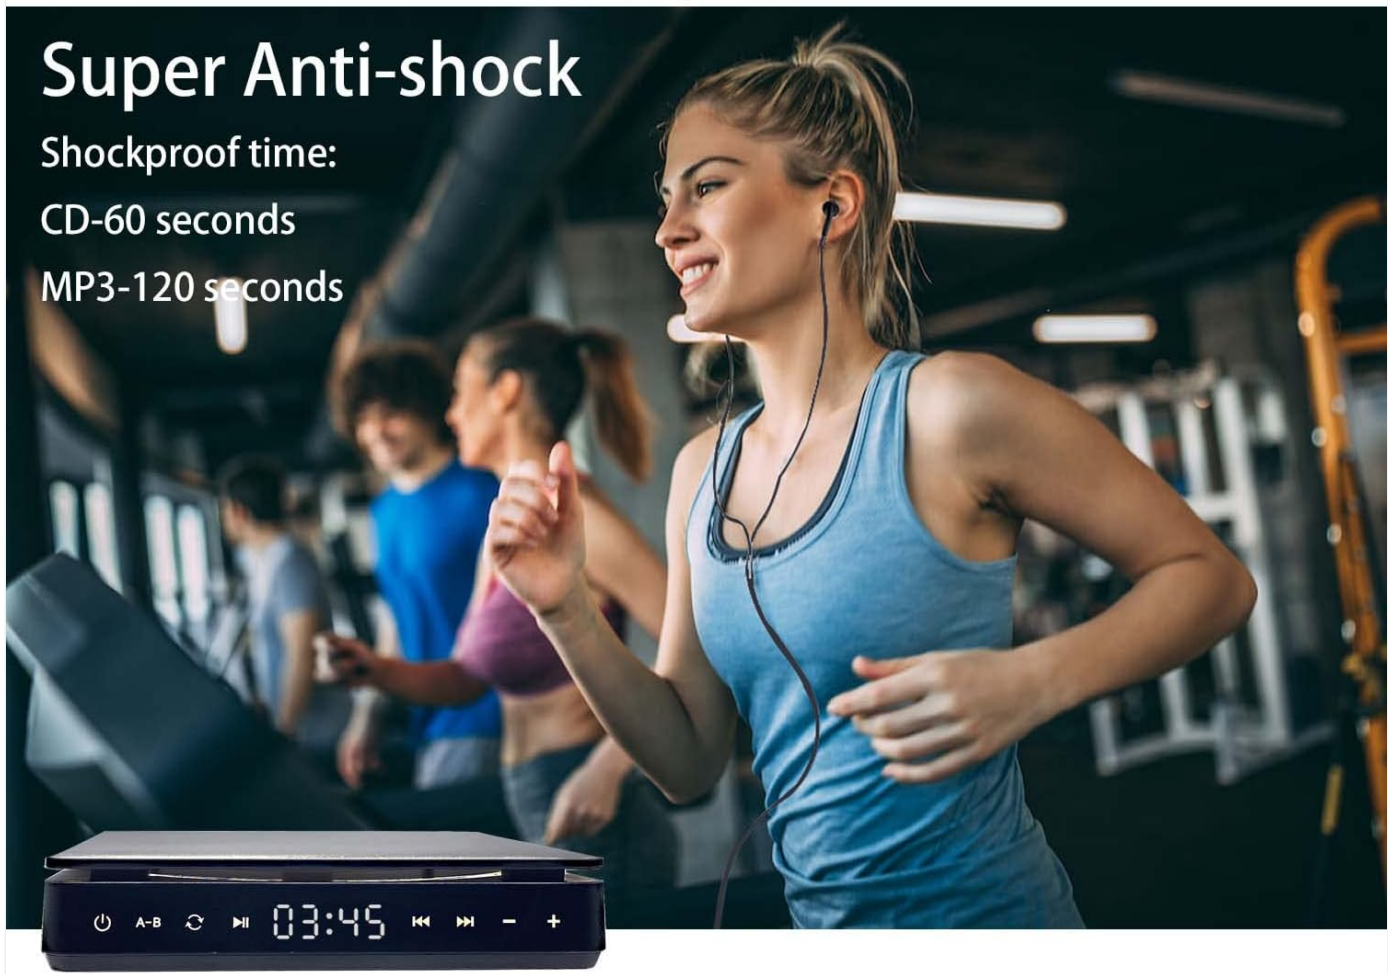


Image: Supported formats and anti-shock capabilities.

Touch sensitive buttons, easier to operate

After setting done, push the KEY HOLD to ON for avoiding touch by mistake.
Push the KEY HOLD to OFF is able to adjust it again.



Image: Demonstrating the touch-sensitive buttons.

3.5mm Dual Headphone Holes Design

Enjoy your favorite music with your family or friend at the same time.

*Only 1 headphone included



Image: Dual headphone jack feature.

Connect to Car Audio via AUX cable for a better acoustic enjoyment.



Image: Connecting the CD player to a car's audio system.



Rechargeable Battery

Built in large capacity battery, lasting for 12 hours.



4.5h

Charging Time

12h

Playing Time

Type-C

USB Charging

Image: Battery life and charging details.

Portable CD Player

2 modes available: CD playback mode or USB playback mode

Long press the play/pause button to switch modes

USB Files Format: MP3, WMA (Support up to 16GB)



Image: Dimensions and playback modes of the portable CD player.

4. SETUP

4.1 Charging the Device

Before first use, fully charge the CD player. Connect the included USB charging cable to the player's charging port and the other end to a USB power adapter (not included), power bank, car charger, or computer USB port. The LED indicator will show charging status.

4.2 Inserting a CD

1. Gently open the CD compartment lid.
2. Place the CD onto the center spindle with the label side facing up. Ensure the CD is securely seated.
3. Close the CD compartment lid firmly until it clicks.

4.3 Connecting Headphones or External Audio

- For personal listening, plug the included headphones into either of the 3.5mm headphone jacks.
- To connect to car audio or other external speakers, use the provided 3.5mm AUX cable. Plug one end into a headphone jack on the CD player and the other end into the AUX input of your car stereo or external speaker system.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the **Power** button  to turn the player on or off.

5.2 Playback Modes (CD/USB)

The player supports two playback modes: CD-disc and USB-U-drive. Long press the **Play/Pause** button  to switch between these modes.

5.3 Basic Playback Controls

- **Play/Pause:** Press the **Play/Pause** button to start or pause playback.
- **Next Track:** Press the **Next Track** button  to skip to the next track.
- **Previous Track:** Press the **Previous Track** button  to go to the beginning of the current track or the previous track.
- **Volume Control:** Use the **+** and **-** buttons to adjust the volume level.

5.4 Key Hold Function

The player features a KEY HOLD switch. When set to ON, it locks the touch buttons to prevent accidental presses. To adjust settings or controls, ensure the KEY HOLD switch is set to OFF.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the optical lens, use a specialized CD lens cleaning kit. Do not use abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Storage:** Store the CD player in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling Discs:** Always handle CDs by their edges. Keep discs clean and free from scratches to ensure optimal playback performance.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not turn on.	Battery is low or depleted.	Charge the player using the USB cable.
Disc skipping or distorted sound.	Disc is dirty, scratched, or damaged. Player is subjected to excessive vibration.	Clean the disc. Try another disc. Ensure the player is on a stable surface or utilize its anti-skip feature.

Problem	Possible Cause	Solution
No sound from headphones/speakers.	Headphones/AUX cable not properly connected. Volume is too low. Incorrect mode selected.	Ensure connections are secure. Increase volume. Verify correct playback mode (CD/USB).
Cannot read USB drive.	USB drive format not supported. USB drive capacity too large.	Ensure USB drive contains MP3/WMA files. Use a USB drive up to 16GB.
Buttons are unresponsive.	KEY HOLD switch is ON.	Set the KEY HOLD switch to OFF.

8. SPECIFICATIONS

Feature	Detail
Model Name	KC-708
Product Dimensions	5.23 x 5.23 x 1.06 inches
Item Weight	1.17 pounds
Battery Type	1 Lithium Polymer battery (included)
Playback Time	Up to 12 hours (after full charge)
Supported Disc Formats	CD, MP3, WMA, CD-R, CD-RW
USB Support	U-drive up to 16GB (MP3, WMA files)
Anti-Skip Protection	60 seconds (CD), 120 seconds (MP3 CD)
Connectivity	USB, 3.5mm AUX
Color	Black

9. WARRANTY AND SUPPORT

Your arungo Portable CD Player is covered by a manufacturer's warranty. For detailed warranty information, product support, or technical assistance, please refer to the contact information provided on the product packaging or visit the official arungo website. Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question