



[Manuals.plus](#) /

› [EKEMOND](#) /

› EKEMOND G769 9-Pad Electronic Drum Set User Manual

EKEMOND G769

EKEMOND G769 9-Pad Electronic Drum Set User Manual

Model: G769

INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your EKEMOND G769 9-Pad Electronic Drum Set. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.



Image: The EKEMOND G769 9-Pad Electronic Drum Set, showing the main drum pad, drumsticks, and foot pedals.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x EKEMOND 9-Pad Electronic Drum Pad
- 1 x Micro USB Power Cable
- 1 x Audio Cable
- 2 x Foot Pedals (for Bass and Hi-Hat functions)
- 2 x Wooden Drumsticks
- 1 x Instruction Manual (this document)

PRODUCT OVERVIEW

The EKEMOND G769 features 9 distinct drum pads, offering a comprehensive drumming experience. It includes various drum sounds, demo songs, and rhythms for versatile play.

9 real drum sound types



- | | | |
|------------------|------------|-------------|
| 1 CRASH CYMBAL | 4 RIDE | 7 BASS DRUM |
| 2 CRASH CYMBAL 2 | 5 SNARE | 8 LOW TOM |
| 3 HI-HAT | 6 HIGH TOM | 9 FLOOR TOM |

Image: A diagram illustrating the 9 drum pads and their corresponding sounds: Crash Cymbal 1, Crash Cymbal 2, Hi-Hat, Ride, Snare, High Tom, Bass Drum, Low Tom, and Floor Tom.

Control Panel Features:



Image: A close-up view of the control panel, showing buttons for DEMO, Volume Up/Down (V+/V-), Rhythm (RHY), Tone Up/Down (T+/T-), Record (REC), Play, and Start/Stop.

- **DEMO:** Play built-in demonstration songs.
- **V+/V-:** Adjust the volume level.
- **RHY:** Select from 9 different rhythm patterns.
- **T+/T-:** Change between 7 different drum tones (timbres).
- **REC:** Initiate recording of your drumming performance.
- **PLAY:** Play back recorded performances.
- **START/STOP:** Start or stop rhythms and demo songs.

SETUP

Powering the Device:

The drum set is equipped with a built-in rechargeable battery. To charge or power the device:

1. Connect the Micro USB power cable to the "USE 5V" port on the drum set.
2. Connect the other end of the USB cable to a DC 5V 2A power adapter (not included) or a compatible USB power source.
3. The "CHARGE" indicator light will illuminate during charging. A full charge provides up to 10 hours of playtime.

Built in Rechargeable Battery

Charge 2 hours can be used up to 10 hours

10
Hours
Playtime



Image: The electronic drum set connected to a wall adapter via a USB cable, illustrating the charging process and indicating 10 hours of playtime.

Connecting Pedals and Audio:

Foldable and Portable



Image: A detailed view of the drum set's connectivity ports, including USB/DC 5V, pedal inputs, earphone jack, and MP3 (AUX) input.

- **Foot Pedals:** Connect the two foot pedals to their designated ports on the drum set. These pedals control the Bass Drum and Hi-Hat functions.
- **Headphones:** For private practice, connect 3.5mm headphones to the "Earphone" jack.
- **External Audio (AUX In):** To play along with external music, connect an audio source (e.g., smartphone, MP3 player) using the provided audio cable to the "MP3" (AUX) input.

OPERATING INSTRUCTIONS

Basic Playback:

1. Turn on the drum set using the ON/OFF switch.
2. Use the drumsticks to strike the pads and the foot pedals to activate the bass drum and hi-hat sounds.
3. Adjust the volume using the V+ and V- buttons. The drum set features built-in stereo speakers.

Built-in Speakers Stereo Sound Surround



Image: A child playing the electronic drum set, highlighting the built-in stereo speakers for sound output.

Changing Tones and Rhythms:

- Press the **T+** or **T-** buttons to cycle through the 7 available drum tones (timbres).
- Press the **RHY** button to select from 9 different rhythm patterns. Press **START/STOP** to begin or end the rhythm.

Using Demo Songs:

- Press the **DEMO** button to play one of the 10 built-in demonstration songs.
- Press **DEMO** again to cycle through the songs.
- Press **START/STOP** to stop the demo song.

Recording and Playback:

1. Press the **REC** button to start recording your drumming. The "REC" indicator light will illuminate. The device supports up to 180 seconds of recording.
2. Play your desired drum pattern.
3. Press the **REC** button again to stop recording.
4. Press the **PLAY** button to listen to your recorded performance.

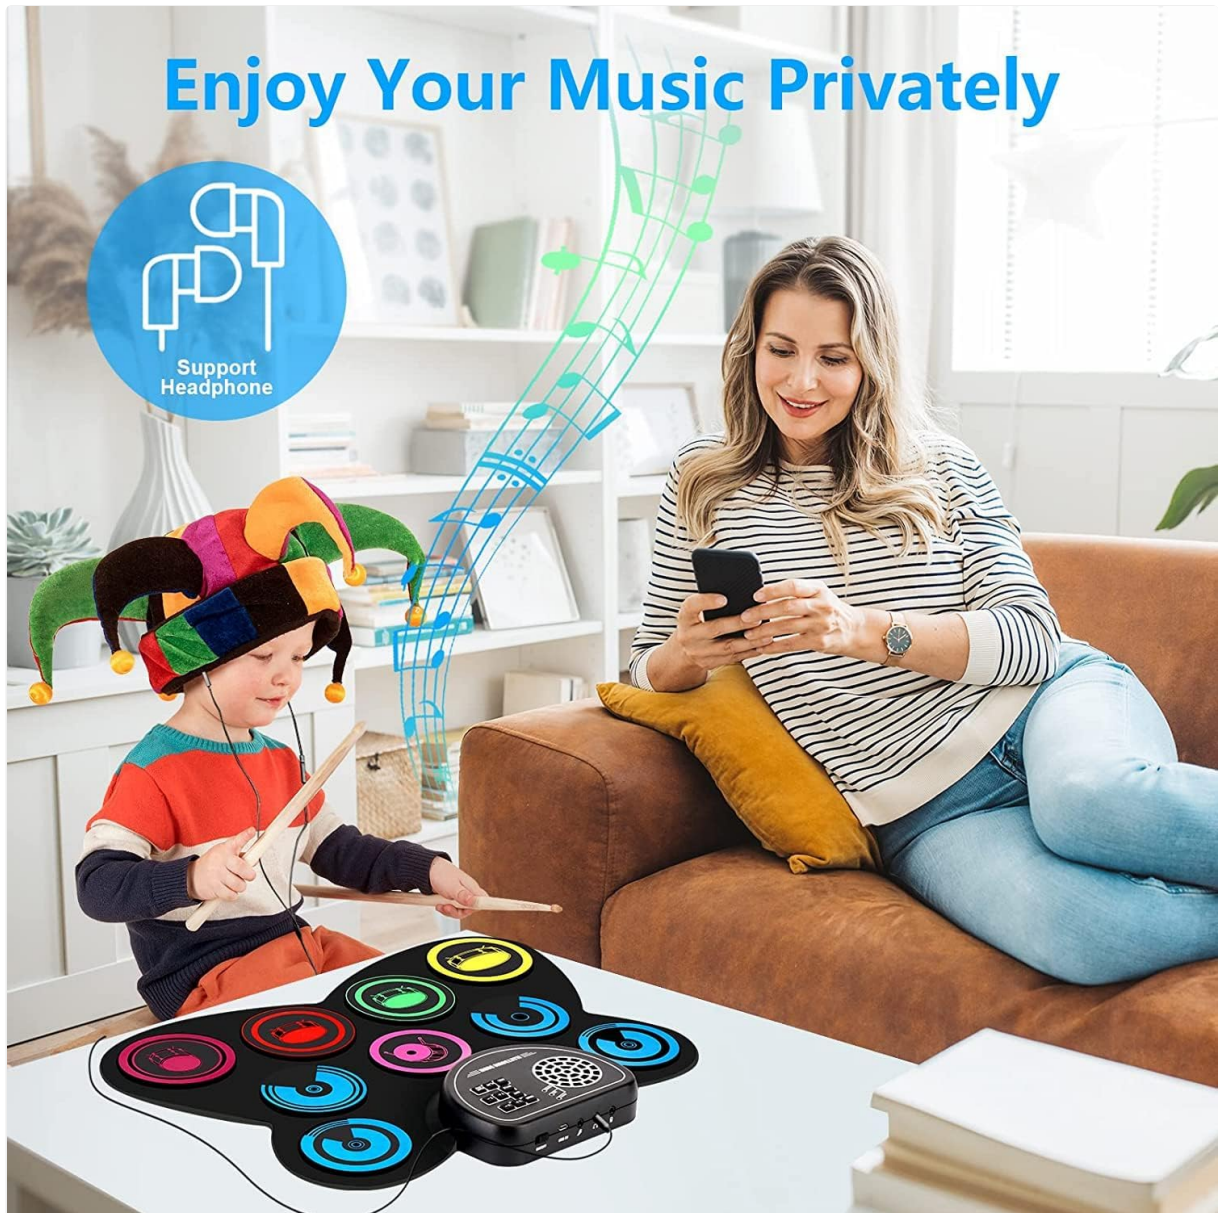


Image: A person wearing headphones while playing the electronic drum set, demonstrating the private listening feature.

Connect 3.5mm headphones to the dedicated headphone jack to practice without disturbing others. The internal speakers will automatically mute when headphones are connected.

MAINTENANCE

- **Cleaning:** Wipe the drum pad and control panel with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid abrasive cleaners or solvents.
- **Storage:** When not in use, roll up the silicone drum pad gently. Store it in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the rolled-up pad.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in constant use.
- **Handling:** The drum pad is made of silicone and is flexible, but avoid sharp objects or excessive force that could puncture or tear the material.

- **Connectivity:** Micro USB (Power/Charging), 3.5mm Headphone Jack, 3.5mm AUX Input
- **Power:** Built-in Rechargeable Lithium Polymer Battery, DC 5V 2A (adapter not included)
- **Playtime:** Up to 10 hours per charge
- **Material:** Silicone
- **Dimensions:** 15.75 x 12.6 x 1.18 inches (L x W x H)
- **Weight:** Approximately 2.18 pounds (0.99 kg)

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided at the time of purchase or contact the retailer.

For technical support, troubleshooting assistance, or inquiries regarding your EKEMOND G769 Electronic Drum Set, please contact EKEMOND customer service through the retailer's platform or the official EKEMOND website (if available).

Please have your model number (G769) and purchase information ready when contacting support.