

## VINABTY 100024646, 100026240

# VINABTY Voice Search Remote Control User Manual

For Onn Android TV 2K Streaming Stick & 4K FHD Streaming Devices (Models 100024646, 100026240)

## 1. INTRODUCTION

This manual provides detailed instructions for setting up, operating, and maintaining your VINABTY Voice Search Remote Control. This remote is designed as a replacement for Onn Android TV 2K Streaming Stick and 4K FHD Streaming Devices, specifically compatible with models 100024646 and 100026240. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.





**Image 1.1:** Front view of the VINABTY Voice Search Remote Control. This image displays the remote control from the front, showing all its buttons including the power, voice search, navigation, volume, and app shortcut buttons.

## 2. SETUP

---

### 2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.







**Image 2.1:** Back view of the VINABTY Remote Control. This image shows the rear of the remote control, highlighting the battery compartment cover at the bottom.

## 2.2 Pairing the Remote Control

The remote control uses Bluetooth connectivity. It must be paired with your Onn Android TV Streaming Device before first use. If you experience difficulty, ensure your streaming device is powered on and within range.

1. Ensure your Onn Android TV Streaming Device is powered on and connected to your TV.
2. Point the remote control towards your streaming device.
3. Simultaneously press and hold the **"Back"** button (left arrow icon) and the **"Home"** button (house icon) on the remote control for approximately 3-5 seconds.
4. Release the buttons when an indicator light on the remote (if present) flashes or a pairing confirmation message appears on your TV screen.
5. Follow any on-screen prompts to complete the pairing process.

If pairing fails, try replacing the batteries and repeating the steps. Move closer to the streaming device if necessary.

## 3. OPERATING THE REMOTE CONTROL

---

The VINABTY Voice Search Remote Control provides intuitive control over your Onn Android TV Streaming Device. Familiarize yourself with the button layout for seamless navigation.



**Image 3.1:** Angled view of the VINABTY Voice Search Remote Control. This image shows the remote control from an angled perspective, highlighting the ergonomic design and button placement.

### 3.1 Button Functions

- **Power Button (⏻):** Turns your streaming device and/or TV on or off.
- **Input/Source Button (📺):** Switches input sources on your TV.
- **Voice Search Button (Microphone icon):** Activates the voice assistant for commands and searches. Press and hold while speaking.
- **Navigation Pad (Circular):** Use the directional arrows (Up, Down, Left, Right) to navigate menus and content. The center button acts as **OK/Select**.

- **Back Button (↶):** Returns to the previous screen or menu.
- **Home Button (⏴):** Returns to the main home screen of your streaming device.
- **Live TV Button (TV icon):** Accesses live TV content if supported by your streaming device.
- **Volume Up/Down (+/-):** Adjusts the volume of your TV or connected audio device.
- **Mute Button (Speaker with X):** Mutes or unmutes the audio.
- **App Shortcut Buttons (YouTube, Netflix, Disney+, HBO Max):** Provides direct access to these popular streaming applications.

## 3.2 Using Voice Search

The voice search feature allows for quick and convenient control. To use:

1. Press and hold the **Voice Search** button (microphone icon).
2. Speak clearly into the remote control's microphone.
3. Release the button when you have finished speaking.

Examples of voice commands include: "Open Netflix," "Search for action movies," "Play [movie title]," "What's the weather?"

## 4. MAINTENANCE

---

### 4.1 Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's electronics and finish.

### 4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries according to local regulations.

## 5. TROUBLESHOOTING

---

- **Remote not responding:**
  - Check battery orientation and ensure they are fresh.
  - Ensure the remote is within range of the streaming device.
  - Re-pair the remote control following the instructions in Section 2.2.
- **Difficulty pairing:**
  - Ensure your streaming device is fully powered on and not in standby mode.
  - Move any potential sources of interference (e.g., other wireless devices) away from the streaming device and remote.
  - Try restarting your streaming device and then attempting the pairing process again.
- **Voice search not working:**
  - Ensure the remote is properly paired.
  - Check your streaming device's settings to confirm voice assistant features are enabled.

- Speak clearly and hold the voice search button throughout your command.

## 6. SPECIFICATIONS

Feature	Detail
Product Dimensions	5.9 x 1.9 x 0.7 inches
Item Weight	1.44 ounces
Connectivity Technology	Bluetooth
Compatible Devices	Onn Android TV 2K Streaming Stick & 4K FHD Streaming Device (Models 100024646, 100026240)
Battery Type	2 x AAA (not included)
Special Feature	Voice Search, Ergonomic Design

## 7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your original purchase or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.