

[Manuals.plus](#) /

› [PDEEY](#) /

› Charger Replacement for PRETTYCARE Cordless Vacuum Cleaner W100 W200 W300, AC DC Adapter Power Cord 6.6 ft - PDEEY

PDEEY PDEEY-VACUUM-CHARGER

Instruction Manual: PDEEY Replacement Charger

Brand: PDEEY

Model: PDEEY-VACUUM-CHARGER

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your PDEEY AC DC Adapter Power Cord, designed as a replacement charger for specific PRETTYCARE Cordless Vacuum Cleaner models.



Image: The PDEEY replacement charger, featuring the power adapter block and the attached 6.6-foot cable with a barrel tip connector.

2. COMPATIBILITY

This charger is specifically designed for the following PRETTYCARE Cordless Vacuum Cleaner models:

- PRETTYCARE W100 Cordless Vacuum Cleaner
- PRETTYCARE W200 Cordless Vacuum Cleaner
- PRETTYCARE W300 Cordless Vacuum Cleaner

Important: This charger is **NOT** compatible with other vacuum cleaner models, including PRETTYCARE P2. Please verify your vacuum cleaner model before use to ensure proper functionality and prevent damage.

Compatibility



Image: Visual representation of charger compatibility, indicating it works with W100, W200, and W300 models, but not with the P2 model.

3. SETUP AND CONNECTION

Follow these steps to properly connect your replacement charger:

1. **Inspect the Charger:** Before connecting, visually inspect the charger and cable for any signs of damage, such as frayed wires or bent pins. Do not use if damaged.
2. **Locate Charging Port:** Identify the charging port on your PRETTYCARE W100, W200, or W300 cordless vacuum cleaner. This is typically a small circular port.
3. **Connect to Vacuum:** Gently insert the barrel tip connector of the charger into the charging port of your vacuum cleaner. Ensure a snug fit. Do not force the connector.
4. **Connect to Power Outlet:** Plug the AC adapter into a standard 100-240V wall power outlet.
5. **Verify Connection:** Once connected, the vacuum cleaner's charging indicator light (if present) should illuminate, indicating that charging has begun.



Image: The charger positioned next to a compatible vacuum cleaner, showing the barrel connector and the vacuum's charging port area.

4. OPERATING INSTRUCTIONS

The PDEEY replacement charger is designed for straightforward operation:

- **Charging:** Once connected to the vacuum and a power outlet, the charger will automatically begin charging the vacuum's battery.
- **Charging Time:** Refer to your PRETTYCARE vacuum cleaner's original manual for typical charging times. The charger provides consistent power output for efficient charging.
- **Safety Features:** This charger incorporates a built-in smart IC chip with multiple protection features, including:
 - Over voltage protection
 - Over current protection
 - Over-Heat protection

These features help ensure safe charging and protect both the charger and your vacuum cleaner.

- **Cable Length:** The charger features a 6.6-foot (approximately 2-meter) long cable, providing flexibility in placement during charging.

Cable Length



Image: The charger cable stretched out, with a measurement indicating its 6.6-foot length.

5. CARE AND MAINTENANCE

To ensure the longevity and safe operation of your charger, follow these maintenance guidelines:

- **Keep Dry:** Avoid exposing the charger to water, moisture, or high humidity.
- **Clean Gently:** If cleaning is necessary, unplug the charger from the wall and the vacuum. Wipe with a dry, soft cloth. Do not use liquid cleaners or abrasive materials.
- **Store Properly:** When not in use, store the charger in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly winding the cable.
- **Inspect Regularly:** Periodically check the cable and connector for any signs of wear, cuts, or damage. If damage is observed, discontinue use immediately.
- **Avoid Over-Stretching:** Do not pull on the cable to disconnect the charger from the wall or the vacuum. Always grasp the plug or connector directly.

6. TROUBLESHOOTING

If you encounter issues with your charger, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum is not charging.	Charger not properly connected. Power outlet is not active. Vacuum model incompatibility. Damaged charger or vacuum port.	Ensure both ends of the charger are securely plugged in. Test the power outlet with another device. Verify your vacuum model (W100, W200, W300 only). Inspect charger and vacuum port for visible damage. If damaged, discontinue use.
Charger feels hot during use.	Normal operation (slight warmth). Overload or malfunction.	A slight warmth is normal. If it's excessively hot or emitting smoke/smell, unplug immediately. Ensure adequate ventilation around the charger.
Charging indicator light not on.	Loose connection. Vacuum's battery fully charged. Faulty charger or vacuum.	Check all connections. Confirm if the vacuum is already fully charged. If issues persist after checking connections and power, contact customer support.

If the problem persists after attempting these solutions, please contact PDEEY customer support for further assistance.

7. PRODUCT SPECIFICATIONS

- **Model Number:** PDEEY-VACUUM-CHARGER
- **Input:** 100-240V AC, 50/60Hz
- **Output:** DC Barrel Tip Round Connector
- **Cable Length:** 6.6 feet (approximately 2 meters)
- **Connector Type:** Barrel Connector
- **Special Feature:** Built-in smart IC chip for Over voltage, Over current, Over-Heat protection
- **Compatible Devices:** PRETTYCARE Cordless Vacuum Cleaner W100, W200, W300
- **Item Weight:** 3.52 ounces (approximately 100 grams)
- **Package Dimensions:** 3.74 x 2.56 x 1.77 inches

8. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your PDEEY replacement charger, please contact the manufacturer directly. Refer to the product packaging or the PDEEY official website for contact details.

You can also visit the [PDEEY Store on Amazon](#) for more information.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question